


# Maytag MDG3757AWW 03 - CONTROL PANEL & TOP

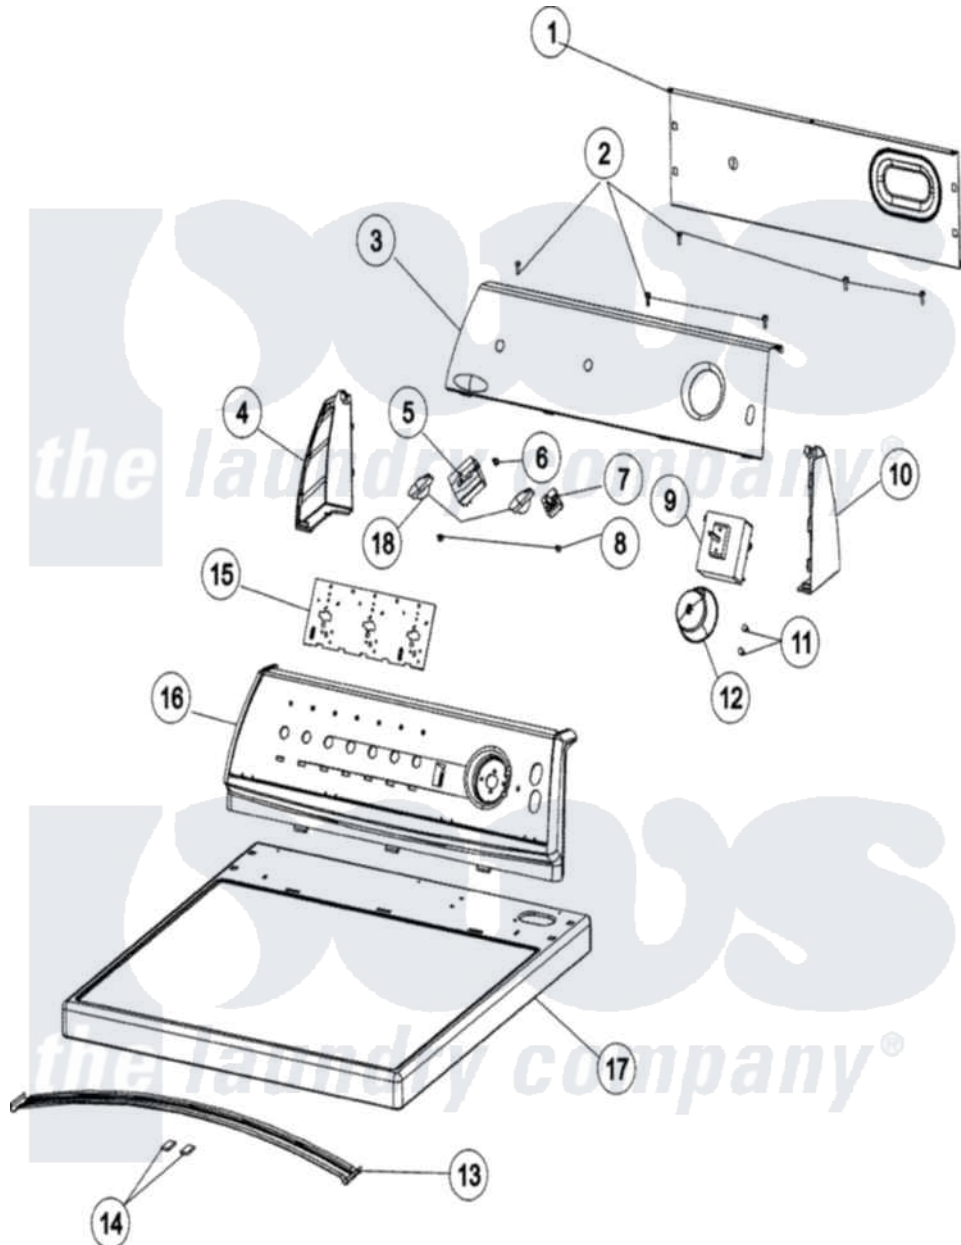

Maytag Residential Maytag MDG3757AWW Dryer Parts Parts Diagram 03 - CONTROL PANEL & TOP  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">37001233</a>			Shield, Backguard
2	<a href="#">21002224</a>			Screw
3	<a href="#">37001205</a>			Facia
4	<a href="#">21001519</a>			Endcap
5	<a href="#">37001165</a>			Switch, Temp - 4 Position
6	501086	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">31001190</a>			Switch, Two Position Rotary
8	<a href="#">31260</a>			Screw, No.8 X 3/8 Ind H
9	<a href="#">37001240</a>			Timer - Dryer
10	<a href="#">21001523</a>			Endcap
11	37001031	<a href="#">3370225</a>		Screw
12	<a href="#">37001229</a>			Knob, Timer And Skirt Assembly
13	500121	<a href="#">510189</a>		Pad Felt
14	56486		Not Available	BRACE, TOP
15	<a href="#">21001603</a>			Shield, Control

16	<a href="#">21001965</a>	Frame, Control Panel, Support	
17	37001232	<a href="#">37001283</a>	Top As Pack
18	<a href="#">21002071</a>	Knob, Selector	
19	<a href="#">53-1639</a>	Buzzer Assembly	

