


# Maytag MDG6000AXW 03 - CONTROL PANEL

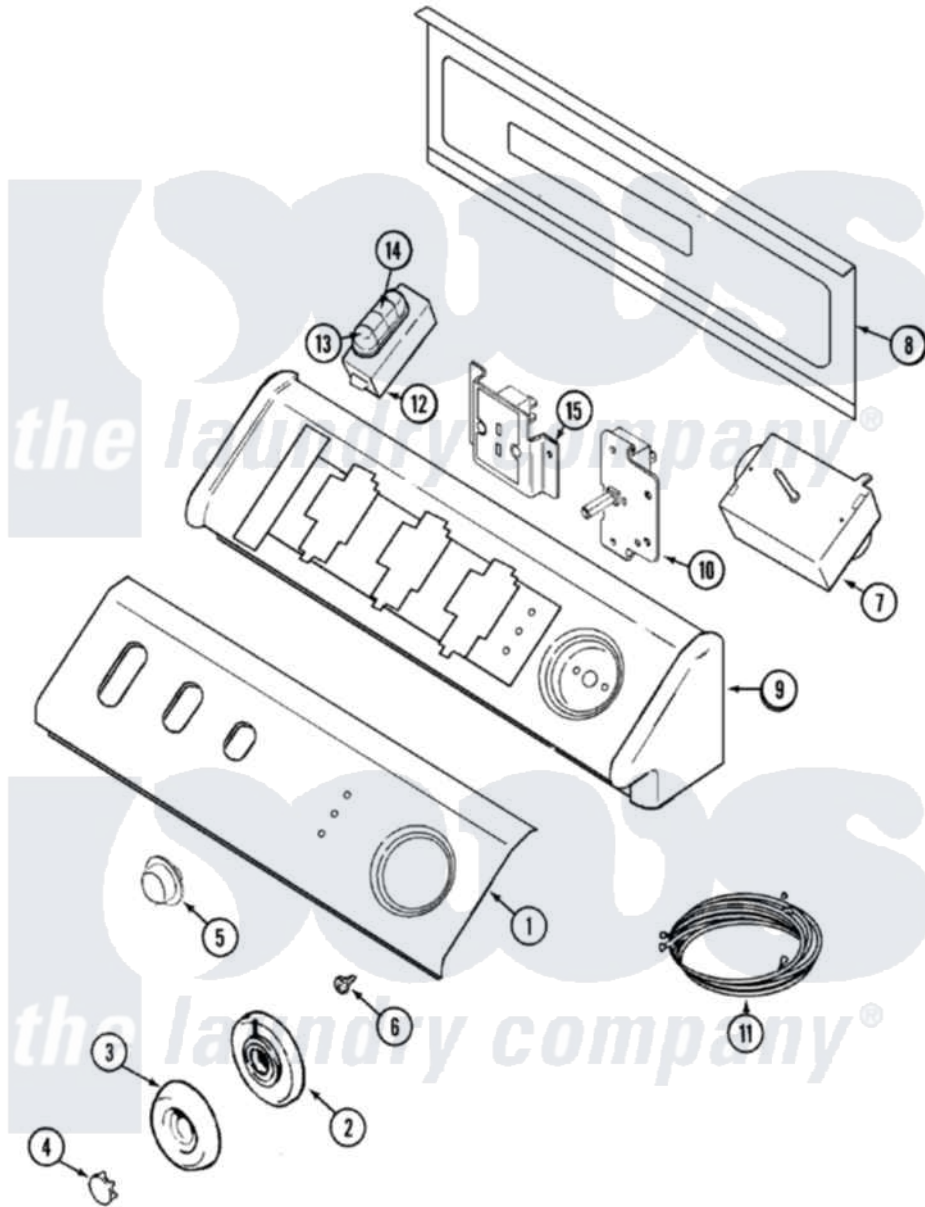

Maytag [Residential Maytag MDG6000AXW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33002328	<a href="#">33002697</a>		Control Panel, Facia / White
"	Y22002339	<a href="#">8534058</a>		Screw
2	<a href="#">33001621</a>			Skirt, Timer Dial
3	<a href="#">22001659</a>			Timer Knob - Grey
4	<a href="#">22001664</a>			Timer Knob Insert/Cap
5	33001619	<a href="#">37001071</a>		Button, Push-To-Start
6	33001690	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">33001932</a>			Timer
8	216423	<a href="#">3370225</a>		Screw
"	22002529		Not Available	CONSOLE BACK PANEL
9	33002286		Not Available	CONSOLE (WHT)
10	33001861	<a href="#">33001618</a>		Switch- PU
11	<a href="#">33001936</a>			Wire Harness, Main
12	<a href="#">33001653</a>			Switch, Temp 4 Pos
13	<a href="#">22001788</a>			Button, Switch
14	<a href="#">22001789</a>			Button, Switch

15 [33002389](#)

Dryness Display Control Note:  
Display, Dryness

16 33002398

Not Available

MANUAL, USE & CARE  
(FRCH)

" [33002391](#)

Manual, Use And Care

