


# Maytag MDG8058BWW 03 - CONTROL PANEL

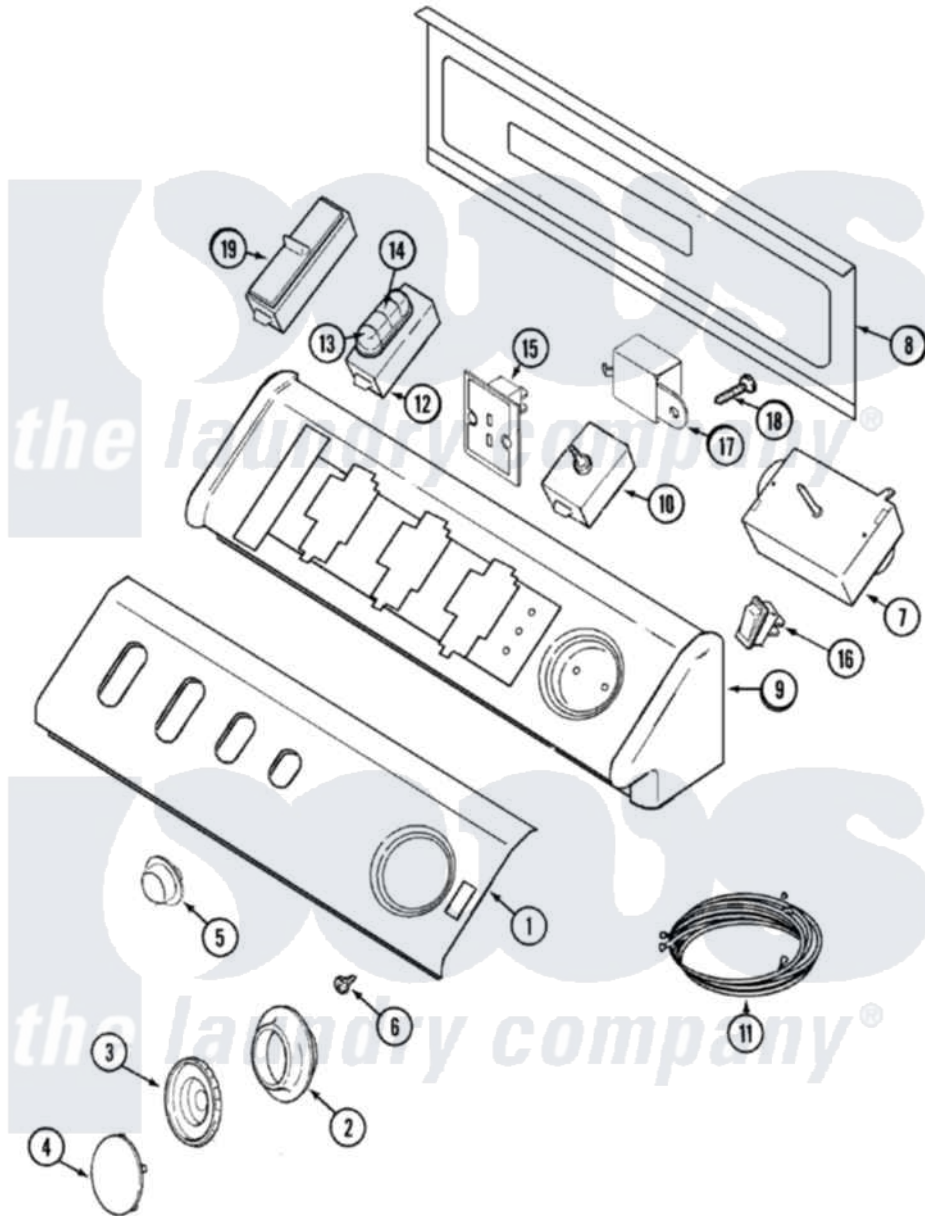

Maytag [Residential Maytag MDG8058BWW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">33002469</a>			Panel, Control
"	Y22002339	<a href="#">8534058</a>		Screw
2	<a href="#">33001621</a>			Skirt, Timer Dial
3	<a href="#">22001659</a>			Timer Knob - Grey
4	<a href="#">22001664</a>			Timer Knob Insert/Cap
5	33001619	<a href="#">37001071</a>		Button, Push-To-Start
6	33001690	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">33002407</a>			Timer
8	22002529		Not Available	CONSOLE BACK PANEL
"	216423	<a href="#">3370225</a>		Screw
9	33002286		Not Available	CONSOLE (WHT)
10	33001861	<a href="#">33001618</a>		Switch- PU
11	<a href="#">33002491</a>			Harness, Main Wire
12	<a href="#">33002468</a>			Switch, Option 4 Pos
13	<a href="#">22001788</a>			Button, Switch
14	<a href="#">22001789</a>			Button, Switch

15	<a href="#">33002389</a>		Dryness Display Control Note: Display, Dryness
16	<a href="#">22002720</a>		Switch, Rocker
17	<a href="#">33001623</a>		Buzzer, Non-Adjustable
"	33002408	Not Available	BUZZER, LOW VOLUME
18	216423	<a href="#">3370225</a>	Screw
19	<a href="#">33001657</a>		Switch, Temperature
20	<a href="#">33002556</a>		Manual, Use And Care
"	33002471	Not Available	MANUAL, USE AND CARE

