


# Maytag MDG9390AXW 03 - CONTROL PANEL

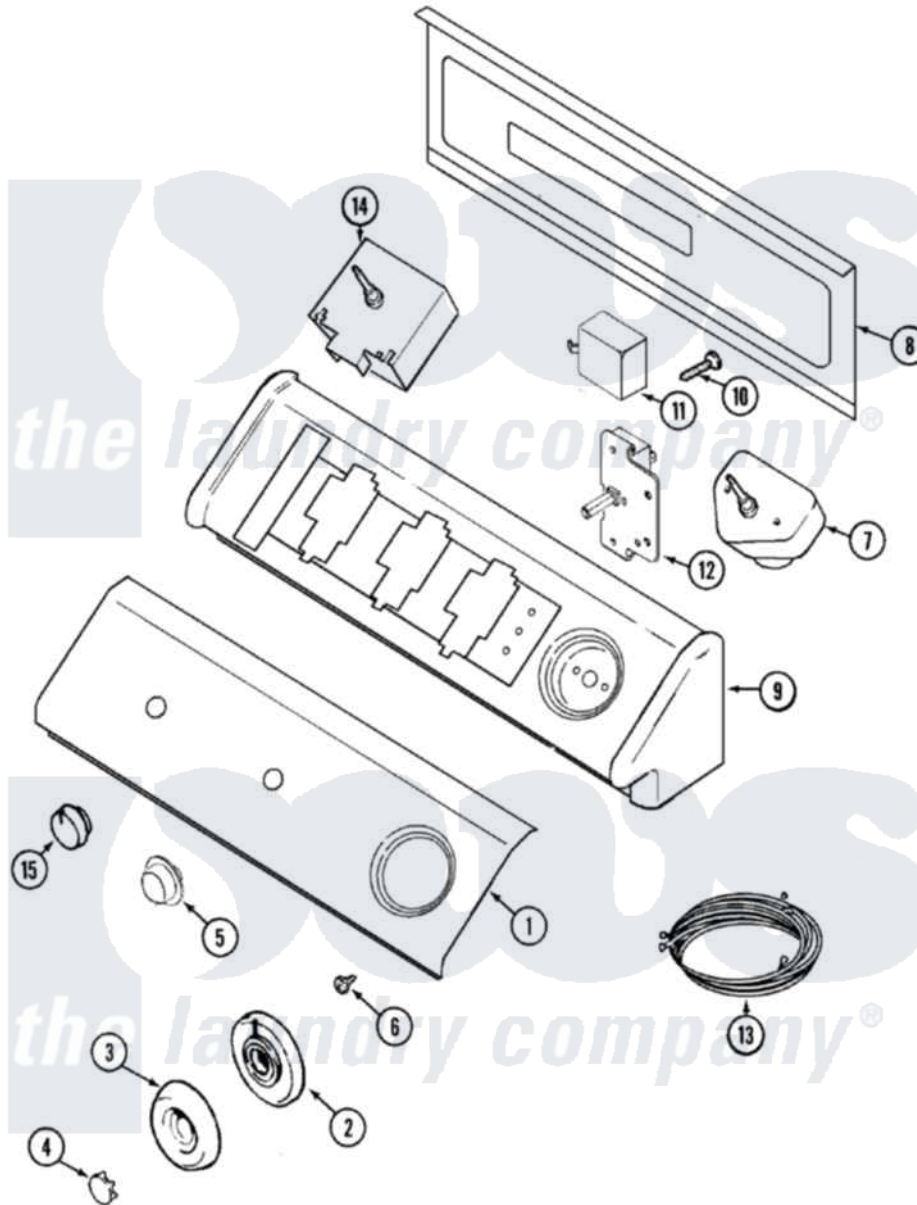

Maytag [Residential Maytag MDG9390AXW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">33002383</a>			Panel, Control
"	Y22002339	<a href="#">8534058</a>		Screw
2	<a href="#">33001621</a>			Skirt, Timer Dial
3	<a href="#">22001659</a>			Timer Knob - Grey
4	<a href="#">22001664</a>			Timer Knob Insert/Cap
5	33001619	<a href="#">37001071</a>		Button, Push-To-Start
6	33001690	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">33001631</a>			Timer
8	216423	<a href="#">3370225</a>		Screw
"	33001806		Not Available	BACK, CONSOLE PANEL
9	22002285		Not Available	CONSOLE (WHT)
10	216423	<a href="#">3370225</a>		Screw
11	<a href="#">33001623</a>			Buzzer, Non-Adjustable
12	33001861	<a href="#">33001618</a>		Switch- PU
13	<a href="#">33001929</a>			Wire Harness, Main
14	<a href="#">33001639</a>			Switch, Temperature

