


# Maytag MDG9606AWQ 03 - CONTROL PANEL

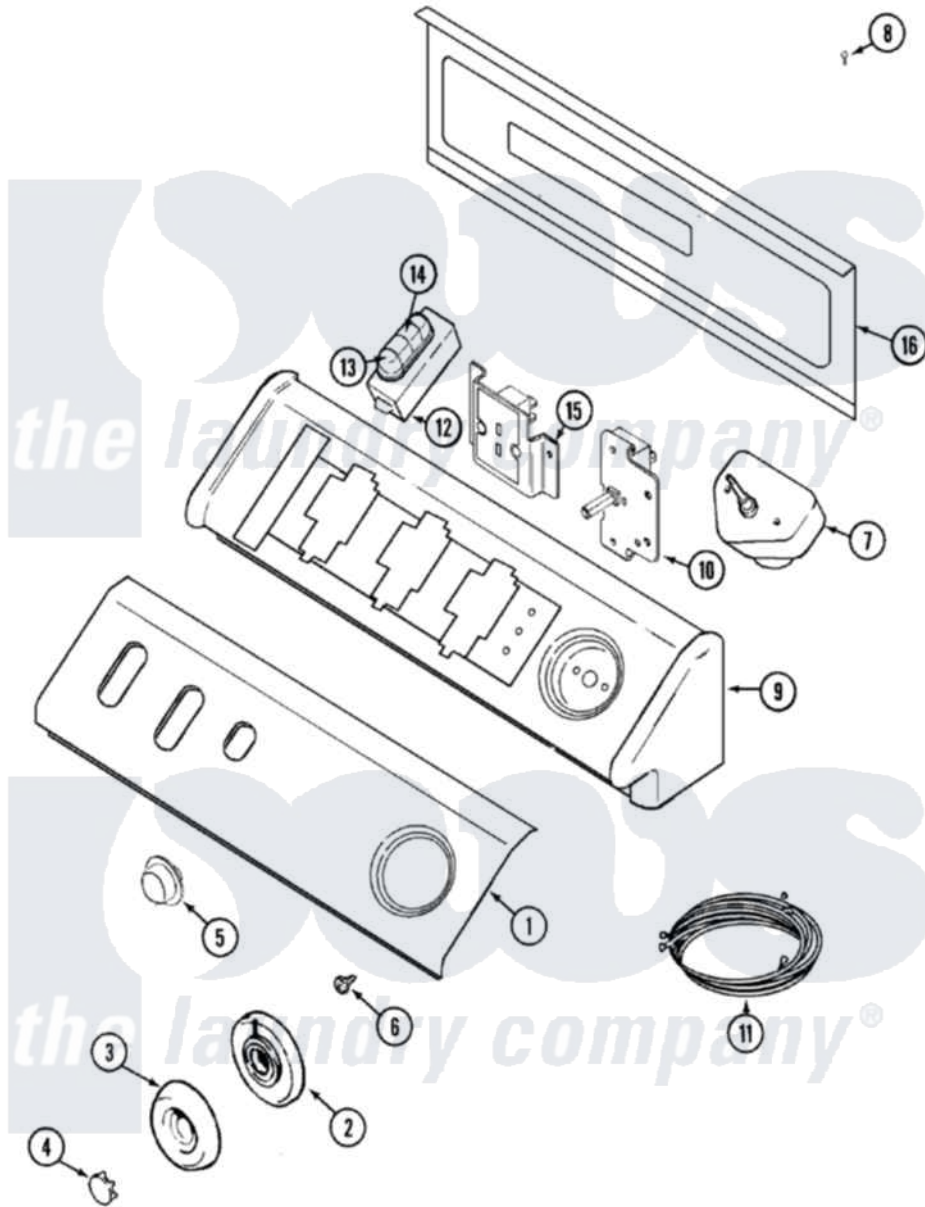

Maytag [Residential Maytag MDG9606AWQ Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

| Item | Original Part Number     | Replaced By              | Status | Part Description                        |
|------|--------------------------|--------------------------|--------|---|
| 1    | <a href="#">33002438</a> |                          |        | Panel, Control                          |
| "    | Y22002339                | <a href="#">8534058</a>  |        | Screw                                   |
| 2    | <a href="#">33002332</a> |                          |        | Skirt, Timer Knob                       |
| 3    | <a href="#">22001659</a> |                          |        | Timer Knob - Grey                       |
| 4    | <a href="#">33002347</a> |                          |        | Timer Knob Insert/Cap                   |
| 5    | 33002324                 | <a href="#">33002435</a> |        | Button, Push-To-Start                   |
| 6    | 33001690                 | <a href="#">90767</a>    |        | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 7    | <a href="#">33001932</a> |                          |        | Timer                                   |
| 8    | 216423                   | <a href="#">3370225</a>  |        | Screw                                   |
| 9    | 33002327                 | <a href="#">37001115</a> |        | Console                                 |
| 10   | 33002356                 | <a href="#">33001618</a> |        | Switch- PU                              |
| 11   | <a href="#">33001936</a> |                          |        | Wire Harness, Main                      |
| 12   | <a href="#">33002392</a> |                          |        | Switch, Temp 4 Pos                      |
| 13   | <a href="#">22002697</a> |                          |        | Button, Switch                          |
| 14   | 22002698                 | <a href="#">22003875</a> |        | Button- SW                              |

|    |          |               |                                |
|----|----------|---------------|--------------------------------|
| 15 | 33002400 | Not Available | BUSINESS DISPLAY CONTROL (BSQ) |
| 16 | 33001806 | Not Available | BACK, CONSOLE PANEL            |
| 17 | 33001935 | Not Available | MANUAL, USE & CARE (FRENCH)    |
| "  | 33002450 | Not Available | MANUAL, USE & CARE (SPANISH)   |
| "  | 33001934 | Not Available | MANUAL, USE & CARE             |

