


Maytag MDG9706AWW 03 - CONTROL PANEL

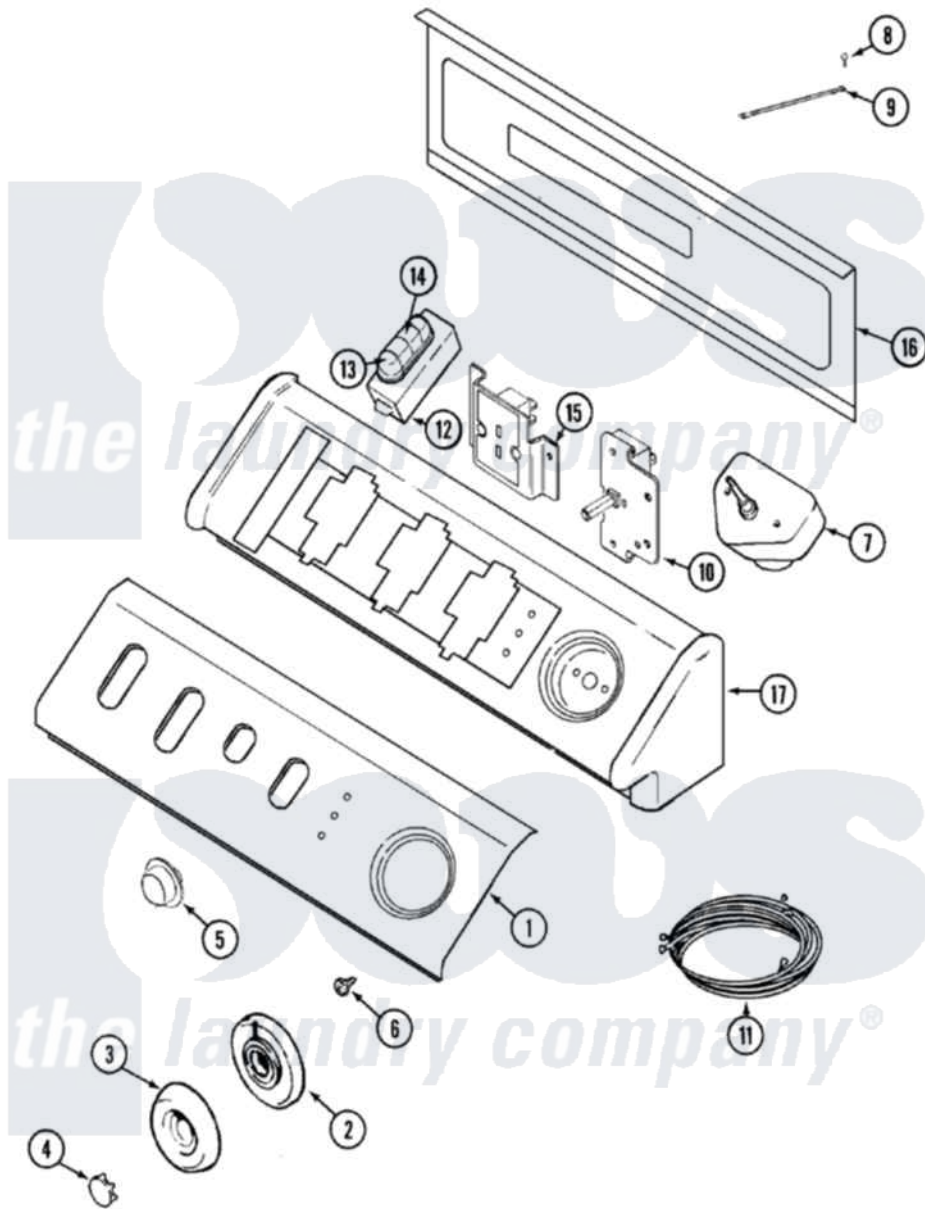

Maytag [Residential Maytag MDG9706AWW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33001930	33002564		Panel, Control
"	Y22002339	8534058		Screw
2	33001621			Skirt, Timer Dial
3	22001659			Timer Knob - Grey
4	22001664			Timer Knob Insert/Cap
5	33001619	37001071		Button, Push-To-Start
6	33001690	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	33001932			Timer
8	210186	3370225		Screw
9	33001859		Not Available	WIRE, GROUND
10	33001861	33001618		Switch- PU
11	33001936			Wire Harness, Main
12	33001653			Switch, Temp 4 Pos
13	22001788			Button, Switch
14	22001789			Button, Switch
				Drum Display Control Note:

15	33001661	33002389	Dryness Display Control Note. Display, Dryness	
16	33001806		Not Available	BACK, CONSOLE PANEL
"	216423	3370225		Screw
17	22002285		Not Available	CONSOLE (WHT)
18	33001934		Not Available	MANUAL, USE & CARE

