


# Maytag MDG9766AXW 03 - CONTROL PANEL

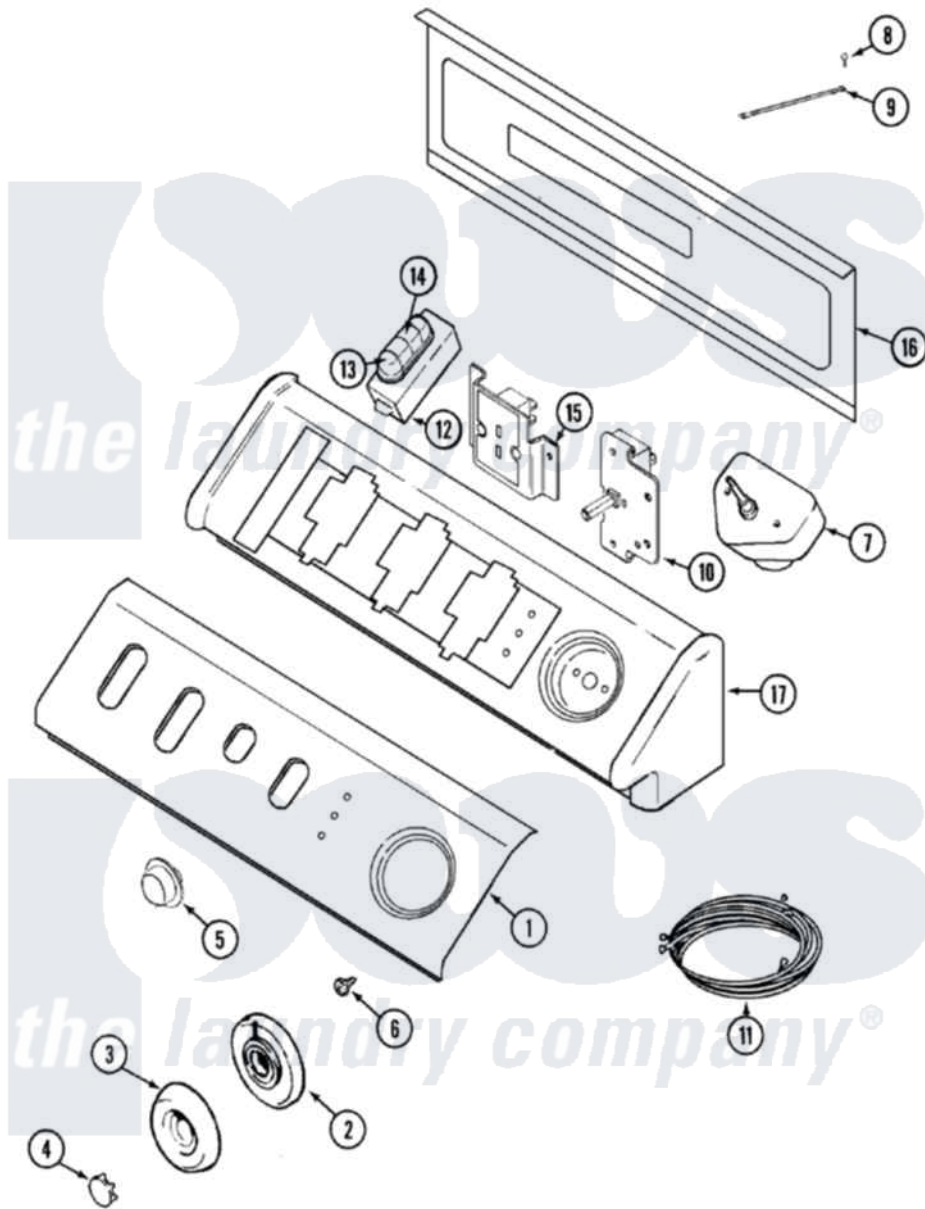

Maytag [Residential Maytag MDG9766AXW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y22002339	<a href="#">8534058</a>		Screw
"	33002174	<a href="#">33002564</a>		Panel, Control
2	<a href="#">33001621</a>			Skirt, Timer Dial
3	<a href="#">22001659</a>			Timer Knob - Grey
4	<a href="#">22001664</a>			Timer Knob Insert/Cap
5	33001619	<a href="#">37001071</a>		Button, Push-To-Start
6	33001690	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">33001932</a>			Timer
8	210186	<a href="#">3370225</a>		Screw
9	33001859		Not Available	WIRE, GROUND
10	33001861	<a href="#">33001618</a>		Switch- PU
11	<a href="#">33001936</a>			Wire Harness, Main
12	<a href="#">33001653</a>			Switch, Temp 4 Pos
13	<a href="#">22001788</a>			Button, Switch
14	<a href="#">22001789</a>			Button, Switch
				Drum Display Control Note:

15	33001661	<a href="#">33002389</a>	Dryness Display Control Note. Display, Dryness	
16	33001806		Not Available	BACK, CONSOLE PANEL
"	216423	<a href="#">3370225</a>		Screw
17	22002285		Not Available	CONSOLE (WHT)
18	16009265		Not Available	MANUAL, USE & CARE (FCH)
"	16009264		Not Available	MANUAL, USE & CARE

