


Maytag MFR18MCAAS 14 - SOAP BOX & TOP COVER ASSY. (SERIES 11)

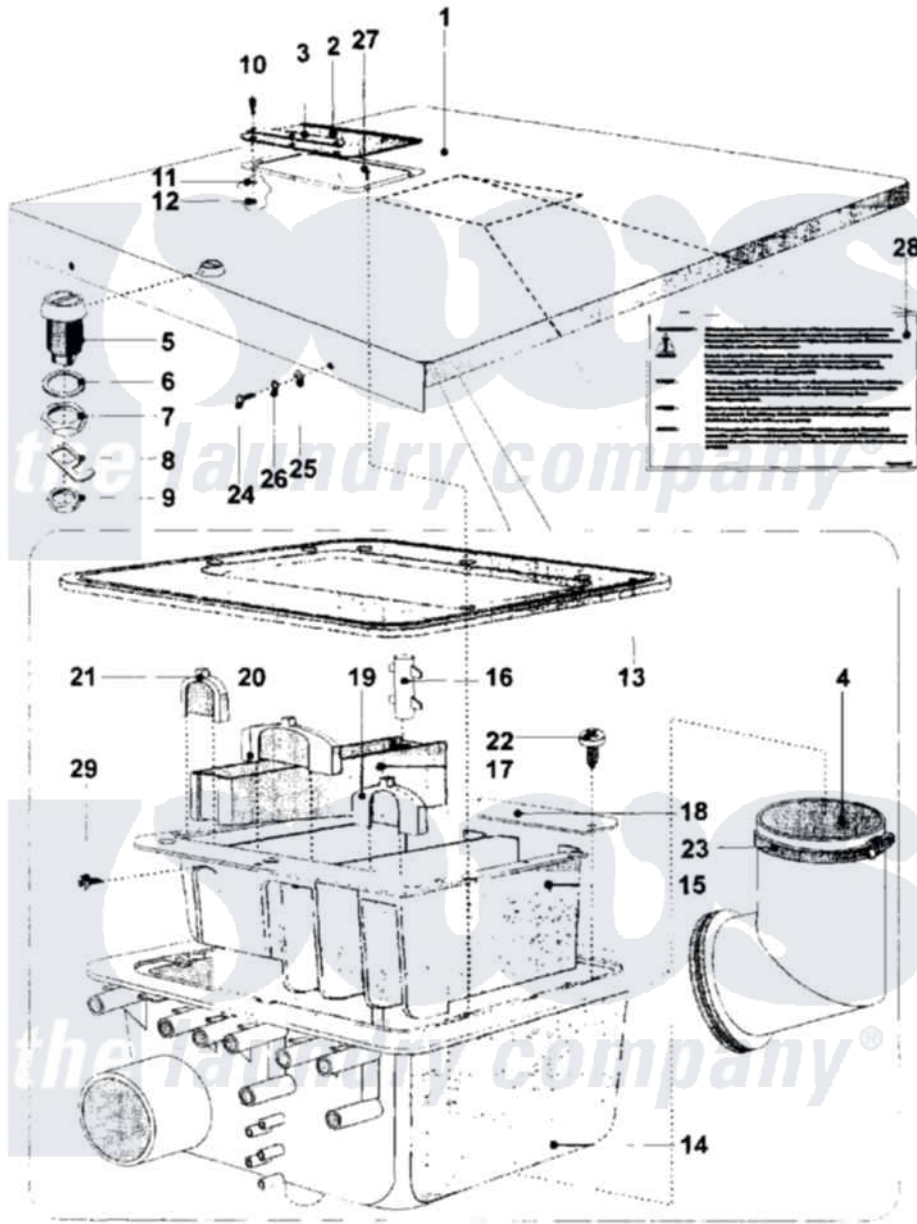

Maytag Residential Maytag MFR18MCAAS Washer Parts Parts Diagram 14 - SOAP BOX & TOP COVER ASSY. (SERIES 11)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	23003315			Cover, Soap Hopper
002	23001003			Rubber Cover, Soap Box
003	23002893			Lath, Rubber Cover Soap Hopper
004	23001005			Rubber Hose, Soap Box
005	23001006			Lock, Top Panel
006	23001007			Washer M21x27x1
007	23001008			Nut, Lock
008	23001009			Hook, Lock
009	23001011			Nut
010	23001012			Screw
011	23001636	23002674		Spring, Lock Washer
012	23002652			Nut
013	23001015			Rubber Seal, Soap Box
014	23001016			External Soap Hopper
015	23001017			Soap Hopper Insert

016	23001018		Syphon Hose
017	23001019		Fabric Softner Insert
018	23001020		Insert Retainer
019	23001021		Prewash Diverter
020	23001022		Mainwash Diverter
021	23001021		Prewash Diverter
022	23001024	23003782	Screw 3 Stainless Steel Lu
023	23001025		Clamp, Hose
024	23002461		Screw
025	23001027		Washer
026	23001734	23002425	Locker Washer M6
027	23002894	23003484	Screw
028	NLA	Not Available	LABEL (SERV. WARNING)
029	23002318		Screw, Pan Head

