


Maytag MFR50PCATS 18 - SOAP BOX & TOP COVER ASSEMBLY(SERIES 11)

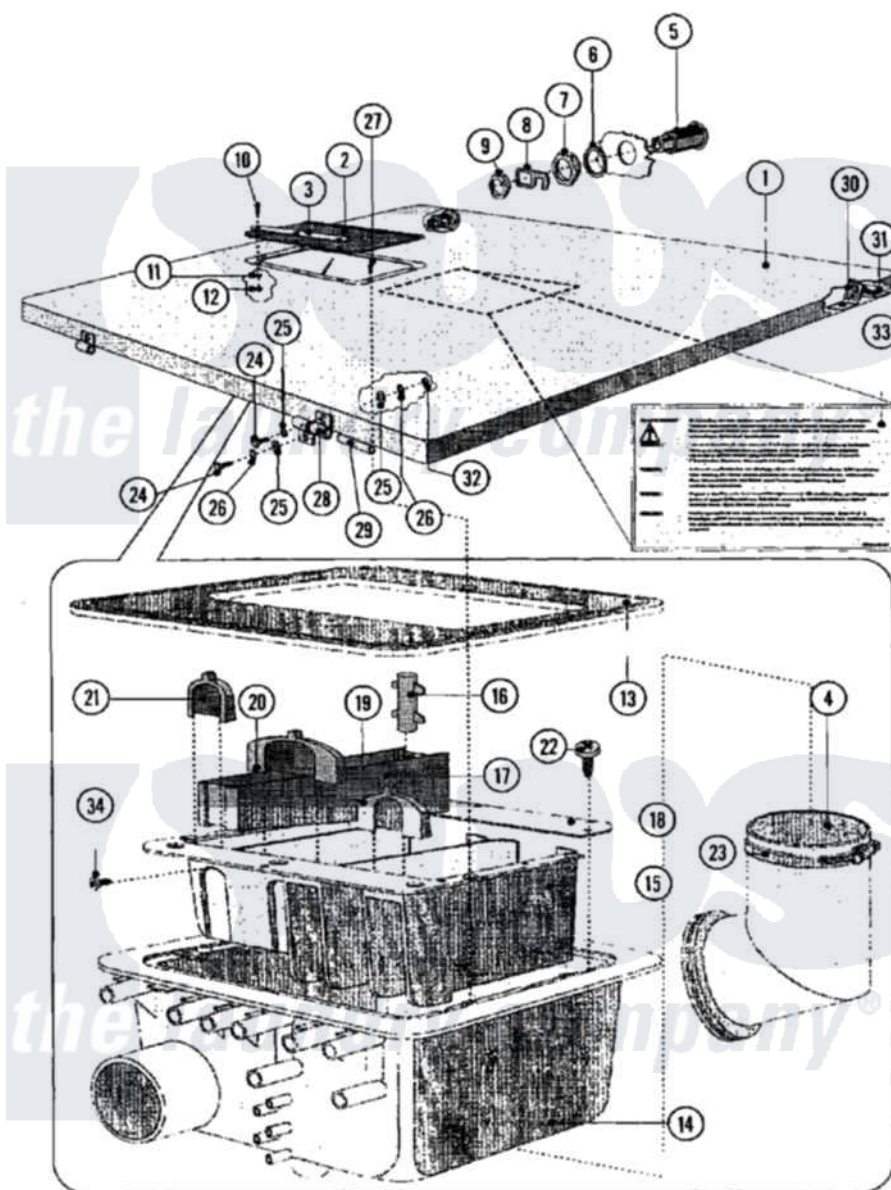

Maytag Residential Maytag MFR50PCATS Washer Parts Parts Diagram 18 - SOAP BOX & TOP COVER ASSEMBLY(SERIES 11)

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	23002968	23001002		Cover, Top
002	23001003			Rubber Cover, Soap Box
003	23002893			Lath, Rubber Cover Soap Hopper
004	23001005			Rubber Hose, Soap Box
005	23001006			Lock, Top Panel
"	23002673			Key-Top Panel
006	23001007			Washer M21x27x1
007	23001008			Nut, Lock
008	23001009			Hook, Lock
"	23001010			Hook, Lock
009	23001011			Nut
010	23001012			Screw
011	23001636	23002674		Spring, Lock Washer
012	23002652			Nut

013	23001015		Rubber Seal, Soap Box
014	23001016		External Soap Hopper
015	23001017		Soap Hopper Insert
016	23001018		Syphon Hose
017	23001019		Fabric Softner Insert
018	23001020		Insert Retainer
019	23001021		Prewash Diverter
020	23001022		Mainwash Diverter
021	23001023		Fabric Softner Diverter
022	23001024	23003782	Screw 3 Stainless Steel Lu
023	23001025		Clamp, Hose
024	23002462		Screw Lu
025	23001027		Washer
026	23002756		Lockwasher
027	23002894	23003484	Screw
028	23001030		Hinge, Top Cover
029	23001031		Shaft, Hinge
030	23001032		Spring Clip
031	23001033		Rivets, Blind Lu
032	23002436	Not Available	NUT (M6)
033	23001550		Sticker, Service Warning
034	NLA	Not Available	SCREW, SLOTTED (PAN HEAD)

