


Maytag MGD5630TQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: MGD5630TQ1
(Designer White)

29" GAS DRYER

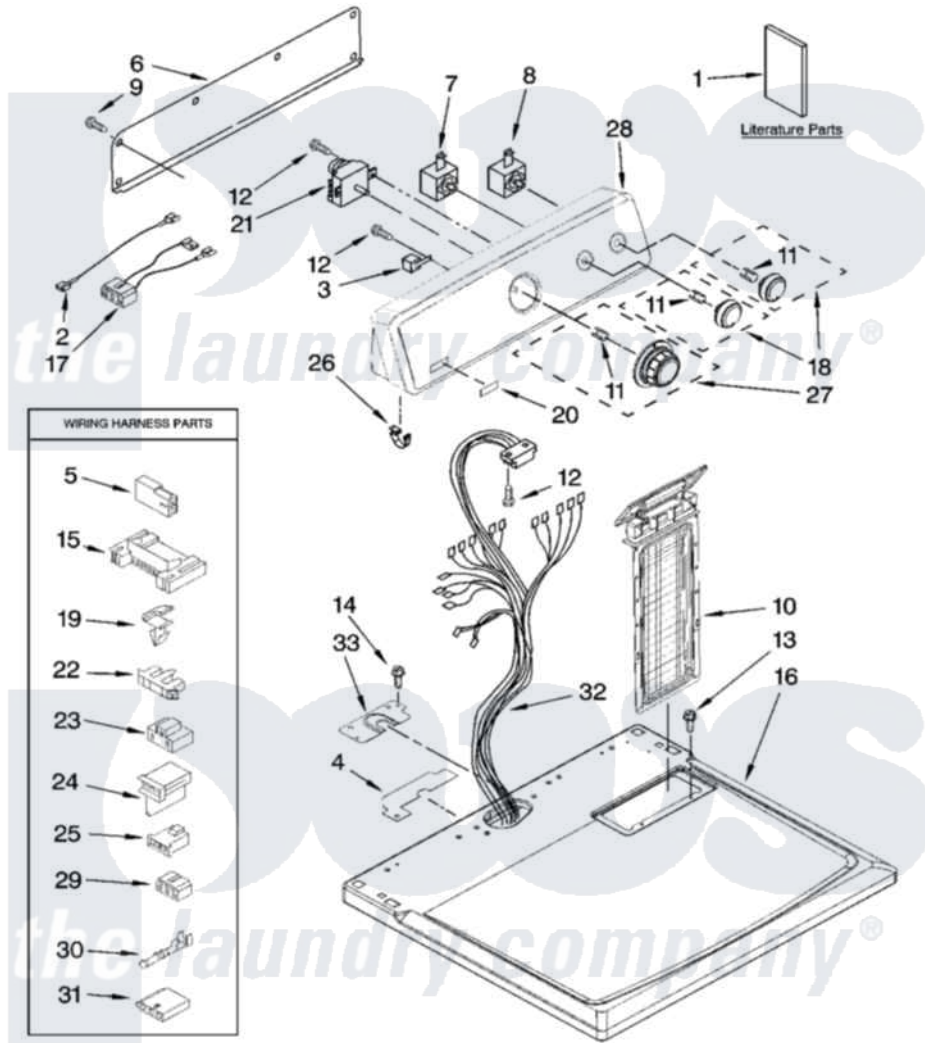

7-07 Litho in U.S.A.(LT)

1

Part No. W10153981 Rev. A

Maytag [Residential Maytag MGD5630TQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10088775		Not Available	Use & Care Guide
"	8576817		Not Available	Wiring Diagram
"	W10089170		Not Available	Sheet, Cycle Feature
2	W10113080			Wire, Jumper
3	694419			Mini-Buzzer
4	W10112603			Seal, Harness
5	717252			Receptacle, Terminal
6	W10112577			Panel, Rear Console
7	3399640			Switch, Rotary
8	W10117655			Switch, Push-To-Start
9	693995			Screw, Hex Head
10	8565972			Screen, Lint
11	8536939			Clip, Knob
12	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240		Screw, For Mtg. Service Capacitor

14	337686	Not Available	SCREW, 8-18 X .500
15	3395683		Receptacle, Multi-Terminal
16	W10112597	W10112599	Top
17	W10113107		Wire, Jumper
18	W10110029		Knob, Control
19	3394427		Clip-Harness
20	W10112569	W10203949	Medallion
21	8299765		Timer Assembly
22	3397269		Connector, Timer
23	3401144		Connector
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
26	8312709		Clip-Console
27	W10110030		Timer Knob Assembly
28	W10086732	W10142668	Console
29	3347243		Block, Disconnect
30	94614		Terminal
31	3936144		Do-It-Yourself Repair Manuals
32	W10110992		Harness, Wiring
33	W10112578		Harness, Bracket

