


Maytag MGD9700SQ0 01 - TOP AND CONSOLE PARTS

MAYTAG

TOP AND CONSOLE PARTS

For Model: MGD9700SQ0 (White) MGD9700SB0 (Black)

Gas Dryer

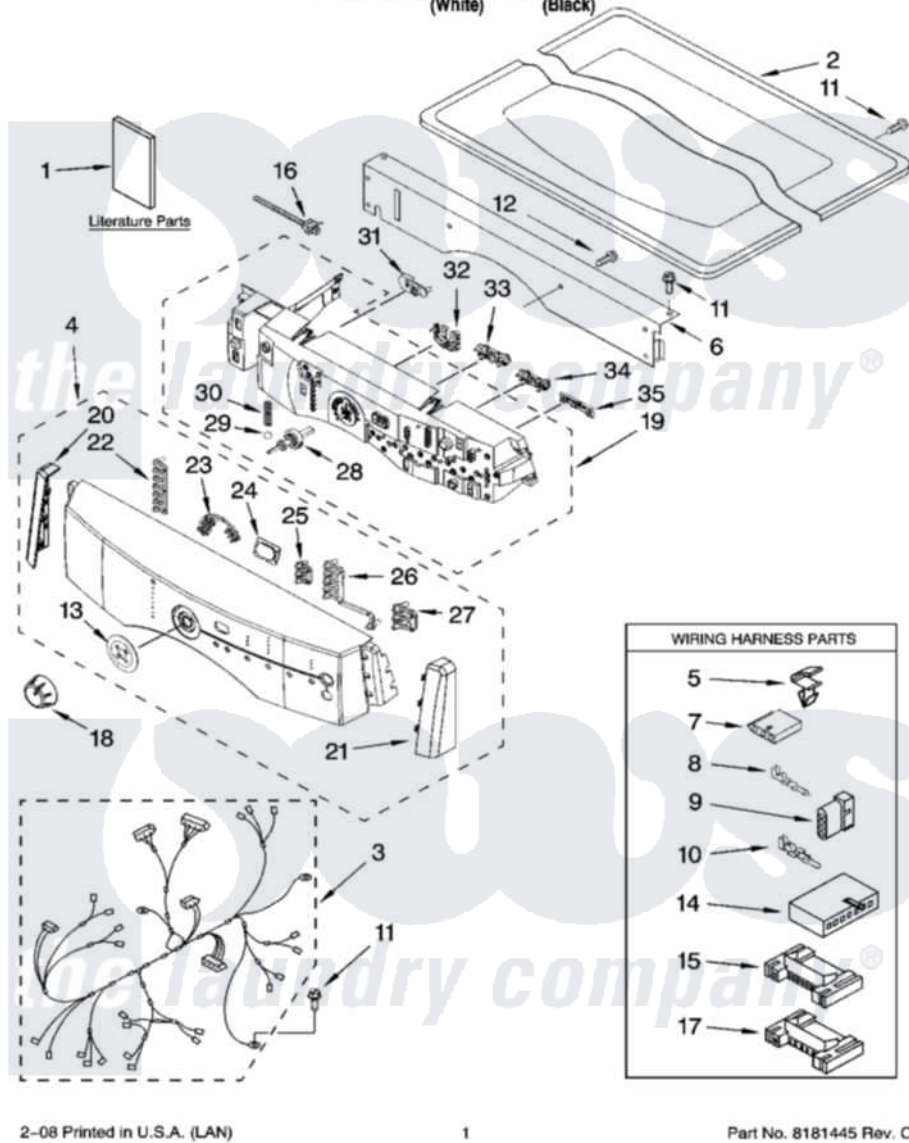

2-08 Printed in U.S.A. (LAN)

1

Part No. 8181445 Rev. C

Maytag Residential Maytag MGD9700SQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150638		Not Available	Use & Care Guide (English)
"	W10150639		Not Available	Use & Care Guide (Spanish)
"	W10049500		Not Available	Tech Sheet
"	W10099080		Not Available	Guide, Quick Start
2	8519251	W10117263		Top
"	8579997	W10192490		Top
3	8299950			Harness, Main
4	W10098940	W10098950		Panel-Control
"	W10098960	W10098970		Panel-Control
5	3394427			Clip-Harness
6	8519271			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw

12	488886	488787	Screw
13	8542690		Bezel, Cycle
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	3391018		Tie Cable
17	2203186		Connector, 5-Circuit
18	W10133964		Knob, Assembly
19	8558455		User Interface
20	8562598		Endcap
"	8580135		Endcap
21	8562597		Endcap
"	8580134		Endcap
22	8542682		Light Indicator
23	8542683		Light Indicator
24	8542691		Lens, Display
25	8542684		Light Indicator
26	8542685		Light Indicator
27	8542686		Light Indicator
28	8542717		Shaft, Cycle Selector
29	8542716		Bearing, Knob
30	8542715		Spring, Knob
31	W10133970		Pushbutton,
"	8580140		Pushbutton,)
32	W10100390		Pushbutton,
"	8579989		Pushbutton,
33	8562604		Pushbutton,
"	8579991		Pushbutton,
34	8562605		Pushbutton,
"	8579993		Pushbutton,
35	W10133971		Pushbutton
"	8579994		Pushbutton,)

