


Maytag MGDB700VQ0 02 - CABINET PARTS

CABINET PARTS

For Model: MGDB700VQ0
(White Color Coordinated)

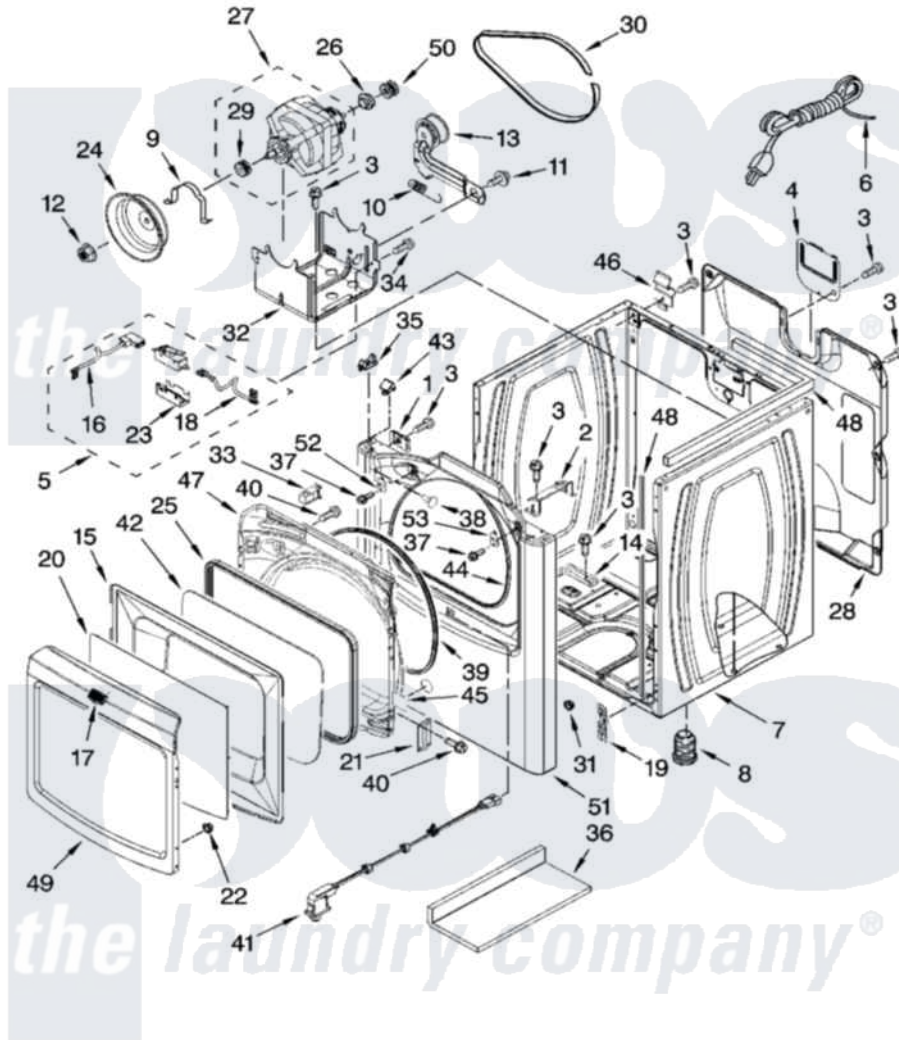

W10249975

3

Maytag [Residential Maytag MGDB700VQ0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10007520			Clip, Ground
2	8544753			Bracket, Burner
3	3390631			Screw, 10-16 X 3/8
4	8558833			Plate, Cover Terminal Block
5	8564012			Switch, Assembly
6	344020	3401402		Cord, Power
7	W10183827	W10223154		Cabinet
8	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	W10001340			Nut, Fly Wheel
13	8547160			Pulley Assembly
14	W10201446			Bracket-Gas Pipe
15	W10111880			Bezel, Door

16	8539892		Wire-Motor To Belt Switch
17	W10153170		Medallion Cabinet
18	W10167613		Wire, Belt Switch
19	3394083		Clip, Front Panel
20	W10111858		Glass,
21	8579717		Assembly, Hinge
22	3393008	308685	Side Trim)
23	8564011		Bracket-Switch
24	8576626		Wheel, Fly
25	W10111859		Gasket, Inner Door
26	3393657		Restrainer, Belt
27	W10136931	W10136932	Motor, Assembly 60 Hz
28	8558830	Not Available	Panel, Rear
29	W10139247		Pulley, Blower
30	W10136934		Belt, Drive
31	8578560		Hole, Plug
32	8547158		Bracket, Motor
33	W10111905		Assembly, Door Catch
34	W10002600		Screw, 6-20 X 1 1/4
35	8568303		Locator, Snap Down
36	W10215725		Cover, Door Switch
37	3400805		Screw, 8-18 X 3/64
38	W10144494		Plug-Hole
39	W10215728	W10239307	Seal-Door
40	342055	488627	Screw
41	W10201785		Door Switch Assembly
42	W10111857		Glass, Inner Door
43	8576625		Lock, Front Top
44	W10044490		Seal, Front Panel
45	8564457		Plug, Front Panel
46	238088	8066217	Hinge, Top
47	W10111878		Door, Inner
48	W10226482		Foam, Seal Spill Guard
49	W10111875		Door, Outer
50	W10136930		Pulley,
51	W10111883	W10312757	Panel
52	W10111906	W10295405	Strike
53	W10111888		Plug, Strike

the laundry company[®]