


Maytag MGDC500VW1 01 - TOP AND CONSOLE PARTS

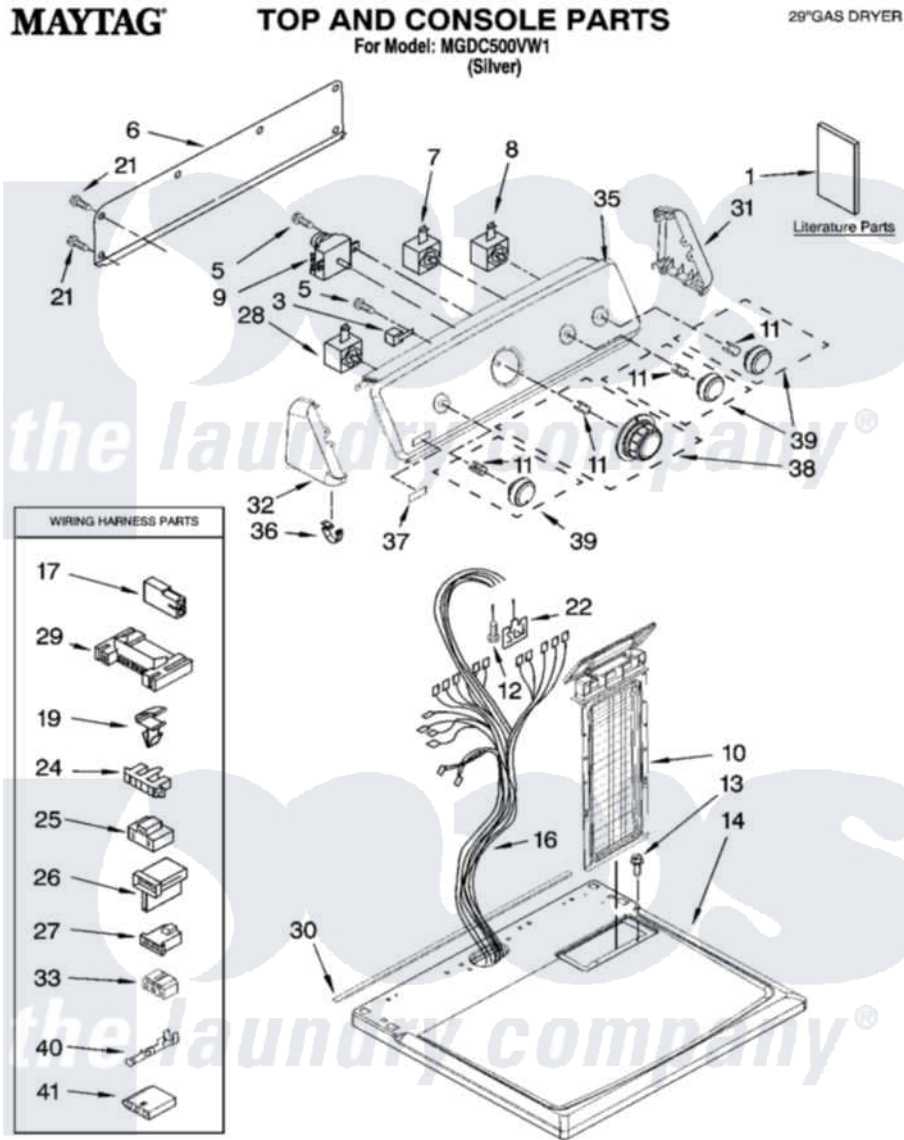

2-09 Litho in U.S.A. (MP)(bay)

1

Part No. W10250365 Rev. A

Maytag [Residential Maytag MGDC500VW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10089180		Not Available	Sheet, Cycle Feature
"	W10232963		Not Available	Guide, Use & Care
"	W10150630		Not Available	LITERATURE PARTS INSTRUCTIONS, INSTALLATION
"	W10185993		Not Available	Wiring Diagram
3	694419			Mini-Buzzer
5	8533971	90767		Screw, 8A X 3/8 Hex Washer Head Tapping
6	W10103406			Panel, Rear Console
7	8530169			Switch, Temperature
8	W10117655			Switch, Push-To-Start
9	W10185992		Not Available	Timer Assembly (60 Hz.)
10	8565972			Screen, Lint
11	8536939			Clip, Knob
12	359625	487240		Screw, For Mtg. Service Capacitor
13	688082	487240		Screw, For Mtg. Service

13	000903	407240	Capacitor
14	W10225059		Top And Seal Assembly
16	W10186097		Harness, Wiring
17	717252		Receptacle, Terminal
19	3394427		Clip-Harness
21	693995		Screw, Hex Head
22	8558178		Control, Electronic
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	3405156		Switch, Rotary
29	3395683		Receptacle, Multi-Terminal
30	W10224672		Foam Seal Console Bracket
31	W10193821		Cap, End
32	W10193824		Endcap Console Bracket
33	3347243		Block, Disconnect
35	W10086737		Console Assembly
36	8312709		Clip-Console
37	W10101390		Badge Assembly
38	W10180219		Knob, Timer Assembly
39	W10180218		Knob, Control Assembly
40	94614		Terminal
41	3936144		Do-It-Yourself Repair Manuals

