


# Maytag MGDC700VW1 02 - CABINET PARTS

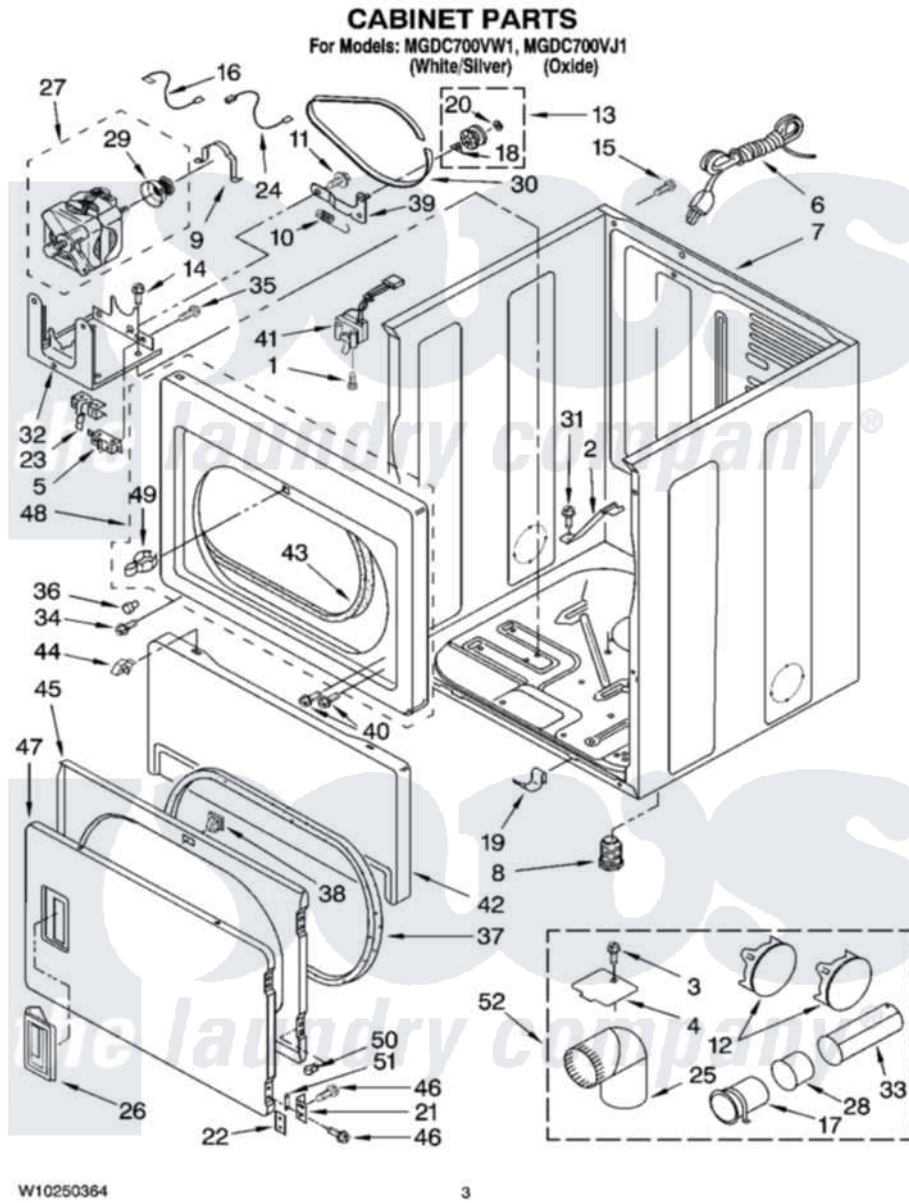

Maytag [Residential Maytag MGDC700VW1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697773	<a href="#">3395530</a>		Screw
2	<a href="#">8529757</a>			Bracket, Burner
3	<a href="#">488729</a>			Screw
4	<a href="#">3394331</a>			Plate Cover
5	8066134	<a href="#">279782</a>		Switch-Lid
6	344020	<a href="#">3401402</a>		Cord, Power
7	<a href="#">8310656</a>			Cabinet
"	<a href="#">W10212721</a>			Cabinet
8	3392100	<a href="#">49621</a>		Feet-Leveling
"	<a href="#">279810</a>			Foot-Optional
9	<a href="#">W10121316</a>			Plug, Multivent
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
12	697750	<a href="#">W10470674</a>		Dryer Exhaust Kit
13	3388672	<a href="#">279640</a>		Pulley-Idr
14	343641	<a href="#">681414</a>		Screw, 10AB X 1/2

15	8533974	<a href="#">4331106</a>	Screw, No.10-32 X 7/16
16	<a href="#">3398948</a>		Wire, Jumper
17	<a href="#">8563747</a>		Exhaust Pipe Medium Pipe
18	<a href="#">690997</a>		Washer, Thrust
19	<a href="#">297092</a>		Clip
20	<a href="#">W10121334</a>		Washer, Thrust
21	<a href="#">3389247</a>		Hinge And Pin Assembly
22	<a href="#">3390902</a>		Clip, Door Hinge
23	<a href="#">8066120</a>		Lever, Door Switch
24	<a href="#">W10167612</a>		Wire, Broken Belt Switch
25	<a href="#">49026</a>		4" - 90° Elbow
26	<a href="#">W10116360</a>		Handle, Door
"	<a href="#">W10212775</a>		Handle, Door
27	8538263	<a href="#">279787</a>	Motor-Drive
28	<a href="#">8563750</a>		Exhaust Pipe
29	<a href="#">8578220</a>		Pulley, Motor
30	<a href="#">W10112954</a>		Belt, Drive
31	<a href="#">693995</a>		Screw, Hex Head
32	<a href="#">3387118</a>		Bracket, Motor
33	<a href="#">8563749</a>		Exhaust Pipe
34	8281212	<a href="#">W10080800</a>	Screw, 8-18 X 3/8
35	<a href="#">98129</a>		Screw, 6-20 X 1 1/16
36	<a href="#">693152</a>		Bumper, Console
37	<a href="#">3390735</a>		Seal, Door
38	3392538	<a href="#">279570</a>	Latch
39	3388674	<a href="#">W10118756</a>	Idler Bracket
40	3357011	<a href="#">308685</a>	Side Trim )
41	<a href="#">3406107</a>		Door Switch Assembly
42	697215	<a href="#">3406797</a>	Toe Panel
"	<a href="#">W10212779</a>		Toe, Panel
43	<a href="#">3387242</a>		Seal, Front Panel
44	<a href="#">3388229</a>		Retainer, Toe Panel
45	3392563	<a href="#">280083</a>	Door-Rear
46	342055	<a href="#">488627</a>	Screw
47	<a href="#">3387872</a>		Door, Front
"	<a href="#">W10207719</a>		Door, Front
48	W10198710	Not Available	Front Panel (White)
"	W10212745	Not Available	Front Panel (Oxide)
49	696144	<a href="#">279570</a>	Latch
50	<a href="#">3389249</a>		Nut, Inner Door
51	<a href="#">W10191265</a>		Plug, Hinge Screw Front Panel
"	BLANK	Not Available	OPTIONAL PARTS (NOT INCLUDED)
52	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit
"	W10186596	<a href="#">W10470674</a>	Dryer Exhaust Kit