


Maytag MGT3800XW1 10 - AGITATOR, BASKET AND TUB PARTS

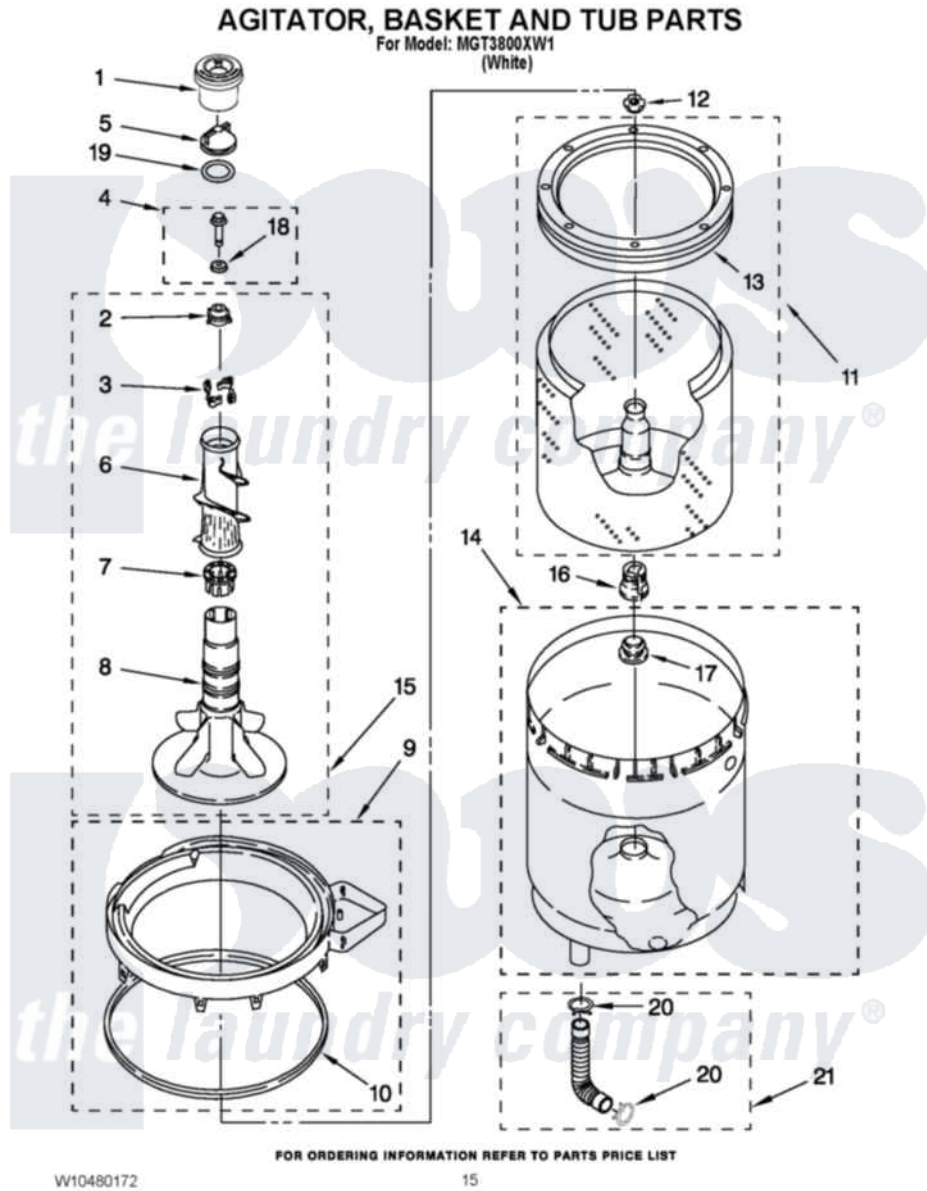

Maytag [Residential Maytag MGT3800XW1 Washer/Dryer Parts](#) Parts Diagram 10 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3350834			Dispenser,
2	3947410	285751		Dog-Agitator
3	3366877	80040		Dog-Agitator
4	358237			Screw And Washer
5	387094	285550		Cap
6	3349610			Mover, Agitator Clutch
7	3351014	285620		Washer
8	3349098			Agitator
9	W10388299			Tub Ring
10	3976308			Gasket, Tub Ring
11	3352234			Basket And Balance Ring Assembly
12	21366			Nut, Spanner
13	387240			Ring, Balance
14	3349292			Tub
15	W10429138			Agitator

16	389140		Tub Block, Basket Drive
17	383727		Gasket, Centerpodt
18	3949550		Washer
19	W10072840		Fabric Softener
20	3363366	616099	Clamp
21	3951449	285871	Hose

