

# Maytag MLE23PDFYW 14 - WIRING INFORMATION(ELEC)

## Diagnostic Mode:

This mode is normally accessed by pressing the **LAUNDRY SERVICE** button on the control panel for 1 second while in any of the ready modes. Once through this sequence a diagnostic code is present, or which, **CLAS** displays if operating with Maytag Data Assist/Intuitive Care.

One step to diagnostic mode the settings display will flash, and certain functions will be cleared, cancelled, memory an error will be cleared, and diagnostic codes are cleared. If a diagnostic code persists on either of the machines, the fault must be corrected before the following cycle options are permitted.



Procedures to initiate cycle activity from diagnostic mode are as follows:

1. **Upper Dryer Fold Diagnostic Cycle** - With the control panel in diagnostic mode, press the **PERMANENT PRESS** key pad. This cycle consists of seven minutes of heat and six minutes of cool down. The **UPPER DRYER** **WHITES & COLORS** key pad will increase the diagnostic cycle minutes up to 120 minutes. The diagnostic cycle minutes will not exceed **DRYER DELICATES** key pad will cancel this cycle and exit the diagnostic mode.
2. **Lower Dryer Fold Diagnostic Cycle** - With the control panel in diagnostic, this cycle is entered by pressing the **LOWER DRYER**

## Diagnostic Codes:

If the set up results in control and one of the diagnostic codes is present, the appropriate diagnostic code will be on the display.

- #1 - Upper dryer door sensor error (no contact) based on the door to power the induction upper dryer motor. Diagnostic code is normally cleared.
- #4 - Lower dryer motor control circuit error (lower dryer cycles and lower dryer display disabled) (will clear after 10 minutes of inactivity)
- #6 - Blocked coils (air main) (dryer started, disabled) (will clear after 10 minutes of inactivity)
- #7 - Voltage detected (lower) (flow for 8 seconds) (will clear after 10 minutes of inactivity)
- #8 - Door switch error (lower dryer cycles and lower dryer display disabled) (will clear after 10 minutes of inactivity)
- #9 - Diagnostic code is normally cleared.
- #10 - Diagnostic code is normally cleared.
- #11 - Diagnostic code is normally cleared.
- #12 - Diagnostic code is normally cleared.
- #13 - Diagnostic code is normally cleared.
- #14 - Lower dryer door sensor error (no contact) based on the door to power the induction lower dryer motor. Diagnostic code is normally cleared.
- #15 - Diagnostic code is normally cleared.
- #16 - Diagnostic code is normally cleared.
- #17 - Diagnostic code is normally cleared.

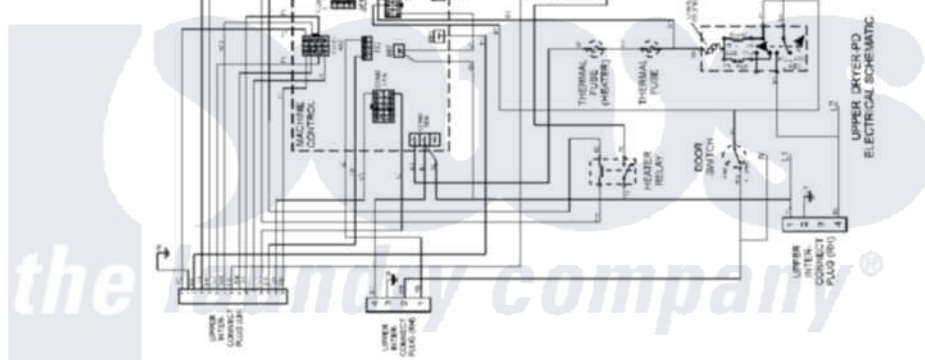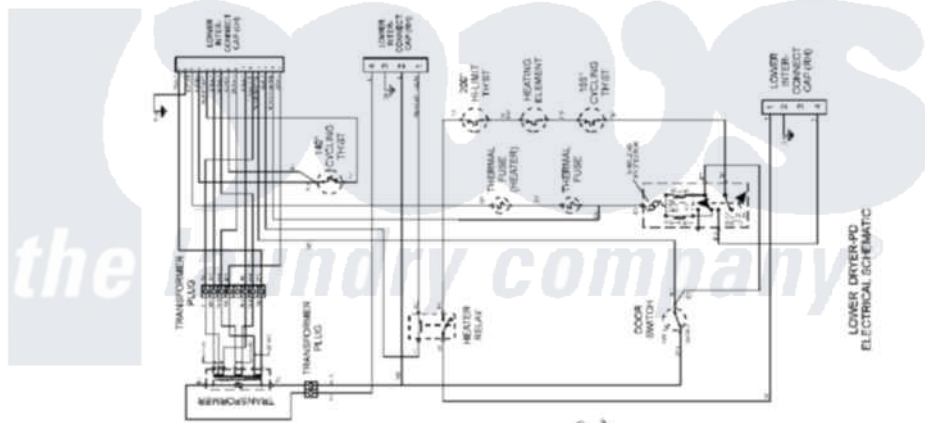

6 3720380

Maytag Residential Maytag MLE23PDFYW Dryer Parts Parts Diagram 14 - WIRING INFORMATION(ELEC)

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	WIRING INFORMATION

