

# Maytag MLE23PDFZW 12 - WIRING INFORMATION(GAS)

## Diagnostic Mode


This mode is entered by depressing the **LOWER DRYER DELICATES** key pad for 1 second while an eye of the top dryer cover is depressed, as shown in diagram mode is present or while the display is displaying with the top dryer cover depressed.

Caution: In diagnostic mode the motor display will flash, and cycles as present will be cancelled. Money to account will be cleared, and diagnostic mode will be entered. If the diagnostic mode is entered, the door must be closed, the door must be removed, and the following cycle sequence as a minimum:

- Proceed to locate cycle activity from diagnostic mode as follows:
- Upper Dryer Field Diagnostic Cycle** - With the motor cover open, the **UPPER DRIVER PERMANENT PRESS** key pad. The cycle status of seven minutes of time and one minute of no-heat. The **UPPER DRIVER WHITES & COLORS** key pad. After one to two minutes, pressing the **LOWER DRIVER PERMANENT PRESS** key pad. The cycle status of seven minutes of time and one minute of no-heat. The **LOWER DRIVER WHITES & COLORS** key pad. After one to two minutes, pressing the **LOWER DRIVER DELICATES** key pad will return the diagnostic mode to the initial state.

## Diagnostic Codes

- If the entry mode is entered and one of the following has occurred, the appropriate diagnostic code will be at the display:
- 41** - Upper dryer door motor circuit disconnected or due to power line interruption (upper dryer cycle and upper dryer display disabled until diagnostic mode is manually cleared).
  - 42** - Upper dryer door motor circuit (lower dryer cycle and lower dryer display disabled until diagnostic mode is manually cleared).
  - 43** - Thermal fuse 1 or vent stop started unsafe which has interrupted the motor display disabled until diagnostic mode is manually cleared.
  - 44** - Lower dryer motor sense error on control board or due to power line interruption (lower dryer cycle and lower dryer display disabled until diagnostic mode is manually cleared).
  - 45** - Thermal fuse 2 or vent stop started unsafe which has interrupted the motor display disabled until diagnostic mode is manually cleared.
  - 46** - Upper dryer door motor sense error on control board or due to power line interruption (upper dryer cycle and upper dryer display disabled until diagnostic mode is manually cleared).
  - 47** - Lower dryer door motor sense error on control board or due to power line interruption (lower dryer cycle and lower dryer display disabled until diagnostic mode is manually cleared).
  - 48** - Upper dryer motor sense error (upper dryer cycle and upper dryer display disabled until diagnostic mode is manually cleared).

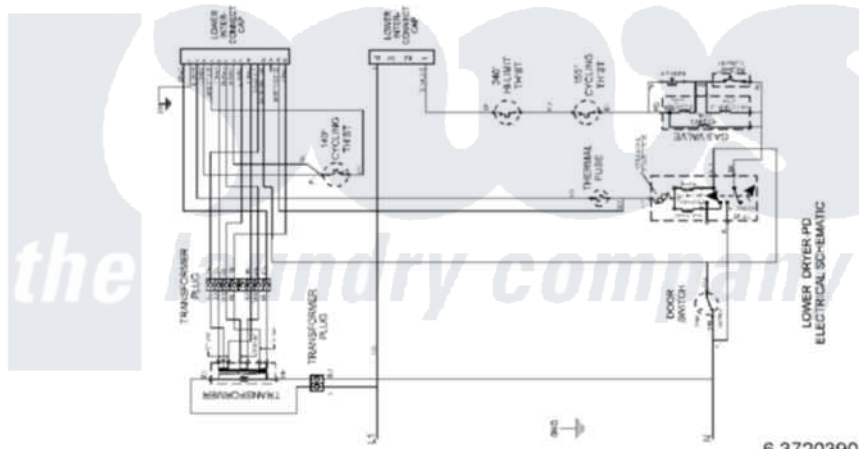

6 3720390

Maytag Residential Maytag MLE23PDFZW Dryer Parts Parts Diagram 12 - WIRING INFORMATION(GAS)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	WIRING INFORMATION

