


Maytag MLG19PDCXW 03 - CABINET-FRONT (DRYER)

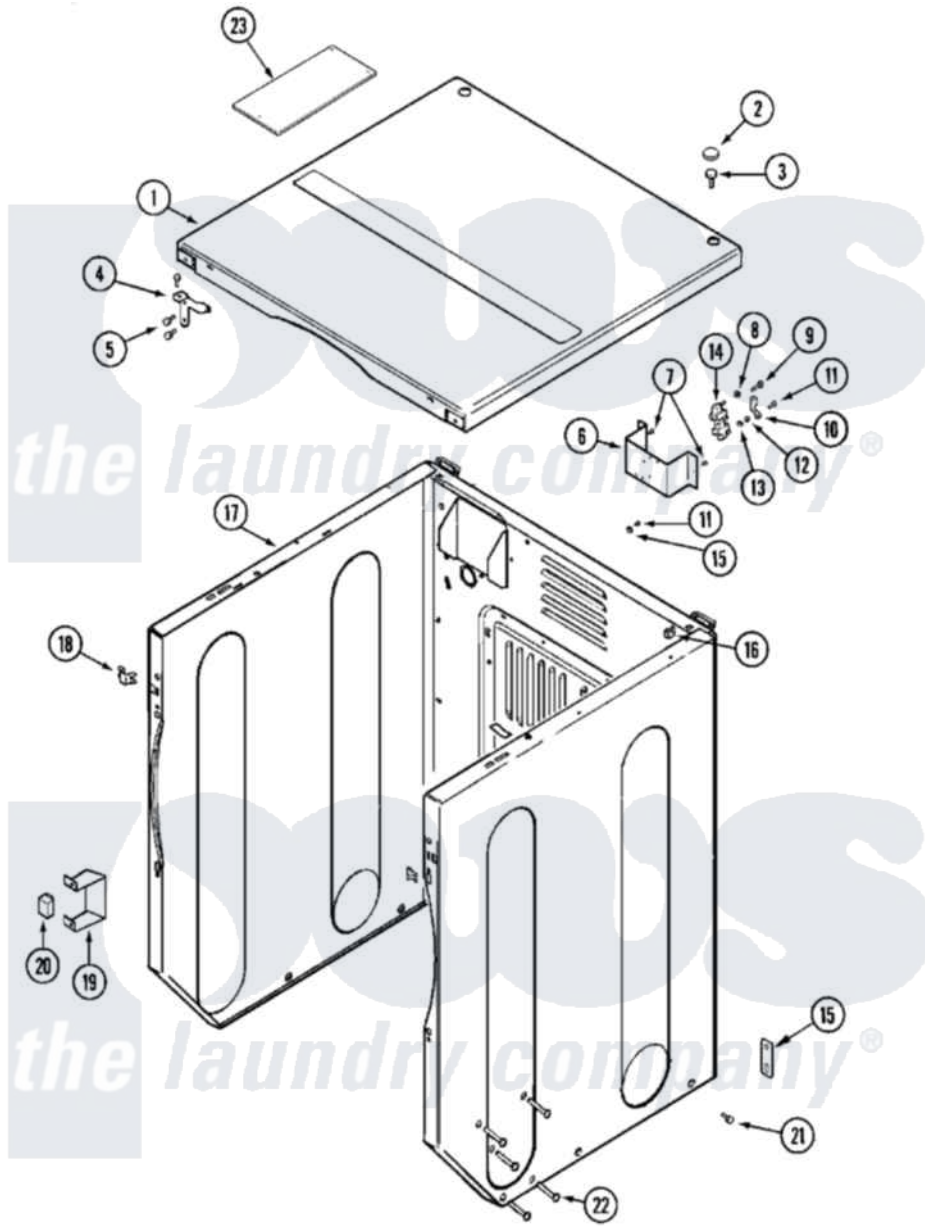

Maytag Residential Maytag MLG19PDCXW Dryer Parts Parts Diagram 03 - CABINET-FRONT (DRYER)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	33001995	33002124		Cover, Top
"	33002058		Not Available	COVER, TOP (WHT)
002	33001997			Plug, Hole
003	22001883	214354		Screw, Top Cover To Cabnt.
004	33001998			Bracket, Top Cover
"	33001999			Bracket, Top Cover
005	22001995			Screw Note: Screw, Tumbler Front And Shroud
006	33002059			Bracket, Terminal Block
"	NLA		Not Available	BRACKET, TERMINAL BLOCK---NA
007	22001995			Screw Note: Screw, Tumbler Front And Shroud
008	Y311270			Washer, Terminal Block
009	Y312209	W10001200		Screw
010	Y312184			Strap, Grounding
011	NLA		Not Available	SCREW, GROUND STRAP

012	311484	112432	Nut
013	311093		Washer, Terminal Connection
014	315471	22003298	Retainer, Wire
"	33001244		Block, Terminal
015	NLA	Not Available	WASHER, GROUND LUG
016	22001502		Fastener, U-NUt
017	22003646		Cabinet Assembly-Upr
"	33002811		Cabinet Upper As Pack--NA
"	NLA	Not Available	CABINET (WHT)
018	33001980		Fastener, Access Panel
019	Y313561		Screw---NA
"	33002002		Bracket, Switch
020	306398		Relay, Heater
"	Y251119	3177991	Screw
021	213007		Xfor Cabinet See Cabinet, Back
022	33001991		Bolt, Carriage
023	22001995		Screw Note: Screw, Tumbler Front And Shroud
"	22001996	3370225	Screw
"	Y314174		Terminal Cover - Canada
024	33002060		Bracket, Security

