


# Maytag MLG31PCBWQ 15 - SAIL SWITCH ASSEMBLY

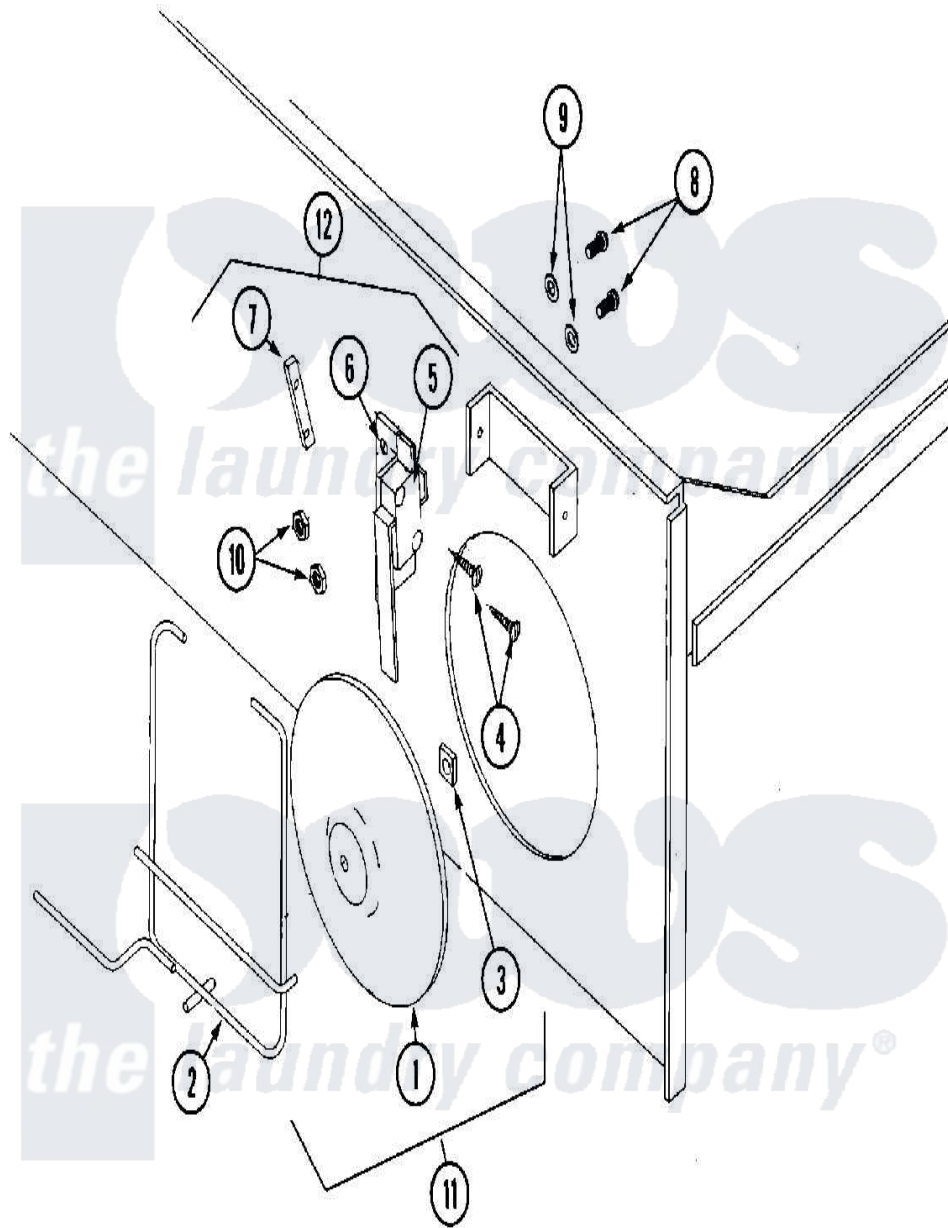

Maytag Residential Maytag MLG31PCBWQ Dryer Parts Parts Diagram 15 - SAIL SWITCH ASSEMBLY  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	A319206		Not Available	DAMPER, SAIL SWITCH
002	A105550	<a href="#">W10146642</a>		320 330 43
003	A154002	<a href="#">154002</a>		1 8 Push O
004	A150303	<a href="#">150303</a>		4 X 3 4 P
005	A122200	<a href="#">122200</a>		Sail Switch
006	A319208	<a href="#">319208</a>		320 330 43
007	A154004	<a href="#">154004</a>		Tinnerman
008	A150001	<a href="#">150001</a>		6-32 X 1 2
009	A153010	<a href="#">153010</a>		6 Internal
010	A152000			6-32 HEX N
011	A802805		Not Available	SAIL SWITCH ROD & DAMPER ASSY. (INCL. ITEMS 1 THRU 3)
012	A802807	<a href="#">W10147081</a>		320 330 43