


Maytag MLG31PCBWW 15 - SAIL SWITCH ASSEMBLY

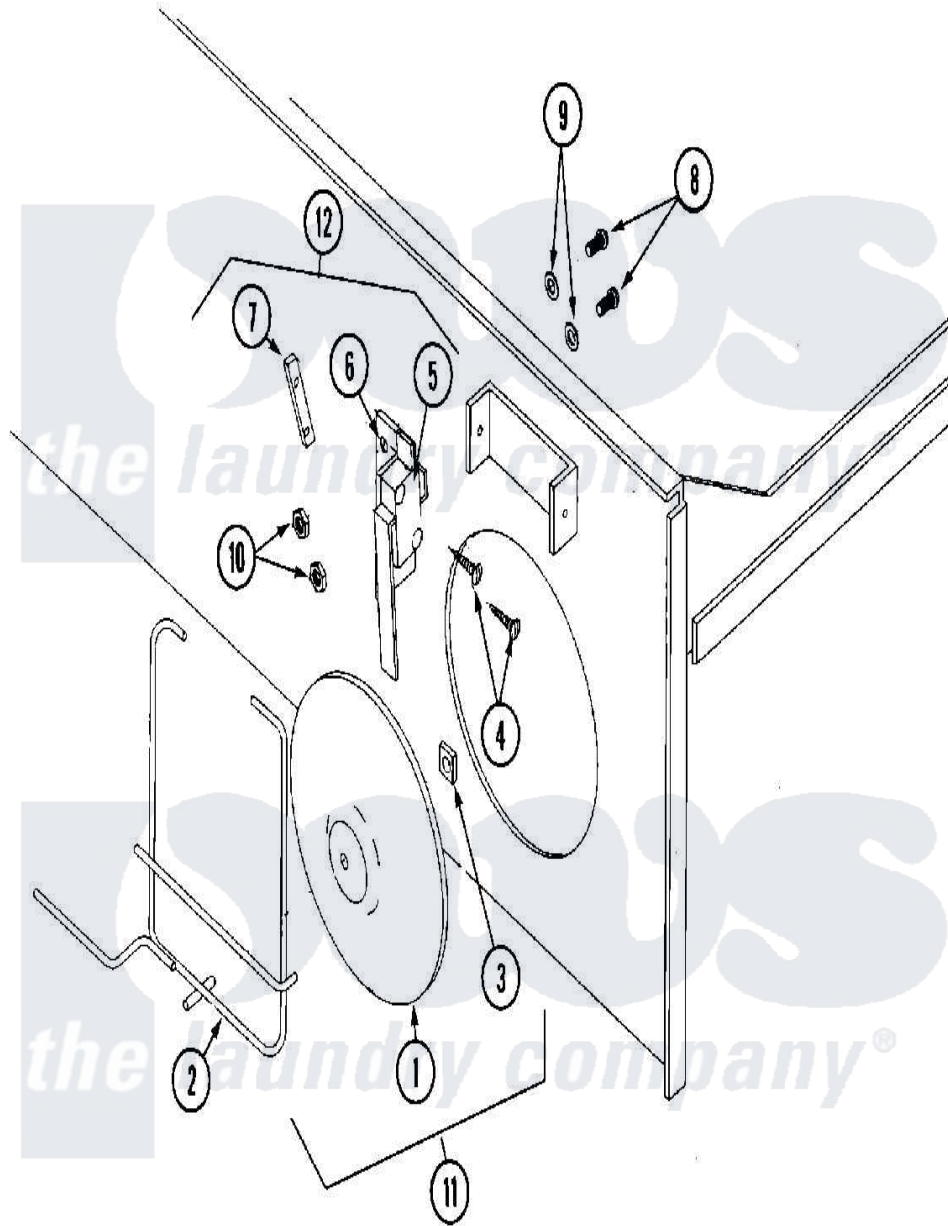

Maytag Residential Maytag MLG31PCBWW Dryer Parts Parts Diagram 15 - SAIL SWITCH ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	A319206		Not Available	DAMPER, SAIL SWITCH
002	A105550	W10146642		320 330 43
003	A154002	154002		1 8 Push O
004	A150303	150303		4 X 3 4 P
005	A122200	122200		Sail Switch
006	A319208	319208		320 330 43
007	A154004	154004		Tinnerman
008	A150001	150001		6-32 X 1 2
009	A153010	153010		6 Internal
010	A152000			6-32 HEX N
011	A802805		Not Available	SAIL SWITCH ROD & DAMPER ASSY. (INCL. ITEMS 1 THRU 3)
012	A802807	W10147081		320 330 43