


Maytag MUG15PDAXW 03 - CABINET-FRONT (UPPER)

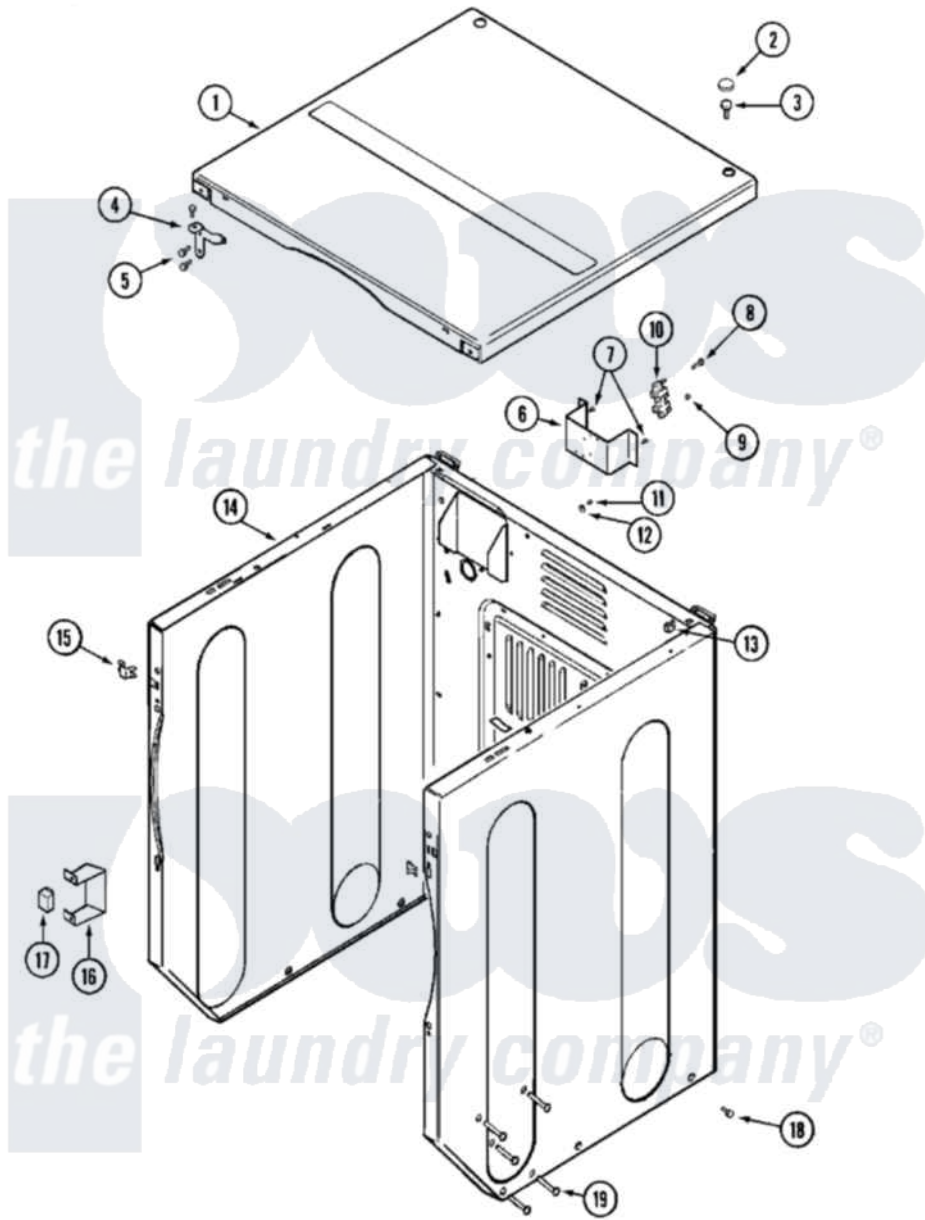

Maytag Residential Maytag MUG15PDAXW Dryer Parts Parts Diagram 03 - CABINET-FRONT (UPPER)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	33001995	33002124		Cover, Top
"	NLA		Not Available	(ALM)
002	33001997			Plug, Hole
003	22001883	214354		Screw, Top Cover To Cabnt.
004	33001998			Bracket, Top Cover
"	33001999			Bracket, Top Cover
005	22001995			Screw Note: Screw, Tumbler Front And Shroud
006	NLA		Not Available	BRACKET, TERMINAL BLOCK---NA
007	22001995			Screw Note: Screw, Tumbler Front And Shroud
008	Y312209	W10001200		Screw
009	311484	112432		Nut
010	33001244			Block, Terminal
011	NLA		Not Available	SCREW, GROUND LUG
012	NLA		Not Available	WASHER, GROUND LUG

013	22001502		Fastener, U-Nut
014	NLA	Not Available	CABINET (WHT)
015	33001980		Fastener, Access Panel
016	Y313561		Screw---NA
"	33002002		Bracket, Switch
"	Y310632	1163839	Screw
017	206824	W10133335	Relay, Motor
"	Y251119	3177991	Screw
018	213007		Xfor Cabinet See Cabinet, Back
019	33001991		Bolt, Carriage

