


# Maytag PYE3300AZW 02 - CONTROL PANEL

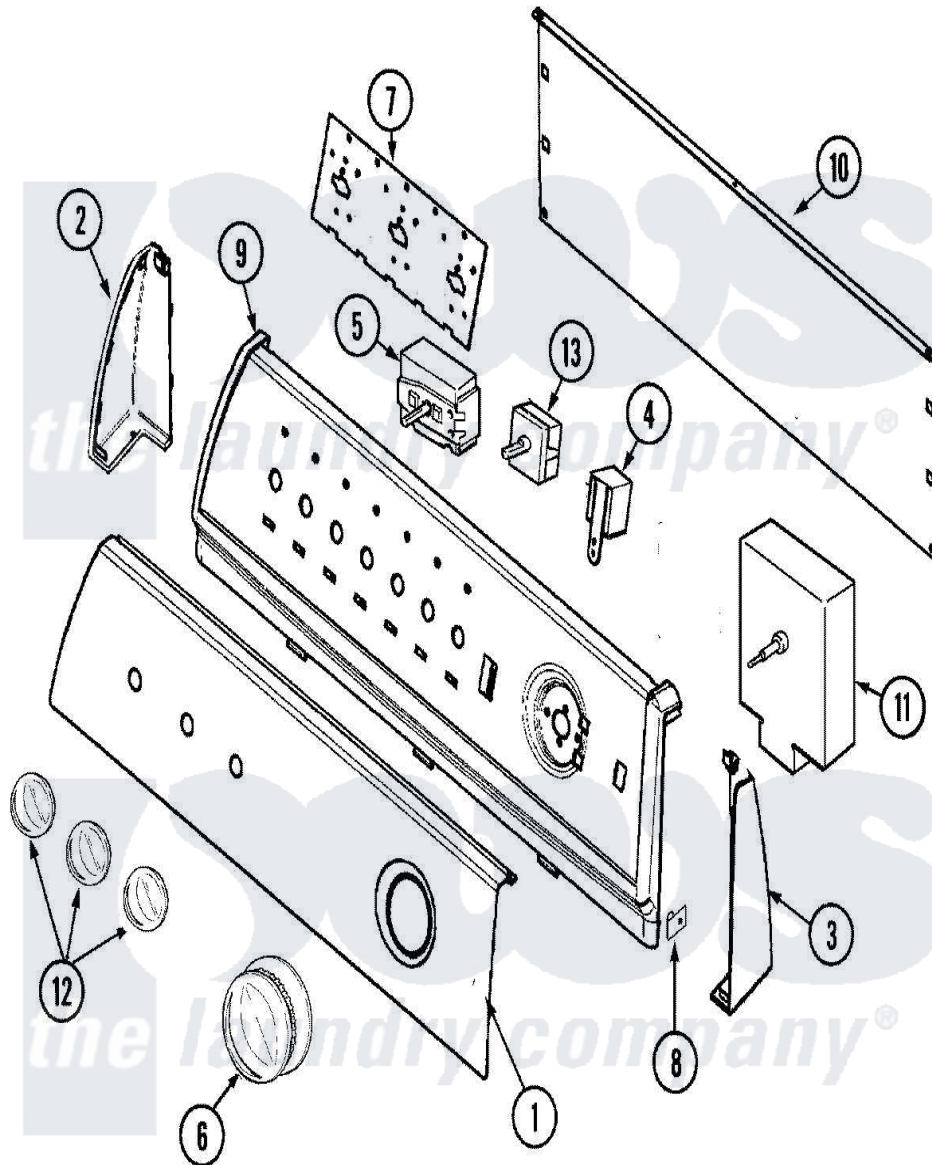

Maytag [Residential Maytag PYE3300AZW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">31001464</a>			Panel, Control
2	<a href="#">21001519</a>			Endcap
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	<a href="#">21001523</a>			Endcap
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
4	<a href="#">31001397</a>			Buzzer
5	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001398	<a href="#">31001447</a>		Switch, Temperature
6	31001385	<a href="#">37001184</a>		Timer Knob And Skirt Assembly
7	<a href="#">31001193</a>			Pad, Shield
"	53-2504	<a href="#">31001193</a>		Pad, Shield
"	<a href="#">21001603</a>			Shield, Control
8	<a href="#">25-7851</a>			Speedclip, End Cap To Top
9	<a href="#">21001604</a>		Not Available	FRAME, CONTROL PANEL

9	21001004	Not Available	(WHT)
10	<a href="#">25-3457</a>		Screw, Sems
"	<a href="#">21001527</a>		Shield, Rear
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
11	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	53-1815	<a href="#">31001513</a>	Timer
12	21001525	<a href="#">21002196</a>	Knob-Selector
13	<a href="#">31001190</a>		Switch, Two Position Rotary
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
14	<a href="#">31001458</a>		Manual, Use And Care

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>