


Maytag PYG3250AWW 02 - CONTROL PANEL

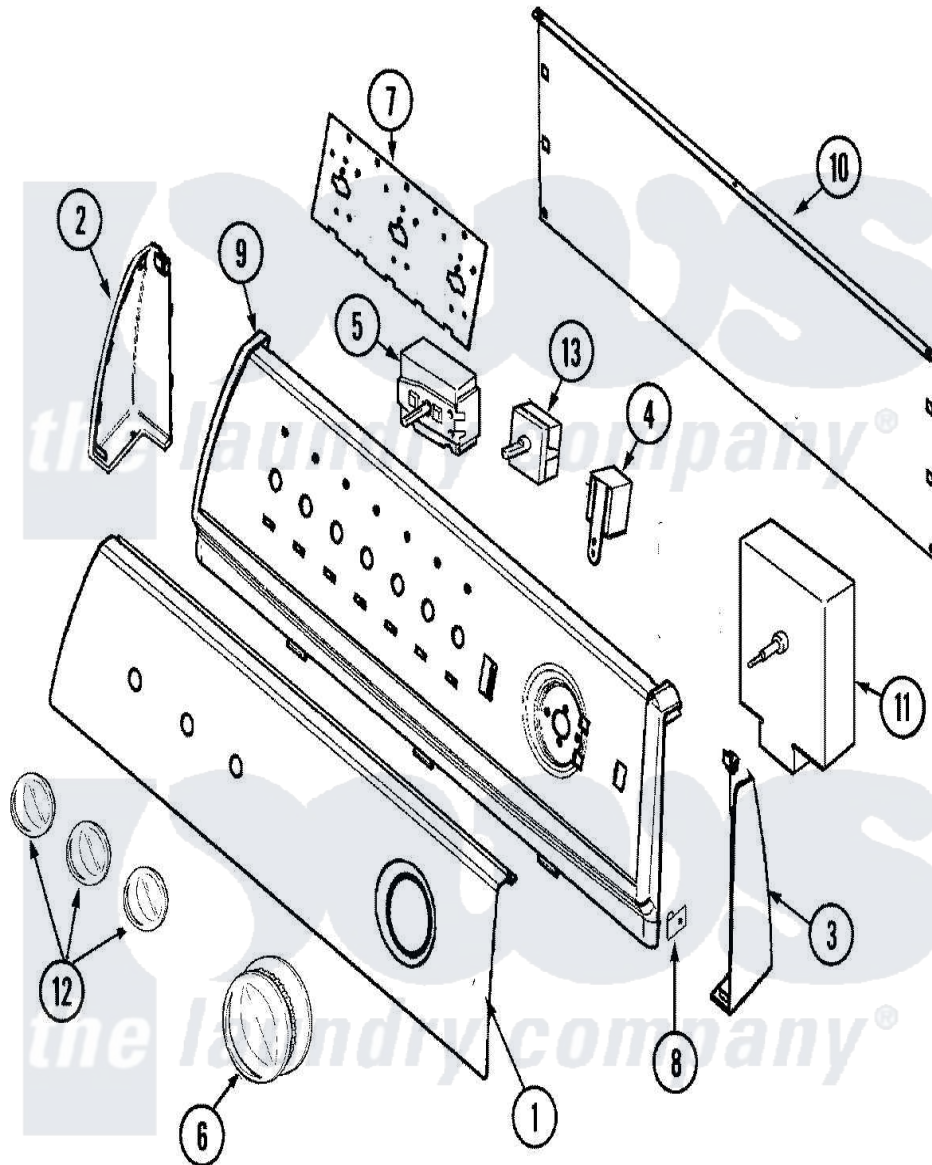

Maytag [Residential Maytag PYG3250AWW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001433			Panel, Control
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001641	21001519		Endcap
3	21001630	21001523		Endcap
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	31001397			Buzzer
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001398	31001447		Switch, Temperature
6	31001385	37001184		Timer Knob And Skirt Assembly
7	21001603			Shield, Control
"	53-2504	31001193		Pad, Shield
"	31001193			Pad, Shield
8	25-7851			Speedclip, End Cap To Top
9	21001640	21002005		Frame, Control Panel

10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	21001527			Shield, Rear
11	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1815	31001513		Timer
12	21001525	21002196		Knob-Selector
13	31001190			Switch, Two Position Rotary
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
14	16000327		Not Available	GUIDE, QUICK REF. - MAYTAG
"	31001438		Not Available	MANUAL, USE & CARE
"	21001419		Not Available	MANUAL, LAUNDERING TIPS
15	12002417			Wire Kit

