


Maytag YMED9800TB0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: YMED9800TK0, YMED9800TB0
(Pacific Blue) (Black)

ELECTRIC DRYER

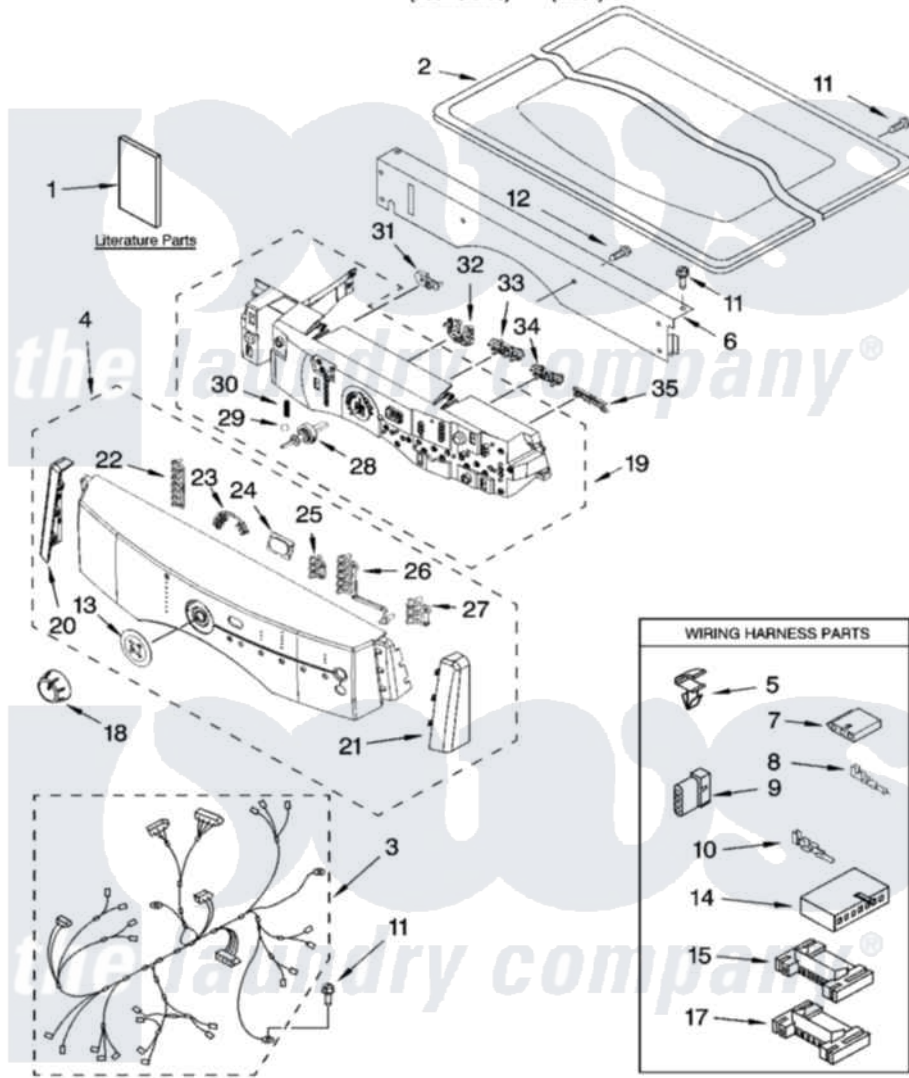

7-07 Printed in U.S.A. (LT)

1

Part No. W10149405 Rev. A

Maytag [Residential Maytag YMED9800TB0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10139629		Not Available	Use & Care Guide
"	8563818		Not Available	Tech Sheet
"	W10099080		Not Available	Guide, Quick Start
2	W10133996	W10165907		Top
"	8579997	W10192490		Top
3	8529984		Not Available	Harness, Main
4	W10133981			Panel, Console
"	W10133979		Not Available	Panel, Console (Includes Bezel, Light Indicators & Endcaps) (Black)
5	3394427			Clip-Harness
6	8519271			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw

12	488886	488787	Screw
13	8542690		Bezel, Cycle
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
17	2203186		Connector, 5-Circuit
18	W10133964		Knob, Assembly
19	8558455		User Interface
20	W10133965		End Cap
"	8579987		End Cap
21	W10133966		End Cap
"	8579986		End Cap
22	8542682		Light Indicator
23	8542683		Light Indicator
24	8542691		Lens, Display
25	8542684		Light Indicator
26	8542685		Light Indicator
27	8542686		Light Indicator
28	8542717		Shaft, Cycle Selector
29	8542716		Bearing, Knob
30	8542715		Spring, Knob
31	W10133970		Pushbutton,
32	W10133967		Pushbutton,
33	W10133968		Pushbutton,
34	W10133969		Pushbutton,
35	W10133971		Pushbutton

the laundry company[®]

the laundry company[®]

the laundry company[®]