


# Norge DEK204HC 01 - CONTROL PANEL (ORIG. REV. A)

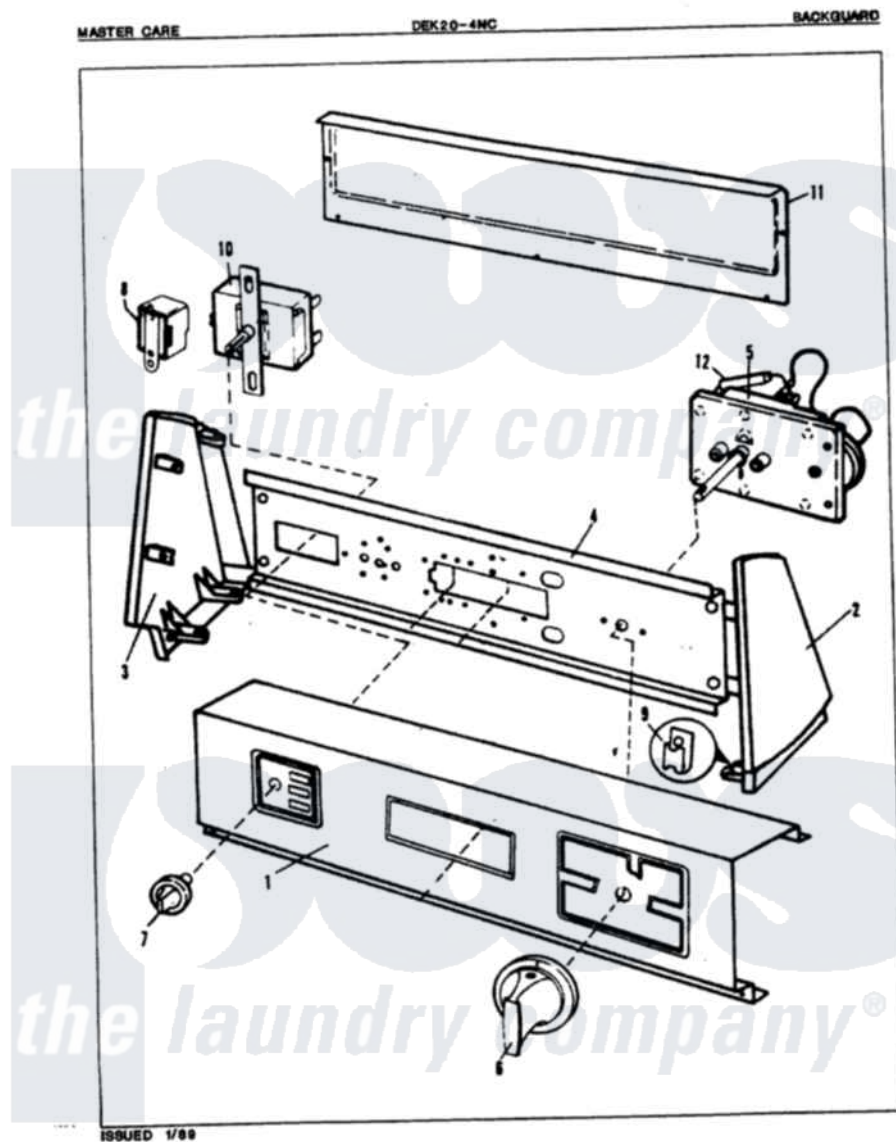

Norge Residential Norge DEK204HC Dryer Parts Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	53-0820		Not Available	CONTROL PANEL
2	<a href="#">53-0265</a>			LH Endcap
3	<a href="#">25-7760</a>			Screw
"	<a href="#">53-0264</a>			RH Endcap
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	53-0365	<a href="#">53-1676</a>		Shield, Control
5	25-0088	<a href="#">489483</a>		Screw 10-32 X 1/2
"	53-0883		Not Available	TIMER
"	63-6752		Not Available	TIMER MOTOR

6	<a href="#">25-6044</a>		Set Screw
"	53-0653	<a href="#">31001219</a>	Knob Ski
7	35-0168		Not Available
			SELECTOR KNOB
8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	<a href="#">53-1639</a>	Buzzer Assembly
9	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
10	53-0394	<a href="#">53-1264</a>	Rotary Switch
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
11	34-9487		Not Available
			PLATE, REINFORCEMENT
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	<a href="#">33002917</a>	Screw, No.10-16
"	25-7697	<a href="#">25-2219</a>	Screw
"	<a href="#">25-7852</a>		Speedclip, Rr Shld To End Cap
"	53-0268	<a href="#">21001460</a>	Shield, Rear
"	<a href="#">25-7851</a>		Speedclip, End Cap To Top
12	63-6743	<a href="#">31001484</a>	Resistor Assembly

