


# Norge DEL263H 02 - CONTROL PANEL (REV. E)

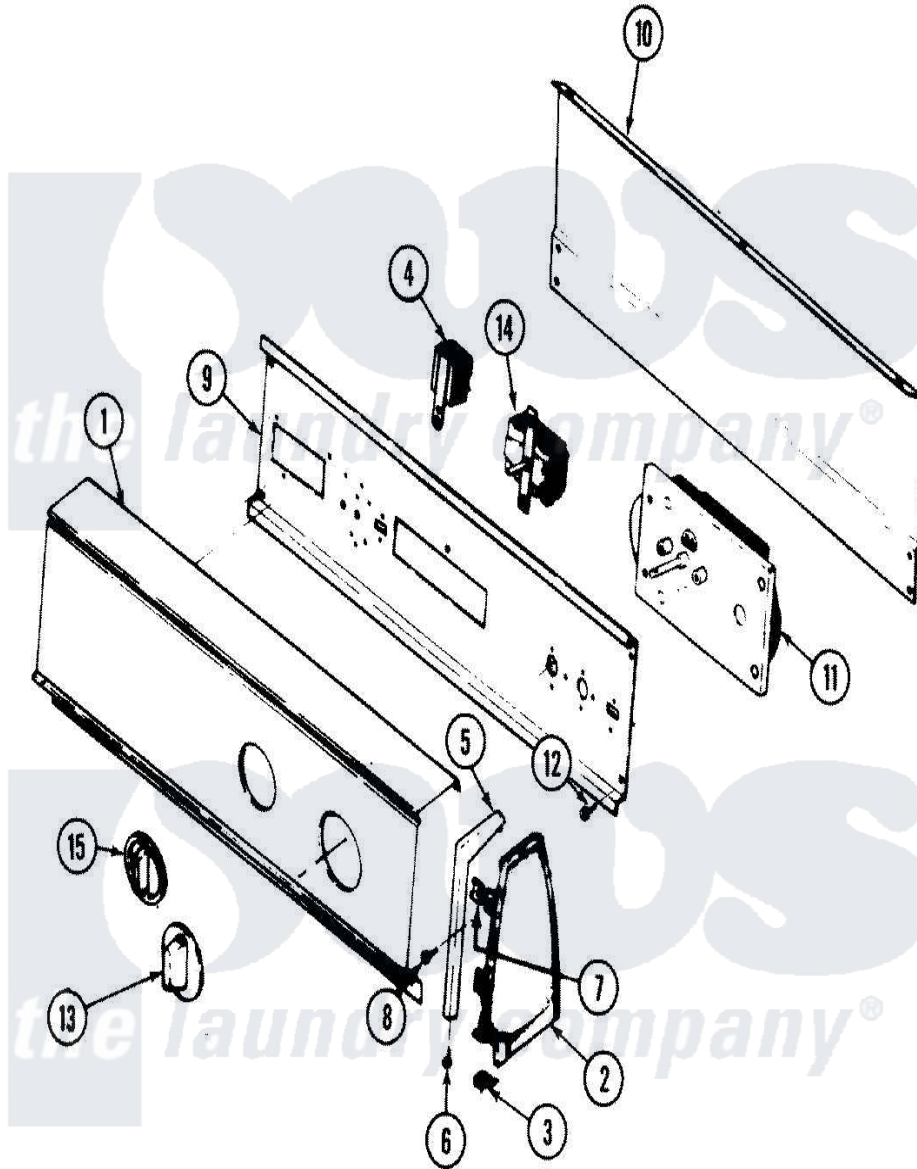

Norge [Residential Norge DEL263H Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. E)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">53-1284</a>			Control Panel
2	35-2487	<a href="#">21001451</a>		Cap- End
"	25-7649	<a href="#">910187</a>		Screw
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	35-2488	<a href="#">21001452</a>		Cap- End
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	63-6731	<a href="#">53-1639</a>		Buzzer Assembly
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control

7	<a href="#">25-1192</a>			Panel
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	<a href="#">53-1676</a>			Shield, Control
10	35-2688	<a href="#">21001460</a>		Shield, Rear
11	63-6743	<a href="#">31001484</a>		Resistor Assembly
"	<a href="#">53-1811</a>			Timer
12	25-7435	<a href="#">33002917</a>		Screw, No.10-16
13	53-1530	<a href="#">31001219</a>		Knob Ski
14	53-1265		Not Available	ROTARY SWITCH
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2186		Not Available	KNOB, SELECTOR
NI	53-1452		Not Available	MANUAL, USE & CARE

*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>