


# Norge DEM202HC 02 - CONTROL PANEL (REV. A-D)

SECTION: BACKGUARD  
 MODEL: DEM202C

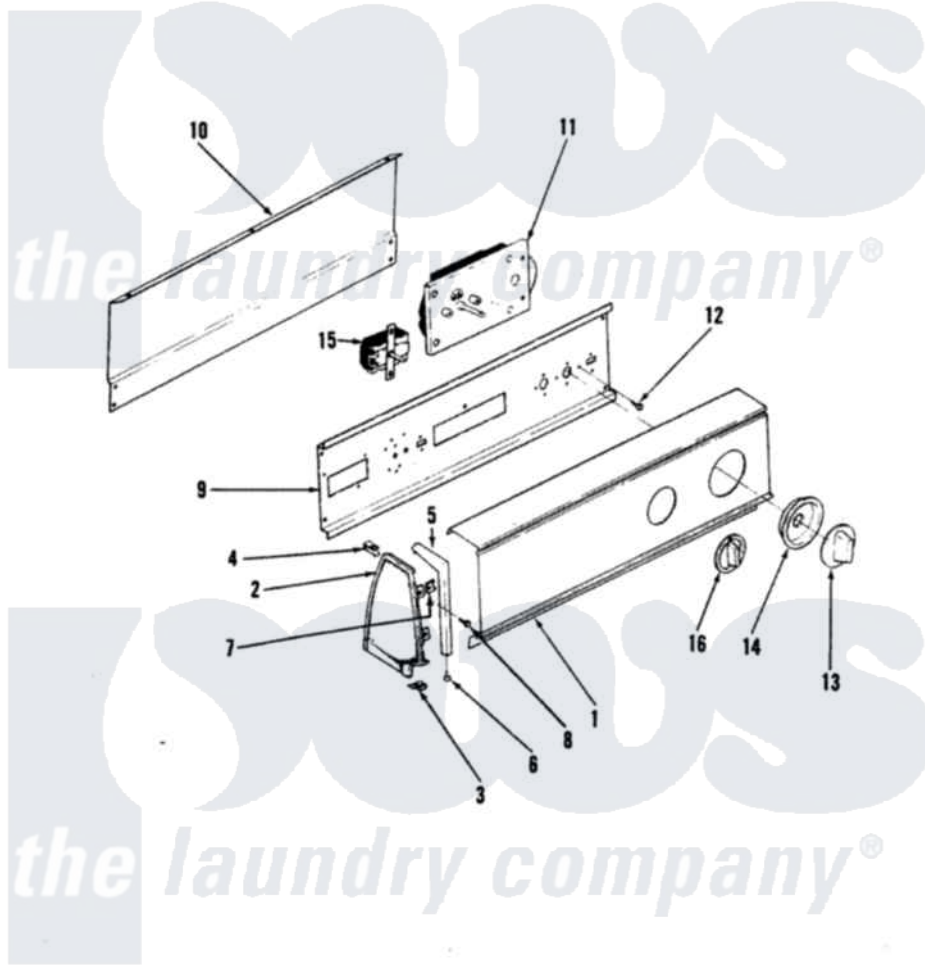

Issue Date: 6/90

Norge Residential Norge DEM202HC Dryer Parts Parts Diagram 02 - CONTROL PANEL (REV. A-D)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2306		Not Available	CONTROL PANEL
"	53-1613		Not Available	CONTROL PANEL
2	<a href="#">53-0264</a>			RH Endcap
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2487	<a href="#">21001451</a>		Cap- End
"	35-2488	<a href="#">21001452</a>		Cap- End
"	<a href="#">53-0265</a>			LH Endcap
3	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	25-7697	<a href="#">25-2219</a>		Screw
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0279		Not Available	TRIM, END CAP (RT)
"	53-0280		Not Available	TRIM, END CAP (LT)
6	<a href="#">25-7760</a>			Screw

7	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	<a href="#">53-1676</a>		Shield, Control
"	53-0365	<a href="#">53-1676</a>	Shield, Control
10	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	<a href="#">21001460</a>	Shield, Rear
"	53-0268	<a href="#">21001460</a>	Shield, Rear
11	<a href="#">53-1803</a>		Timer
"	53-0635	Not Available	TIMER MOTOR
"	53-1549	Not Available	TIMER
12	25-7435	<a href="#">33002917</a>	Screw, No.10-16
"	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	53-1290	Not Available	SKIRT, TIMER
14	53-1530	<a href="#">31001219</a>	Knob Ski
15	53-1267	<a href="#">53-0456</a>	Switch, Selector
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
16	63-6731	<a href="#">53-1639</a>	Buzzer Assembly
"	35-2186	Not Available	KNOB, SELECTOR
NI	53-1446	Not Available	MANUAL, USE & CARE

