


Norge DEM202WC 03 - CONTROL PANEL (REV. E)

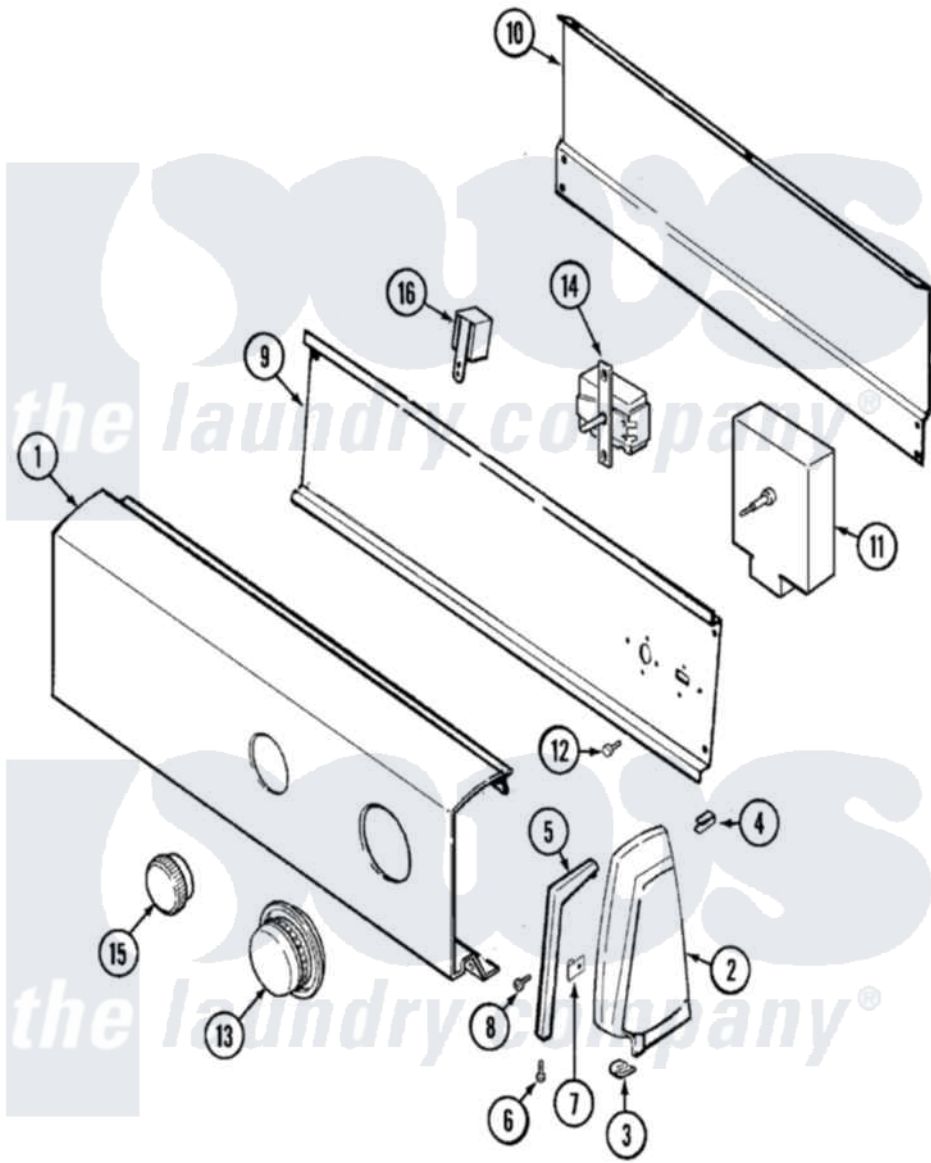

Norge Residential Norge DEM202WC Dryer Parts Parts Diagram 03 - CONTROL PANEL (REV. E)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2306		Not Available	CONTROL PANEL
2	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7851			Speedclip, End Cap To Top
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0279		Not Available	TRIM, END CAP (RT)
"	53-0280		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

	25-1102		Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
11	63-5743		Not Available
			MANUAL, USE & CARE
"	53-1803		Timer
12	25-7435	33002917	Screw, No.10-16
13	53-1530	31001219	Knob Ski
14	53-1267	53-0456	Switch, Selector
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2186		Not Available
			KNOB, SELECTOR
16	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
NI	53-1446-1		Not Available
			MANUAL, USE & CARE

