


# Norge DEN203A 01 - CONTROL PANEL

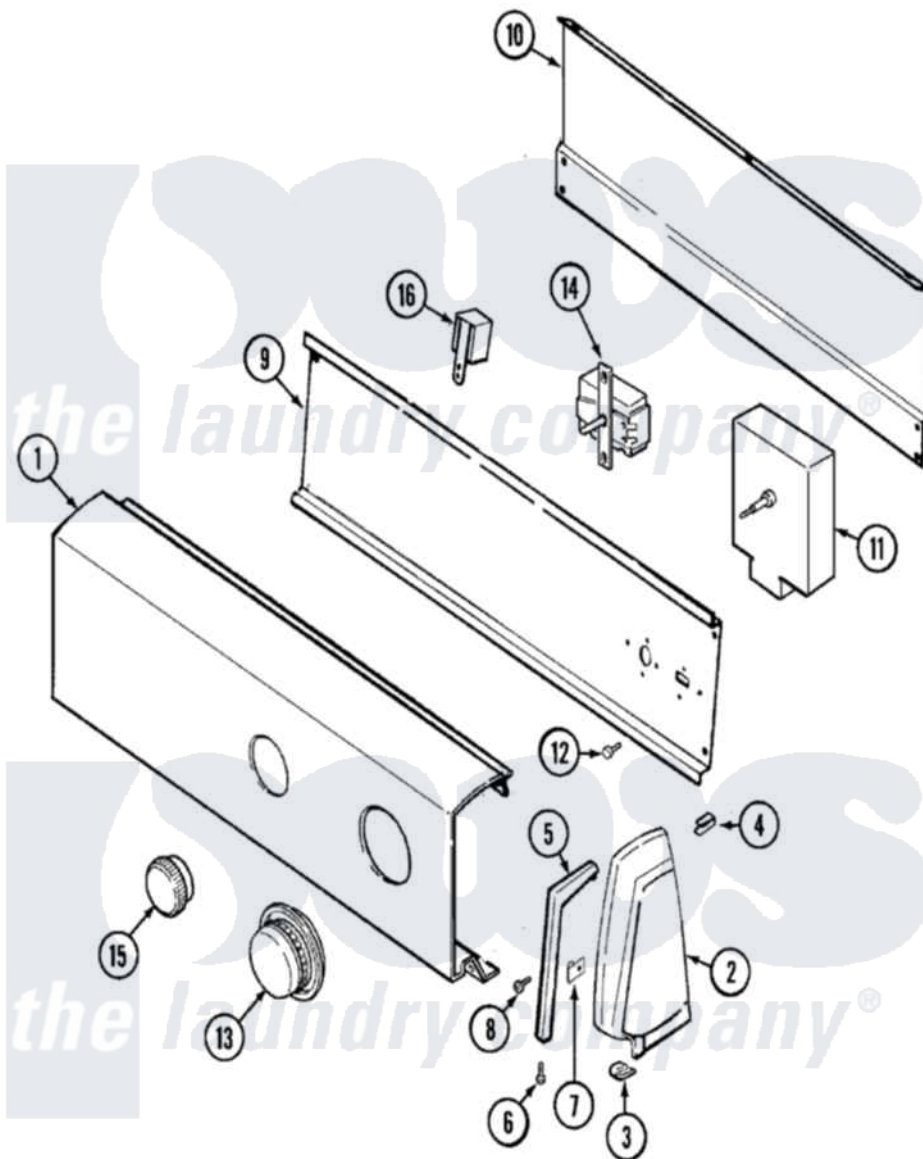

Norge Residential Norge DEN203A Dryer Parts Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2630		Not Available	PANEL, CONTROL
2	35-2488	<a href="#">21001452</a>		Cap- End
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2487	<a href="#">21001451</a>		Cap- End
"	25-7649	<a href="#">910187</a>		Screw
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw
7	25-7025	<a href="#">25-7748</a>		Clip
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

9	31001128	Not Available	SHIELD, CONTROL
"	<a href="#">53-1676</a>		Shield, Control
"	53-2504	<a href="#">31001193</a>	Pad, Shield
10	35-2688	<a href="#">21001460</a>	Shield, Rear
11	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	<a href="#">53-1758</a>		Timer
12	25-7435	<a href="#">33002917</a>	Screw, No.10-16
13	53-2637	<a href="#">31001219</a>	Knob Ski
14	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">31001129</a>		Switch, Temperature
"	53-0344	Not Available	SWITCH, TEMPERATURE
15	35-4244	<a href="#">21001283</a>	Knob, Selector---Piq
16	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1639</a>		Buzzer Assembly
NI	<a href="#">31001008</a>		Manual, Use And Care
17	31001033	Not Available	MANUAL, USE & CARE
NI	16002081	Not Available	GUIDE, QUICK REF - NORGE

