


Norge DEN203W 02 - CONTROL PANEL

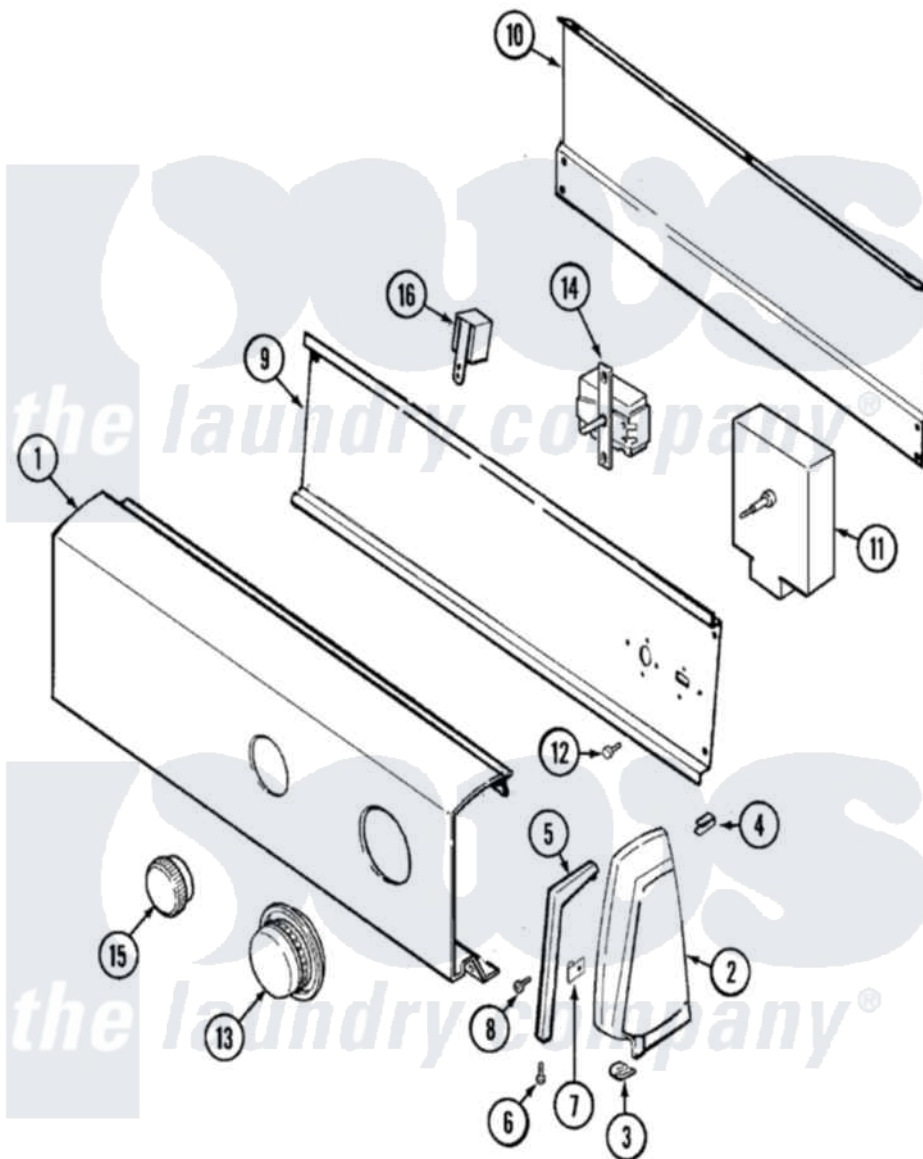

Norge Residential Norge DEN203W Dryer Parts Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2630		Not Available	PANEL, CONTROL
2	35-2488	21001452		Cap- End
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	25-7649	910187		Screw
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
"	25-7435	33002917		Screw, No.10-16
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7025	25-7748		Clip
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	31001128	Not Available	SHIELD, CONTROL
"	53-1676		Shield, Control
"	53-2504	31001193	Pad, Shield
10	35-2688	21001460	Shield, Rear
11	63-6743	31001484	Resistor Assembly
"	53-1758		Timer
12	25-7435	33002917	Screw, No.10-16
13	53-2637	31001219	Knob Ski
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001129		Switch, Temperature
"	53-0344	Not Available	SWITCH, TEMPERATURE
15	35-4244	21001283	Knob, Selector---Piq
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1639		Buzzer Assembly
NI	31001008		Manual, Use And Care
17	31001033	Not Available	MANUAL, USE & CARE
NI	16002081	Not Available	GUIDE, QUICK REF - NORGE

