


Norge DEN204A 02 - CONTROL PANEL

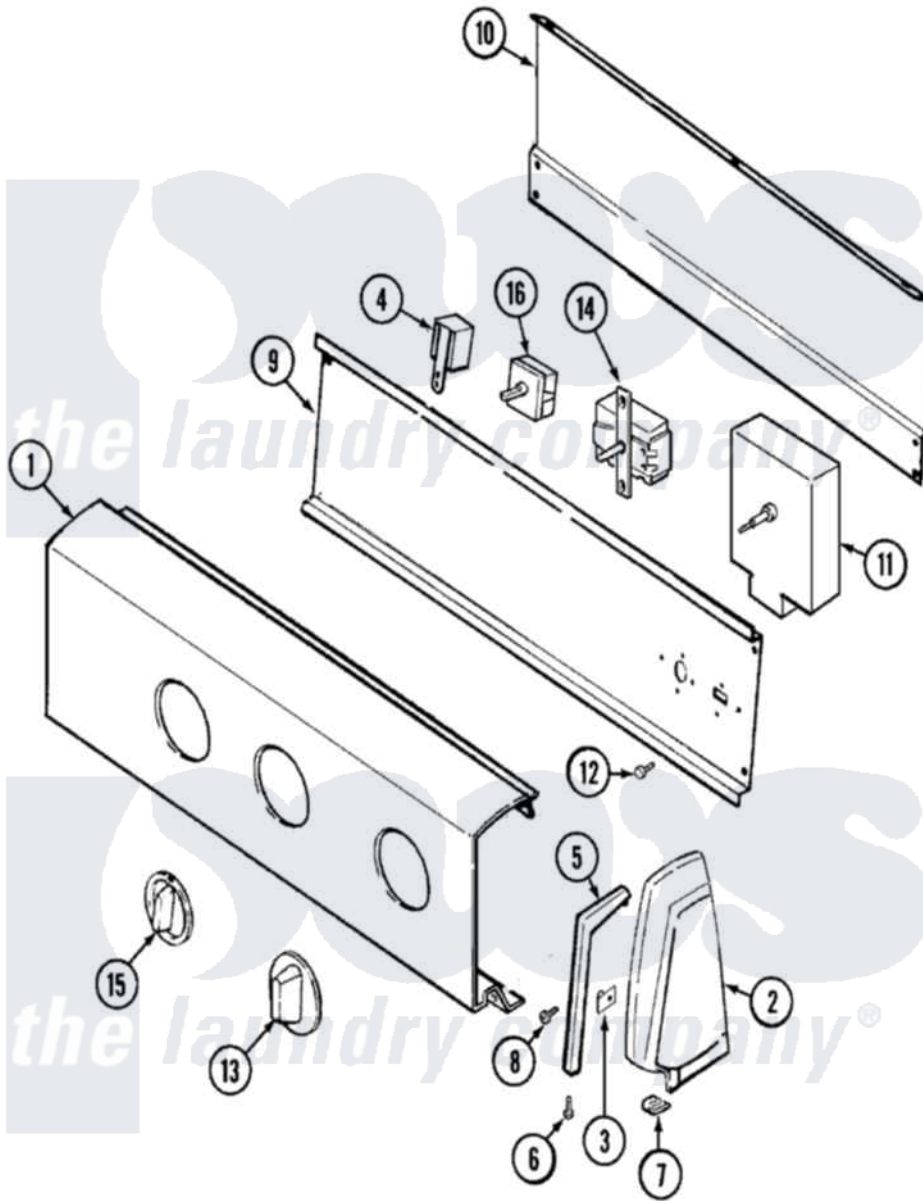

Norge Residential Norge DEN204A Dryer Parts Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001023		Not Available	PANEL, CONTROL
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
3	25-7702			Speedclip, End Cap To Control Panel
4	53-1639			Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7851			Speedclip, End Cap To Top
8	25-7649	910187		Screw
9	53-2504	31001193		Pad, Shield
"	53-1676			Shield, Control

"	31001128		Not Available	SHIELD, CONTROL
10	35-2688	21001460		Shield, Rear
11	63-6743	31001484		Resistor Assembly
"	53-1816		Not Available	TIMER
12	25-7435	33002917		Screw, No.10-16
13	53-2637	31001219		Knob Ski
14	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001129			Switch, Temperature
"	53-0344		Not Available	SWITCH, TEMPERATURE
15	35-4244	21001283		Knob, Selector---Piq
16	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	53-1263		Rotary Switch
"	31001190			Switch, Two Position Rotary
NI	31001008			Manual, Use And Care
17	31001035		Not Available	MANUAL, USE & CARE
"	16002081		Not Available	GUIDE, QUICK REF - NORGE

