


# Norge LDE9127H 01 - CONTROL PANEL

MASTERCARE LDE9127 BACKGUARD

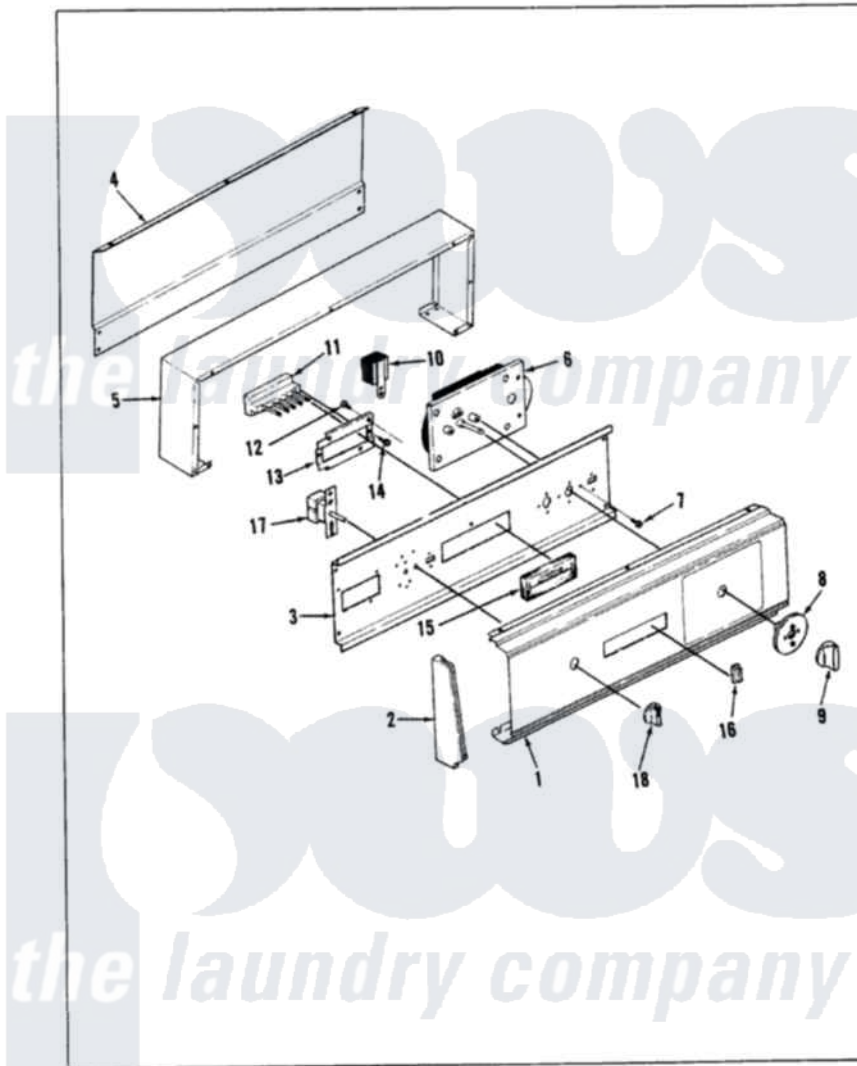

Norge Residential Norge LDE9127H Dryer Parts Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	<a href="#">910187</a>		Screw
"	53-0242		Not Available	CONTROL PANEL
2	<a href="#">33-6766</a>			RH End Cap
"	<a href="#">25-7760</a>			Screw
"	<a href="#">33-6765</a>			LH End Cap
3	53-0243		Not Available	CONTROL SHIELD
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7461		Not Available	CLIP
4	53-0247		Not Available	BACKGARD SHIELD
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	33-9668		Not Available	WRAPPER
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7284	<a href="#">33-2653</a>		Bumper, Cabinet
6	63-6690		Not Available	TIMER

"	63-6743	<a href="#">31001484</a>		Resistor Assembly
7	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
8	25-7250		Not Available	SCREW
"	33-7469		Not Available	SKIRT-TIMER KNOB
9	33-7467		Not Available	KNOB, TIMER
"	<a href="#">33-7508</a>			Timer Knob
10	63-6731	<a href="#">53-1639</a>		Buzzer Assembly
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
11	63-5483		Not Available	5 PB SWITCH
12	33-6621		Not Available	BRACKET, SWITCH
13	25-7712		Not Available	SCREW
14	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
15	33-8541		Not Available	SWITCH PAD
16	83-0215		Not Available	CYCLE BUTTON
17	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-5775		Not Available	SWITCH
18	<a href="#">33-8636</a>			Knob

