


Norge LWL203WC 05 - CONTROL PANEL (ORIG. REV. A-D)

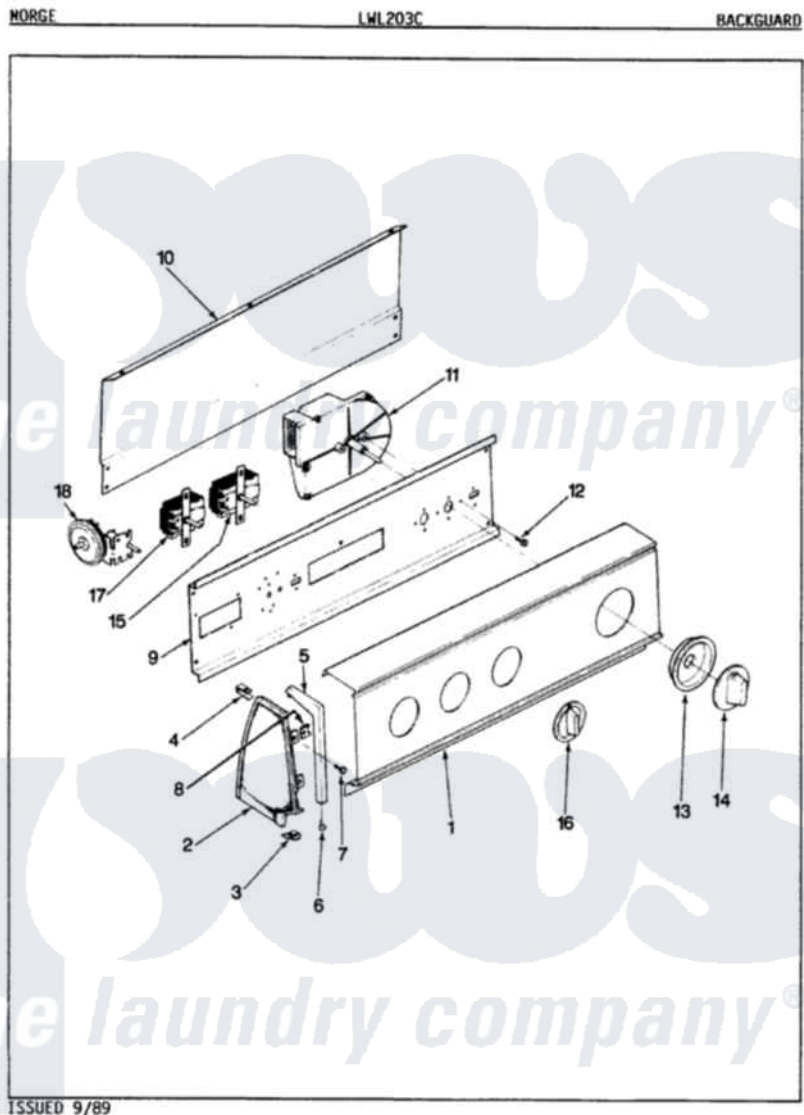

ISSUED 9/89

Norge Residential Norge LWL203WC Washer Parts Parts Diagram 05 - CONTROL PANEL (ORIG. REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	35-2178		Not Available	CONTROL PANEL
"	25-7649	910187		Screw
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7697	25-2219		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw

7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel
9	53-0365	53-1676		Shield, Control
"	53-1676			Shield, Control
10	25-7853	25-7933		Ring, Retaining
"	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460		Shield, Rear
"	53-0268	21001460		Shield, Rear
11	35-2211		Not Available	TIMER
12	25-0205	216412		Screw, Bracket To Timer
13	35-2255	21001497		Skirt Ri
14	35-2188	12500058		Knob Ski
15	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0114		Not Available	TEMP SWITCH
16	35-2186		Not Available	KNOB, SELECTOR
17	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2193		Not Available	SWITCH, ROTARY SPEED
18	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2145	21001554		Switch, Water Level
"	33-8304		Not Available	MANUAL, USE & CARE

the laundry company[®]

the laundry company[®]