


Roper RGD4640YQ0 02 - CABINET PARTS

CABINET PARTS

For Model: RGD4640YQ0
(White)

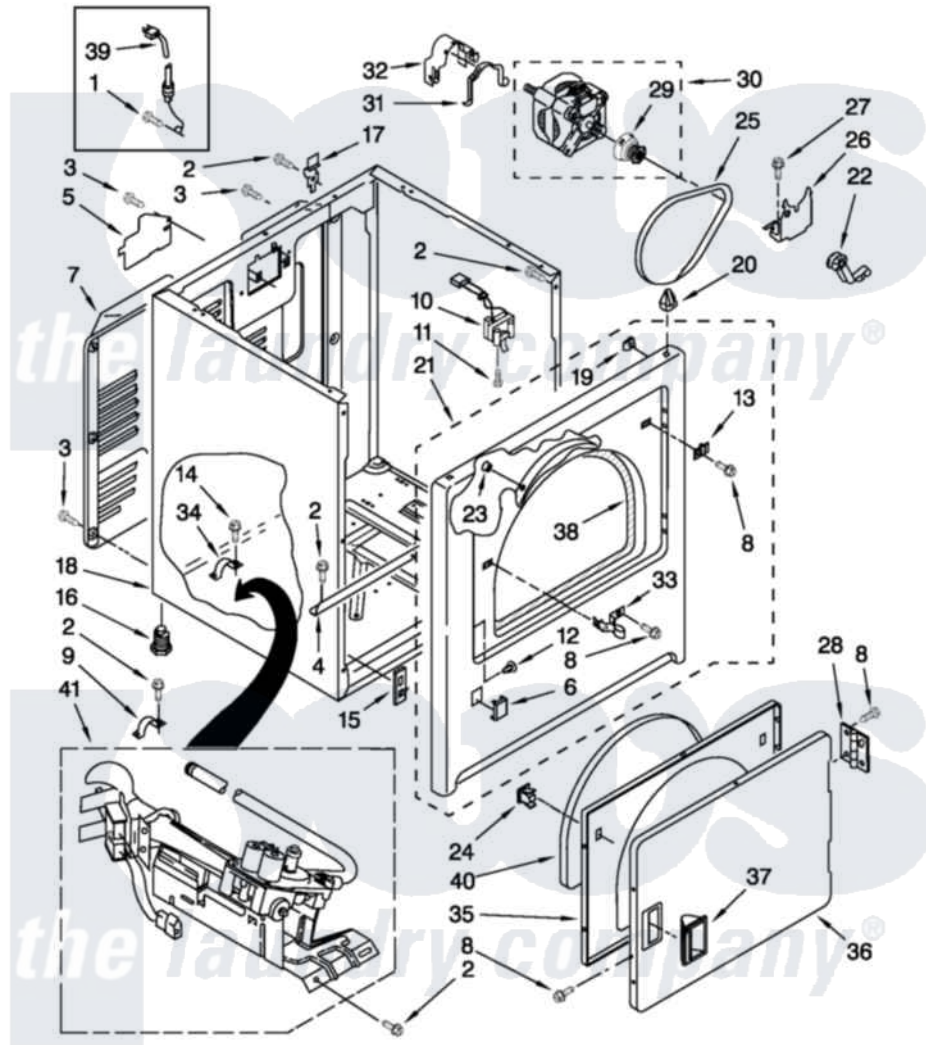

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10480396

3

Roper [Residential Roper RGD4640YQ0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	693995			Screw, Hex Head
4	W10236073			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	8564457			Plug, Front Panel
7	3396805	280043		Panel-Rear
8	342055	488627		Screw
9	3980175			Clamp, Elbow
10	3406109	3406107		Door Switch Assembly
11	697773	3395530		Screw
12	3404413			Plug, Hinge Hole
13	3403630			Plug, Strike Hole
14	3390631			Screw, 10-16 X 3/8
15	3394083			Clip, Front Panel
16	3392100	49621		Feet-Leveling

17	8066217		Hinge, Top
18	8530603	8533643	Cabinet
19	98234		Clip, U-Bend
20	8066092		Lock, Front Top
21	W10224855	W10248059	Panel
22	691366		Idler And Pulley Assembly
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	W10131364	341241	Belt
26	348780		Base, Motor
27	3400500		Bolt, 3405245 5/16-18 X 3/4
28	W10362431		Hinge And Pin Assembly
29	8066184		Pulley, Motor
30	W10194250	279827	Motor-Drive
31	W10121316		Plug, Multivent
32	3404162		Clamp, Motor
33	3403431		Strike, Panel
34	341029		Clamp, Pipe Door Spring
35	3402341		Door, Inner
36	3402335		Door, Front
37	3405184		Handle, Door
38	3406129		Seal And Bearing Assembly
39	W10440460		Cord, Power
40	3405246		Seal, Door Push-To-Start
41	W10336852	W10465748	Burner-Gas

the laundry company[®]

the laundry company[®]