


# Roper RTW4440XQ0 03 - AGITATOR, BASKET AND TUB PARTS

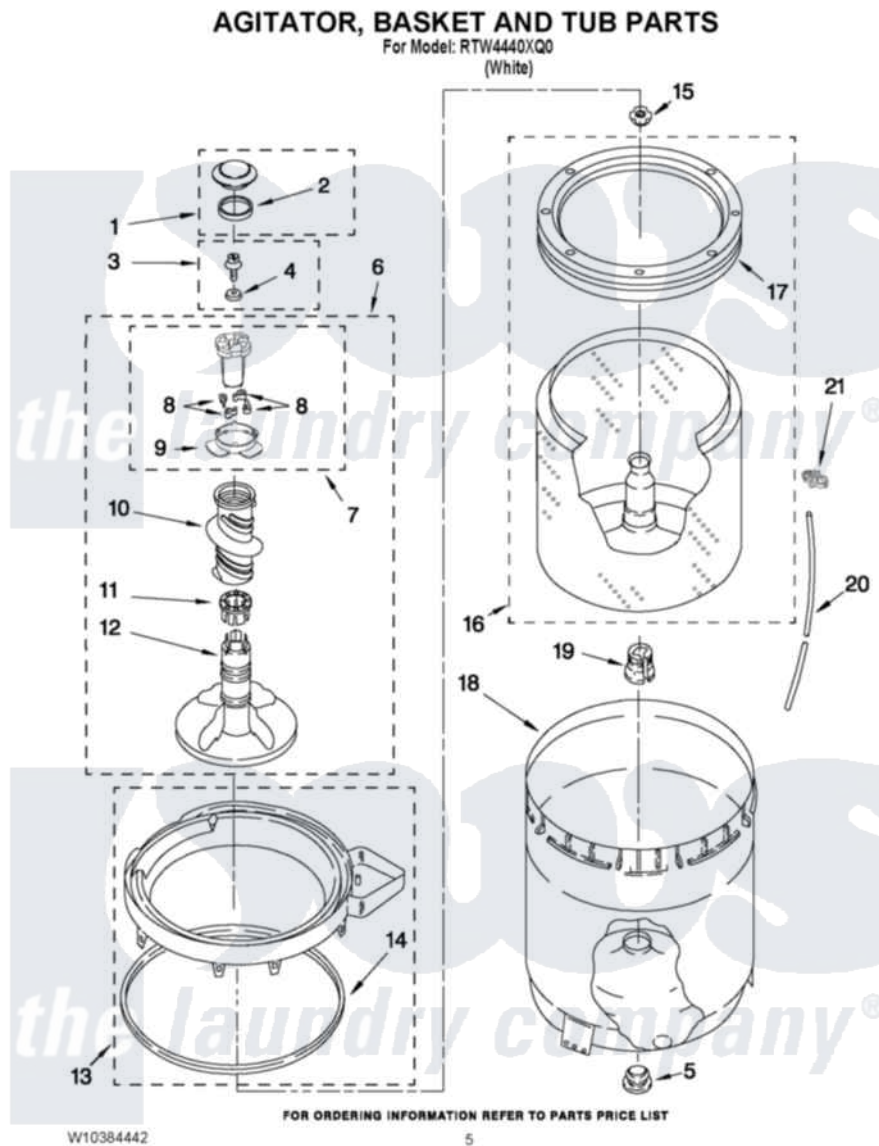

Roper Residential Roper RTW4440XQ0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	63973	<a href="#">3362061</a>		Cap
2	<a href="#">358912</a>			Seal, Agitator Cap
3	<a href="#">358237</a>			Screw And Washer
4	<a href="#">3949550</a>			Washer
5	<a href="#">383727</a>			Gasket, Centerpodt
6	3361598	<a href="#">285727</a>		Agitator
7	3363662	<a href="#">285748</a>		Cam-Agitator
8	3366877	<a href="#">80040</a>		Dog-Agitator
9	<a href="#">3363661</a>			Bearing, Driven Cam
10	<a href="#">3360824</a>			Auger, Agitator
11	3350389	<a href="#">285587</a>		Washer
12	<a href="#">389386</a>			Agitator
13	8528150	<a href="#">W10445870</a>		Ring-Tub
14	<a href="#">3976308</a>			Gasket, Tub Ring
15	<a href="#">21366</a>			Nut, Spanner
16	8526017	<a href="#">W10389329</a>		Clothes Container, Assembly

17	<a href="#">387240</a>		Ring, Balance
18	<a href="#">63849</a>		Strain Relief, Power Cord
19	<a href="#">389140</a>		Tub Block, Basket Drive
20	W10297437	<a href="#">353244</a>	Hose, Pressure Switch
21	<a href="#">2219077</a>		Clip, Pressure Switch Hose

