


Samsung DV306LEW 04 - DOOR

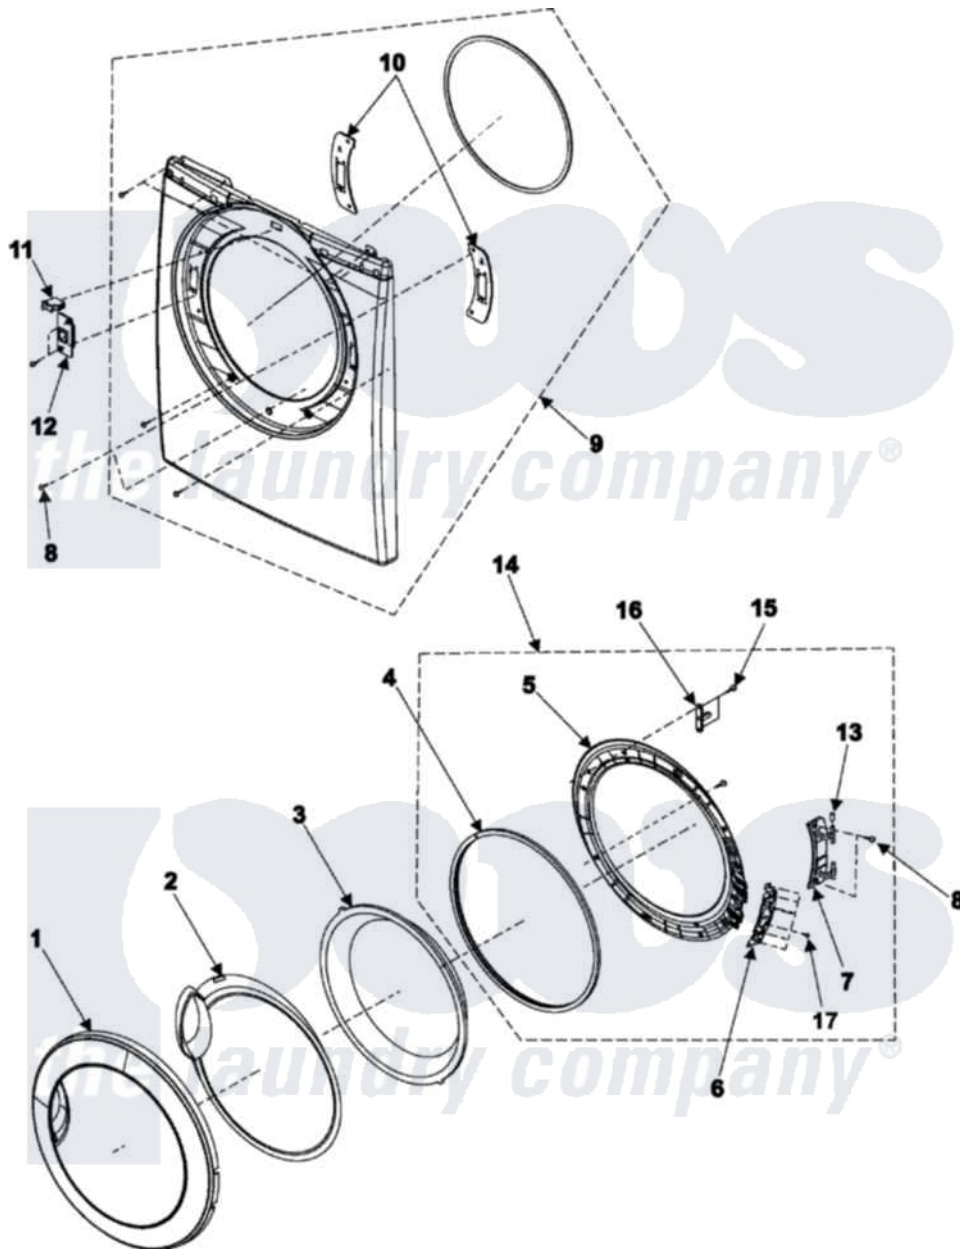

Samsung Residential Samsung DV306LEW Dryer Parts Parts Diagram 04 - DOOR

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-----------------------------|--------------------------|---------------|--|
| 1 | DC63-00674A | | Not Available | COVER-DOOR |
| 2 | DC64-01120A | 35001271 | | Door Safet |
| 3 | DC64-00993A | 35001182 | | Door-Glass |
| 4 | DC62-00198B | 35001250 | | Seal-Door |
| 5 | DC61-01523A | 35001272 | | Holder Gla |
| 6 | Y00000000 | | Not Available | SEE NOTE SUPPORT-HINGE CURRENTLY UNAVAILABLE |
| 7 | DC61-01532A | | Not Available | HINGE-DOOR |
| 8 | 6001-001773 | 35001126 | | Screw-Machine |
| 9 | DC97-10353A | | | Assembly-Frame Front |
| 10 | DC61-01222A | 35001129 | | Bracket-Hinge |
| 11 | DC64-00828A | 35001125 | | Door-Switch |
| 12 | DC61-01239B | | Not Available | HOLDER-LEVER |
| 13 | DC61-00891A | 34001192 | | Bushing, Hinge Guide |
| 14 | DC97-10342A | | | Assembly-Cover Door |
| 15 | 6002-000444 | | Not Available | SCREW-TAPPING, TH, +, 2S, M4, L14 |

