


# Samsung DV306LEW 05 - DRUM

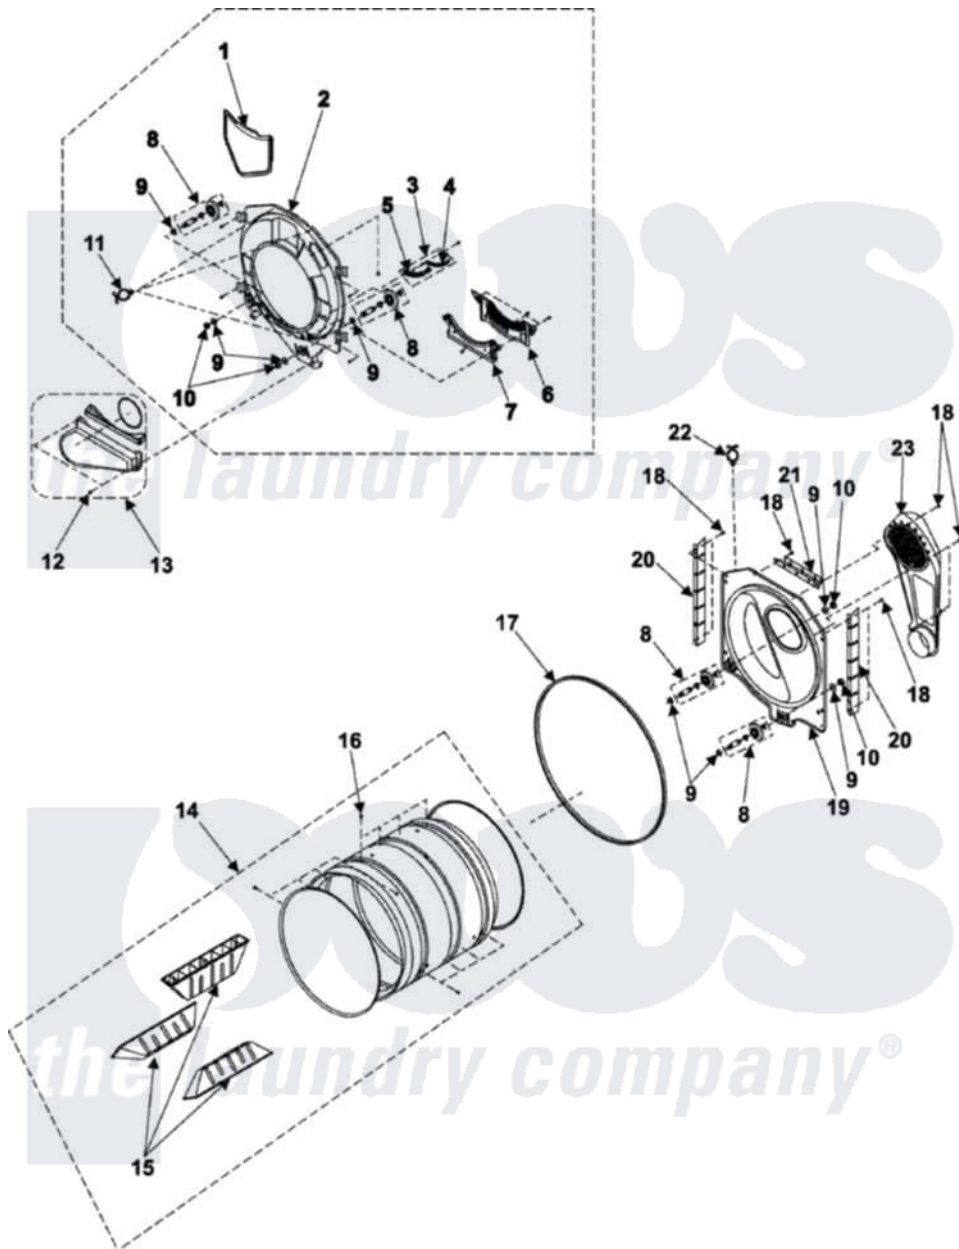

Samsung Residential Samsung DV306LEW Dryer Parts Parts Diagram 05 - DRUM  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC61-01521A	<a href="#">DC61-02613A</a>		Case Filter
2	DC97-10362B		Not Available	ASSY-S.DRUM FRONT
3	DC97-08889A	<a href="#">35001150</a>		Assembly-Guide Sensor
4	DC61-01231A	<a href="#">35001241</a>		Plate-Sensor
5	DC61-01235A		Not Available	GUIDE-SENSOR
6	DC63-00675A		Not Available	COVER-FILTER(B)
7	DC63-00538A	<a href="#">35001144</a>		Cover-Filter
8	DC97-07523A	<a href="#">W10177428</a>		Assembly, Roller-Support
9	DC60-60060A	<a href="#">35001133</a>		Washer, Support
10	DC60-50145A	<a href="#">23001661</a>		Nut M10
11	<a href="#">6046-000310</a>			Stand Off
12	6002-000231		Not Available	Screw-Tapping (5)
13	DC97-07526A	<a href="#">35001140</a>		Assembly, Lint Duct
14	DC97-10355A		Not Available	ASSY-DRUM WRAPPER
15	DC66-00436A		Not Available	DRUM-LIFTER
16	6002-001204		Not Available	SCREW-TAPPING

17	6602-001314	<a href="#">W10205415</a>		Belt
18	6002-000239		Not Available	Screw-Tapping (10)
19	DC66-00398B		Not Available	DRUM-BACK;WINGS-DRYER
20	DC61-01238A	<a href="#">35001145</a>		Bracket, Upper Rear Bulkhead
21	DC61-01237A	<a href="#">35001146</a>		Channel Bracket, Rear Bulkhead
22	DC61-40081A	<a href="#">M0585401</a>		Tie, Wire
23	DC97-07521A		Not Available	ASSY-DUCT AIR

