


Samsung DV306LEW/XAA 03 - CONTROL PANEL

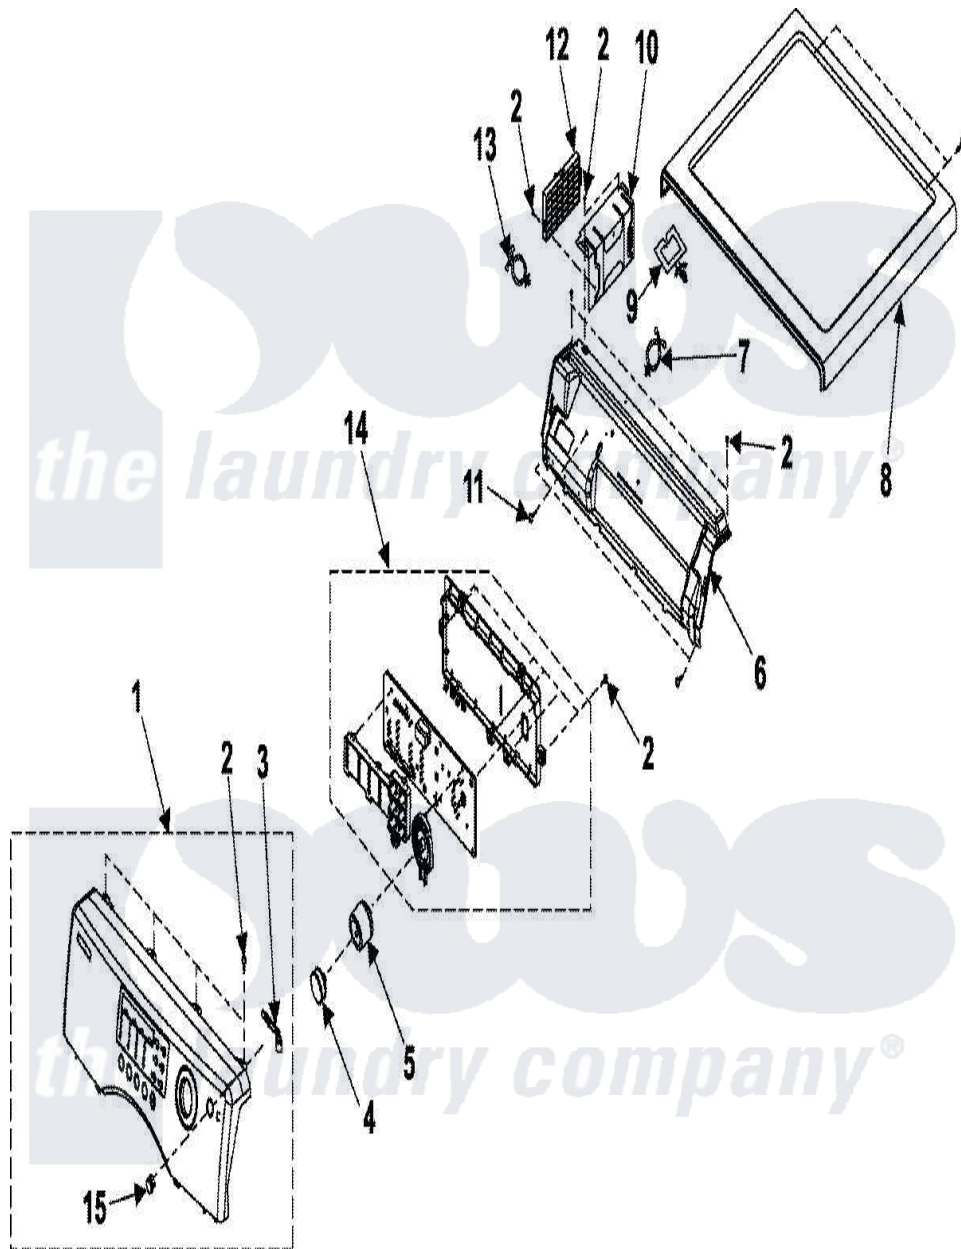

Samsung [Residential Samsung DV306LEW/XAA Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC97-10866B		Not Available	ASSY-S.PANEL CONTROL
2	6002-000231		Not Available	Screw-Tapping (5)
3	DC66-00413A	34001419		Lever, Power
4	DC64-01108A			Button-Encoder
5	DC97-10511A			Assembly-Knob Encoder
6	Y00000000		Not Available	SEE NOTE FRAME-PLATE CURRENTLY UNAVAILABLE
7	DC61-40081A	M0585401		Tie, Wire
8	DC63-00523A	35001163		Cover-Top Lu
9	DC61-60074A	35001171		Clamber-Wire Saddle
10	DC61-01229A	35001168		Bracket, Control Board
11	6006-001170			Screw-Tapping
12	MFS-FTDT-00		Not Available	ASSY PCB PARTS(M)
13	6502-000127		Not Available	CABLE CLAMP
14	YMFSF13DLS0			Assembly Pcb Parts
15	DC64-01105A		Not Available	BUTTON-PUSH(P)