


Samsung DV316BEW/XAA 05 - DRUM

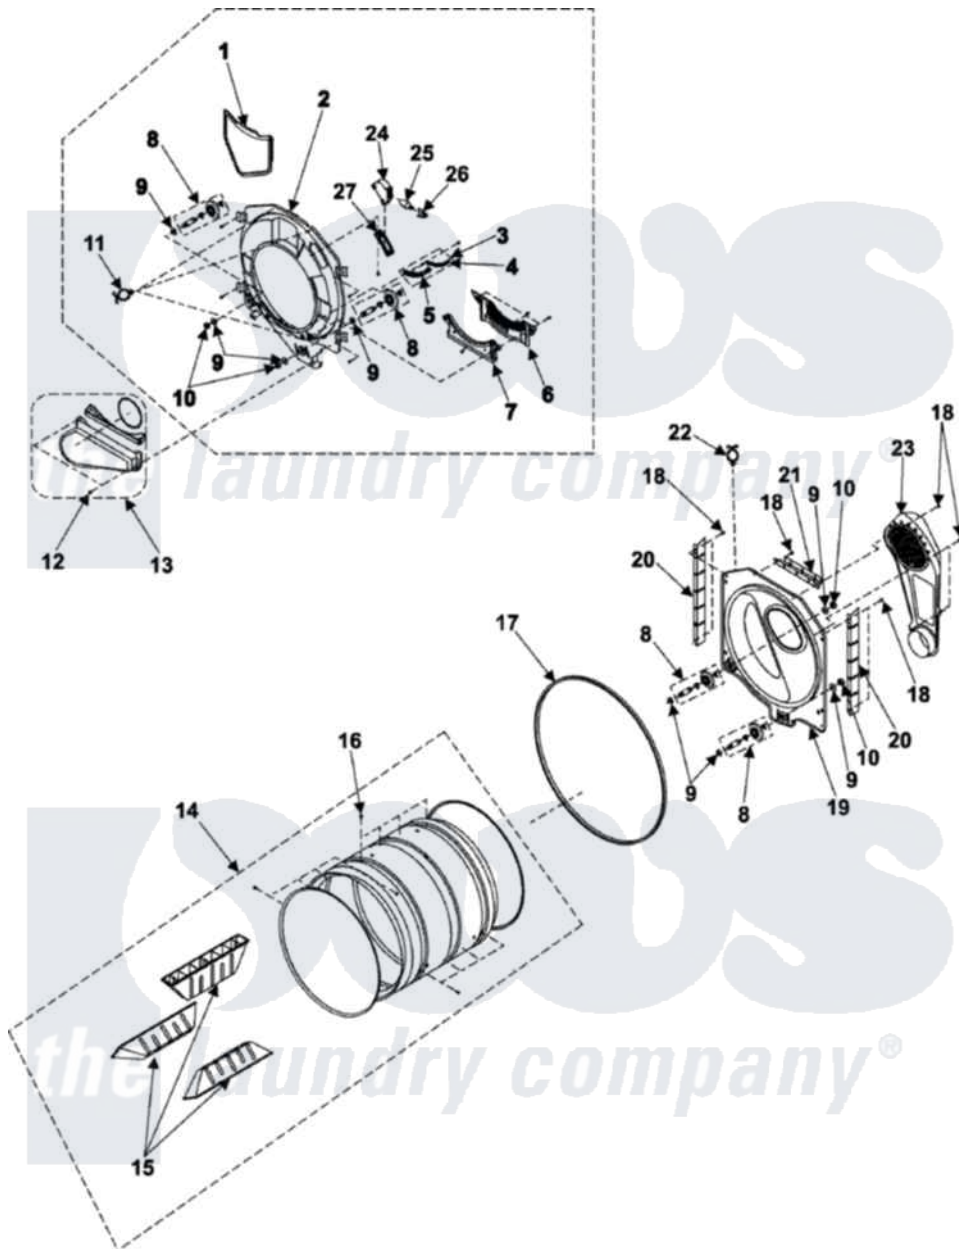

Samsung [Residential Samsung DV316BEW/XAA Dryer Parts](#) Parts Diagram 05 - DRUM
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC61-01521A	DC61-02613A		Case Filter
2	DC97-10362A		Not Available	ASSY-S.DRUM FRONT
3	DC97-08889A	35001150		Assembly-Guide Sensor
4	DC61-01231A	35001241		Plate-Sensor
5	DC61-01235A		Not Available	GUIDE-SENSOR
6	DC63-00675A		Not Available	COVER-FILTER(B)
7	DC63-00538A	35001144		Cover-Filter
8	DC97-07523A	W10177428		Assembly, Roller-Support
9	DC60-60060A	35001133		Washer, Support
10	DC60-50145A	23001661		Nut M10
11	6046-000310			Stand Off
12	6002-000231		Not Available	Screw-Tapping (5)
13	DC97-07526A	35001140		Assembly, Lint Duct
14	DC97-10355A		Not Available	ASSY-DRUM WRAPPER
15	DC66-00436A		Not Available	DRUM-LIFTER
16	6002-001204		Not Available	SCREW-TAPPING

17	6602-001314	W10205415		Belt
18	6002-000239		Not Available	Screw-Tapping (10)
19	DC66-00398B		Not Available	DRUM-BACK;WINGS-DRYER
20	DC61-01238A	35001145		Bracket, Upper Rear Bulkhead
21	DC61-01237A	35001146		Channel Bracket, Rear Bulkhead
22	DC61-40081A	M0585401		Tie, Wire
23	DC97-07521A		Not Available	ASSY-DUCT AIR
24	DC61-01220A	35001143		Guide-Lamp
25	4713-001199	22002263		Lamp
26	DC47-00021A	35001148		Socket-Lamp
27	DC63-00531A	35001139		Cover-Lamp

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]