


Samsung DV316LES/XAA 04 - DOOR

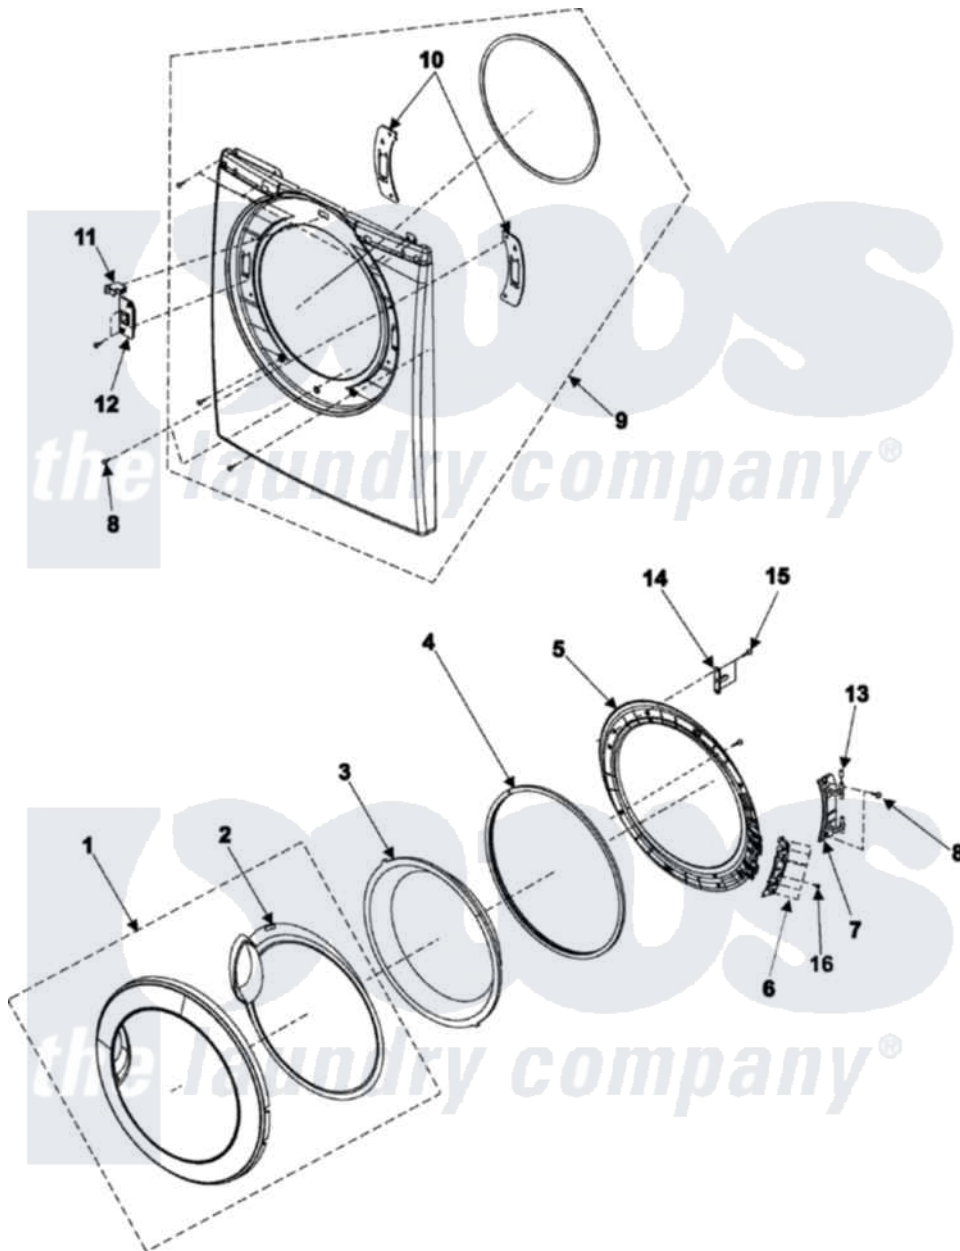

Samsung Residential Samsung DV316LES/XAA Dryer Parts Parts Diagram 04 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y00000000		Not Available	SEE NOTE COVER-DOOR CURRENTLY UNAVAILABLE
2	DC64-01120A	35001271		Door Safet
3	DC64-00993A	35001182		Door-Glass
4	DC62-00198B	35001250		Seal-Door
5	DC61-01523A	35001272		Holder Gla
6	Y00000000		Not Available	SEE NOTE SUPPORT-HINGE CURRENTLY UNAVAILABLE
7	DC61-01532A		Not Available	HINGE-DOOR
8	6001-001773	35001126		Screw-Machine
9	DC97-10353B		Not Available	ASSY-FRAME FRONT
10	DC61-01222A	35001129		Bracket-Hinge
11	DC64-00828A	35001125		Door-Switch
12	DC61-01239B		Not Available	HOLDER-LEVER
13	DC61-00891A	34001192		Bushing, Hinge Guide
NI	DC97-10338A		Not Available	ASSY-COVER DOOR
15	6002-000444		Not Available	SCREW-

15

0002-000444

Not Available

TAPPING,TH,+,2S,M4,L14

16

DC66-00395A

[35001111](#)

Lever-Door

17

6002-000213

Not Available

Screw-Tapping (5)

