


Samsung DV3C6BGW/XAA 05 - DRUM

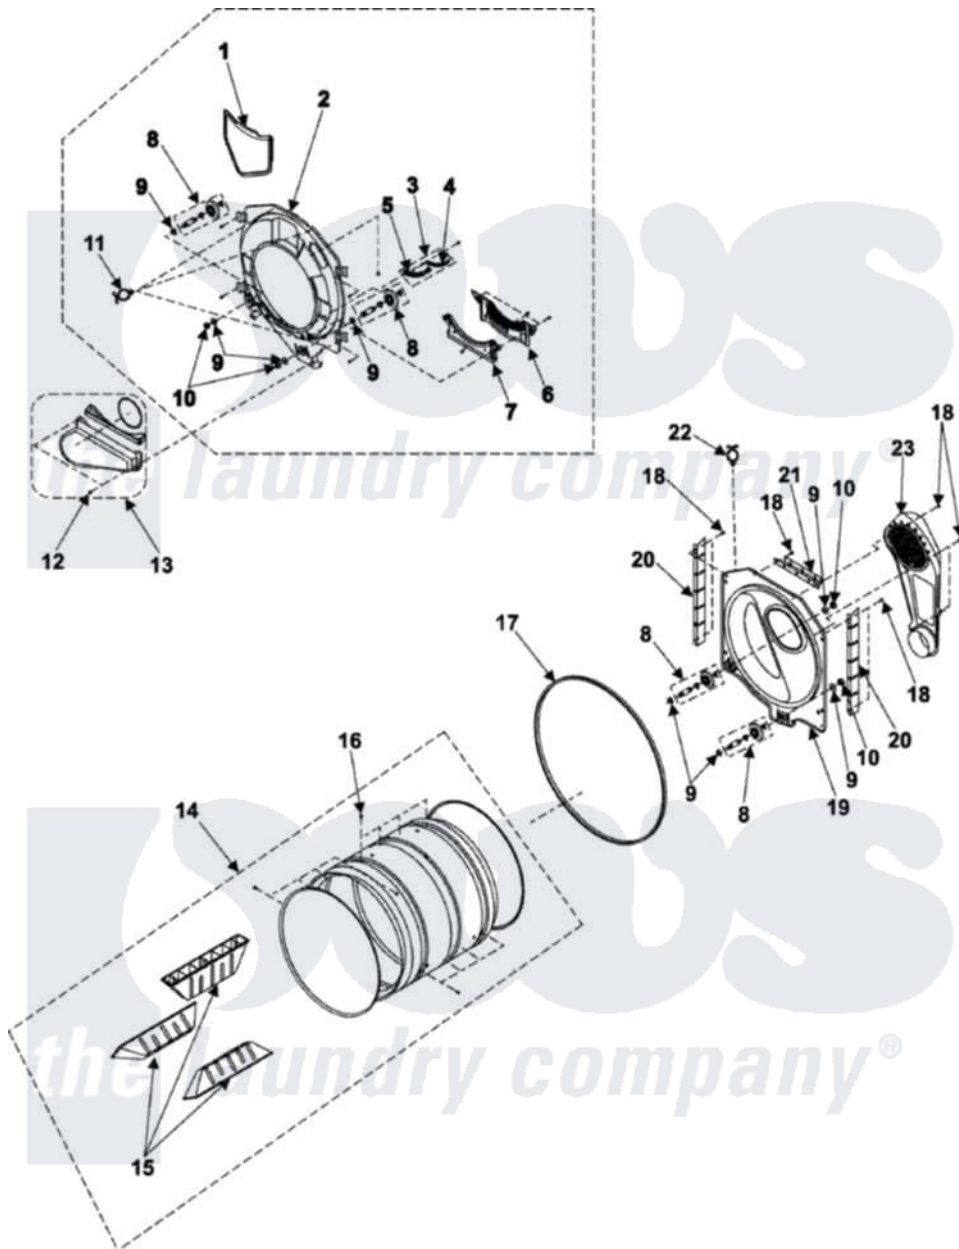

Samsung [Residential Samsung DV3C6BGW/XAA Dryer Parts](#) Parts Diagram 05 - DRUM
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC61-01521A	DC61-02613A		Case Filter
2	DC97-10362B		Not Available	ASSY-S.DRUM FRONT
3	DC97-08889A	35001150		Assembly-Guide Sensor
4	DC61-01231A	35001241		Plate-Sensor
5	DC61-01235A		Not Available	GUIDE-SENSOR
6	DC63-00675A		Not Available	COVER-FILTER(B)
7	DC63-00538A	35001144		Cover-Filter
8	DC97-07523A	W10177428		Assembly, Roller-Support
9	DC60-60060A	35001133		Washer, Support
10	DC60-50145A	23001661		Nut M10
11	6046-000310			Stand Off
12	6002-000231		Not Available	Screw-Tapping (5)
13	DC97-07526A	35001140		Assembly, Lint Duct
14	DC97-07520B	35001238		Assembly-Drum Wrapper
15	DC66-00436A		Not Available	DRUM-LIFTER
16	6002-001204		Not Available	SCREW-TAPPING

17	6602-001314	W10205415	Belt
18	6002-000239		Not Available
19	DC66-00411A	35001239	Screw-Tapping (10)
20	DC61-01238A	35001145	Drum-Back
21	DC61-01237A	35001146	Bracket, Upper Rear Bulkhead
22	DC61-40081A	M0585401	Channel Bracket, Rear Bulkhead
23	DC97-07521C	35001240	Tie, Wire
			Assembly, Air-Duct

