


# Samsung WF306BHW 02 - CONTROL PANEL/HOUSING-DRAWER

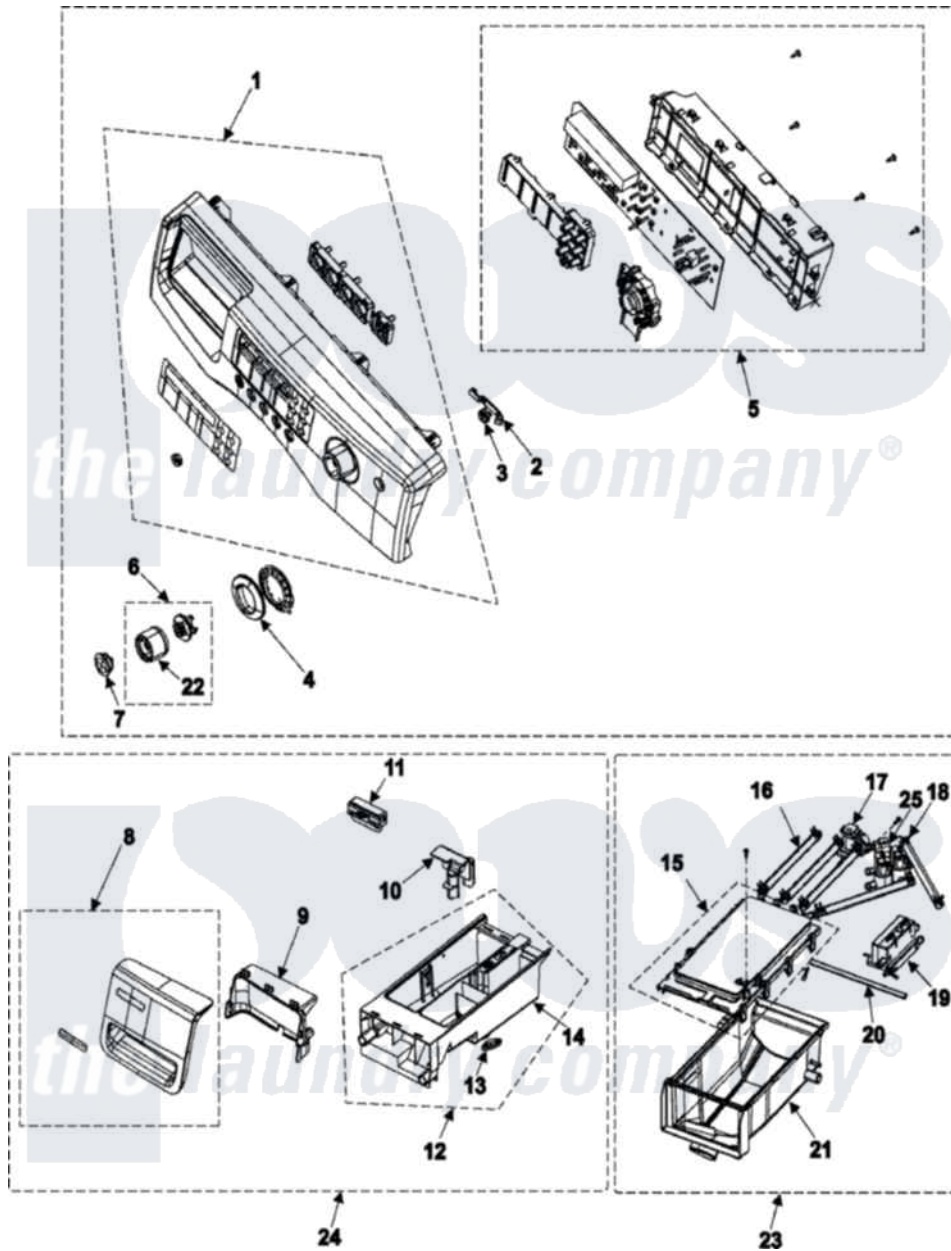

Samsung Residential Samsung WF306BHW Washer Parts Parts Diagram 02 - CONTROL PANEL/HOUSING-DRAWER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC97-10513E		Not Available	ASSY-S.PANEL CONTROL
2	DC66-00413A	<a href="#">34001419</a>		Lever, Power
3	DC64-01105A		Not Available	BUTTON-PUSH(P)
4	Y00000000		Not Available	SEE NOTE WINDOW ENCODER CURRENTLY UNAVAILABLE
5	W10126759		Not Available	ASSY PCB PARTS(M)
6	DC97-10526A		Not Available	ASSY-KNOB ENCODER;FRONTIER,BBY
7	DC64-01132A		Not Available	BUTTON-ENCODER
8	DC97-10961A		Not Available	ASSY-PANEL DRAWER ---- SNA
9	DC64-01113A		Not Available	HANDLE-DRAWER
10	DC67-00121B	<a href="#">34001401</a>		Cap, Rinse
11	DC61-01171A	<a href="#">34001239</a>		Separator
12	DC97-08774B		Not Available	ASSY-S.DRAWER
13	DC63-00516A		Not Available	COVER-DETERGENT
14	DC61-01170A		Not Available	BODY-DRAWER

15	DC97-08800A	<a href="#">34001284</a>	ASSEMBLY-S HOUSING DRAWER
16	DC67-00051B	<a href="#">34001210</a>	HOSE-DISPE
17	<a href="#">DC62-30312J</a>		VALVE-WATER
18	DC65-00008A	<a href="#">596669</a>	CLAMP, MANIFOLD
19	DC97-10417A	Not Available	ASSY-GUIDE WATER
20	DC67-00089F	Not Available	HOSE-WATER
21	DC61-01167C	Not Available	HOUSING-DRAWER(L);WF326LAW,PP
22	DC64-01084A	Not Available	KNOB-ENCODER(1);K4-PJT,ABS,-,-
23	DC97-07125D	Not Available	ASSY-HOUSING DRAWER
24	<a href="#">DC97-10335D</a>		ASSEMBLY-DRAWER
25	<a href="#">DC62-30314K</a>		VALVE-WATER

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>