


Samsung WF306BHW/XAA 03 - DOOR

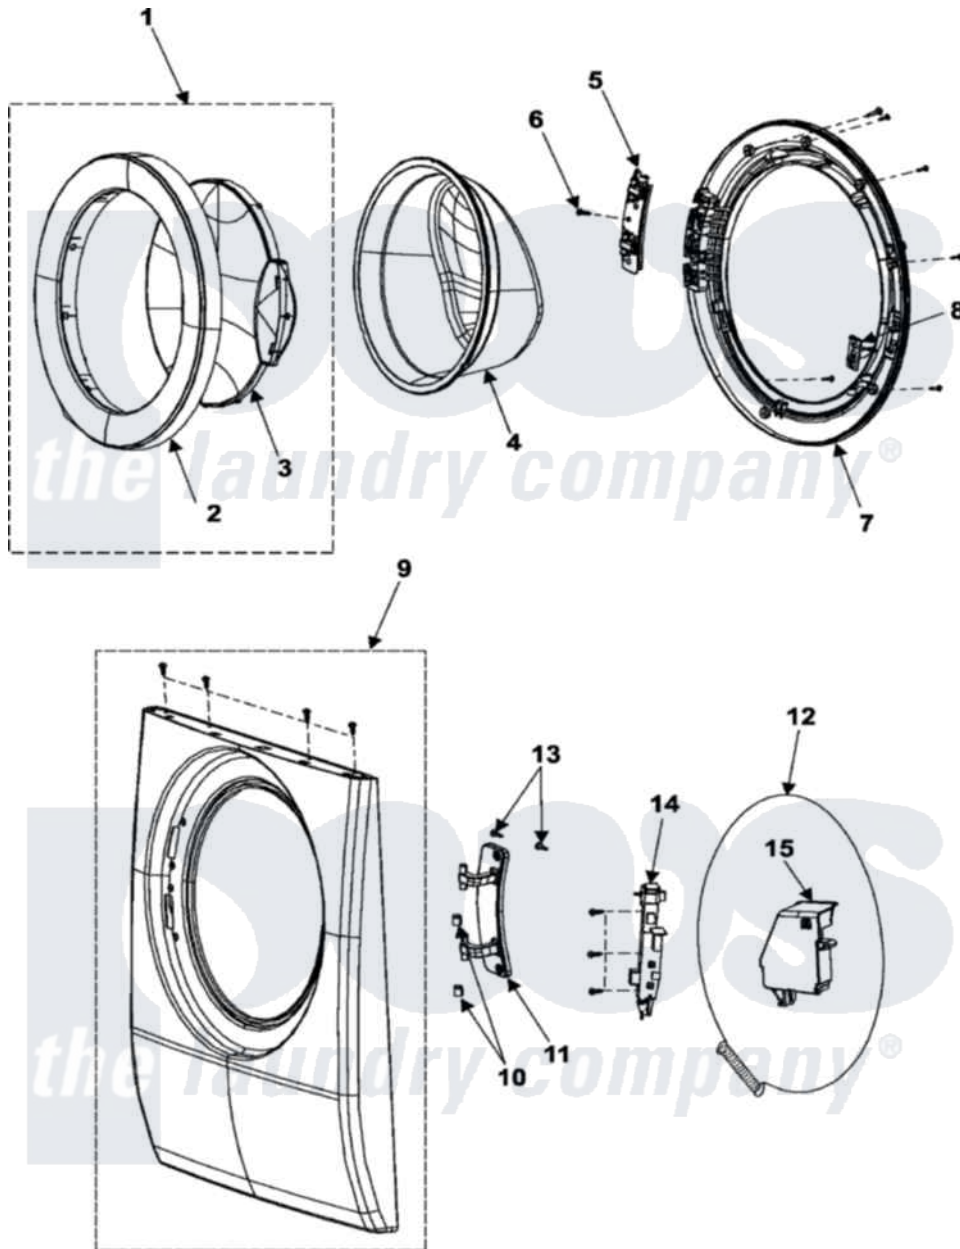

Samsung [Residential Samsung WF306BHW/XAA Washer Parts](#) Parts Diagram 03 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC97-10342A			Assembly-Cover Door
2	DC63-00674A		Not Available	COVER-DOOR
3	DC64-01120A	35001271		Door Safet
4	DC64-00504A	34001254		Glass, Door
5	DC61-01222A	35001129		Bracket-Hinge
6	6001-001668		Not Available	SCREW-MACHINE; TH, +, M5, L16, PASS
7	DC61-01520A		Not Available	HOLDER-GLASS
8	DC66-00326A	34001260		Hook, Door
9	DC97-10340A		Not Available	ASSY-FRAME FRONT
10	DC61-00891A	34001192		Bushing, Hinge Guide
11	DC61-01532A		Not Available	HINGE-DOOR
12	DC97-04973A	34001266		Clamp, Bellow To Front Panel
13	6001-001773	35001126		Screw-Machine
14	DC64-00519B	8182634		Lock, Door
15	DC63-00693A		Not Available	COVER-DOOR SWITCH; FRONTIER