


Samsung WF316BAC/XAA 01 - CABINET

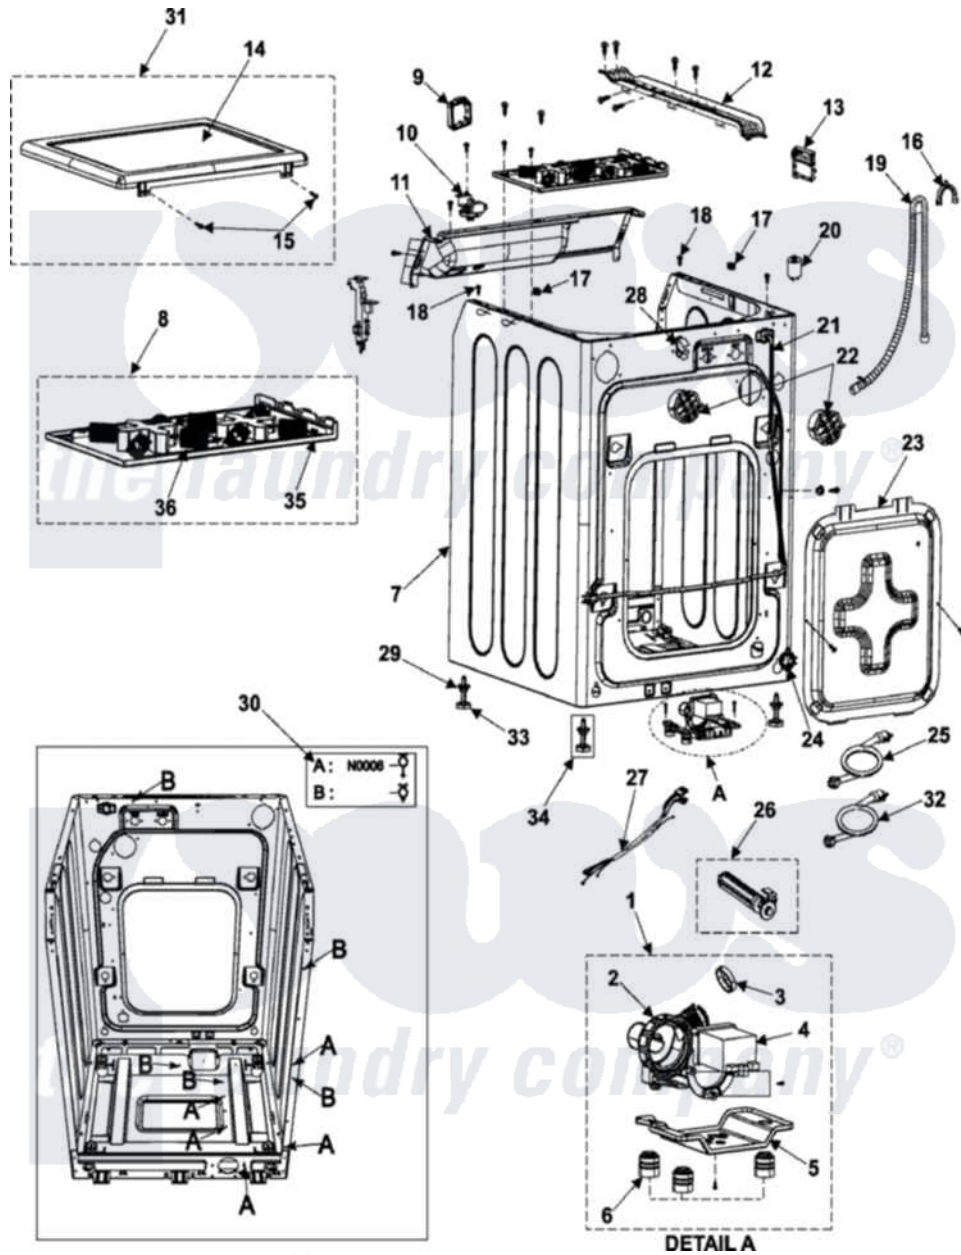

Samsung Residential Samsung WF316BAC/XAA Washer Parts Parts Diagram 01 - CABINET

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC96-00774A	34001320		Assembly-Pump Drain
2	Y00000000		Not Available	SEE NOTE CASE-PUMP CURRENTLY UNAVAILABLE
3	DC62-00202A	34001322		Valve-Check
4	DC31-00054A	DC97-15974C		Drain Pump
5	DC61-01424A		Not Available	BRACKET-PUMP
6	DC63-00619A	34001323		Cushion-Pump
7	DC97-06995E		Not Available	ASSY-FRAME
8	DC97-08635D		Not Available	ASSY-ABSORBER
9	MFS-MEMS-00		Not Available	ASSY PCB PARTS(S)
10	DC97-03716C	34001324		Switch, Pressure Sensor
11	DC61-01166A	34001318		Frame-Plate- Cabinet
12	DC61-01200A	34001326		Channel, Harness
13	W10126750			Assembly Pcb Parts
14	DC63-00523F		Not Available	COVER-TOP
15	6009-001476	34001328		Screw
				SEE NOTE HOSE HANGER

16	Y00000000		Not Available	SEE NOTE HOSE-HANGER CURRENTLY UNAVAILABLE
17	DC61-01256A	34001097		Guide, Spring-Washer Only
18	6009-001458		Not Available	SCREW-SPECIAL;CH,+,- ,M4,L10,
19	DC97-10794A	34001095		Hose, Drain
20	DC29-00013A		Not Available	FILTER-EMI
21	DC96-00757A		Not Available	ASSY POWER CORD
22	DC97-08740C	34001455		Assembly-Cap
23	DC63-00522A		Not Available	COVER-BACK
24	DC61-00274A	34001500		Guide Hose
25	Y00000000		Not Available	SEE NOTE ASSY-HOSE WATER,HOT CURRENTLY UNAVAILABLE
26	DC97-07448A	34001337		Bolt, Shipping
27	DC96-01043A		Not Available	ASSY-M.WIRE HARNESS
28	DC61-00133A	34001331		Clip, Outer Hose Holder
29	6021-001203		Not Available	NUT-HEXAGON FLANGE
30	DC61-40081A	M0585401		Tie, Wire
31	DC97-08634E		Not Available	ASSY-COVER TOP
32	Y00000000		Not Available	SEE NOTE ASSY-HOSE WATER-COLD CURRENTLY UNAVAILABLE
33	DC61-01432A	34001341		Foot, Leveling
34	DC97-08838A		Not Available	ASSY-LEG
35	DC61-01403A		Not Available	BRACKET-ABSORBER
36	DC61-01404A		Not Available	SPRING-ABSORBER
NI	DC61-00133A	34001331		Clip, Outer Hose Holder

the laundry company[®]

the laundry company[®]