


# Samsung WF316BAC/XAA 03 - DOOR

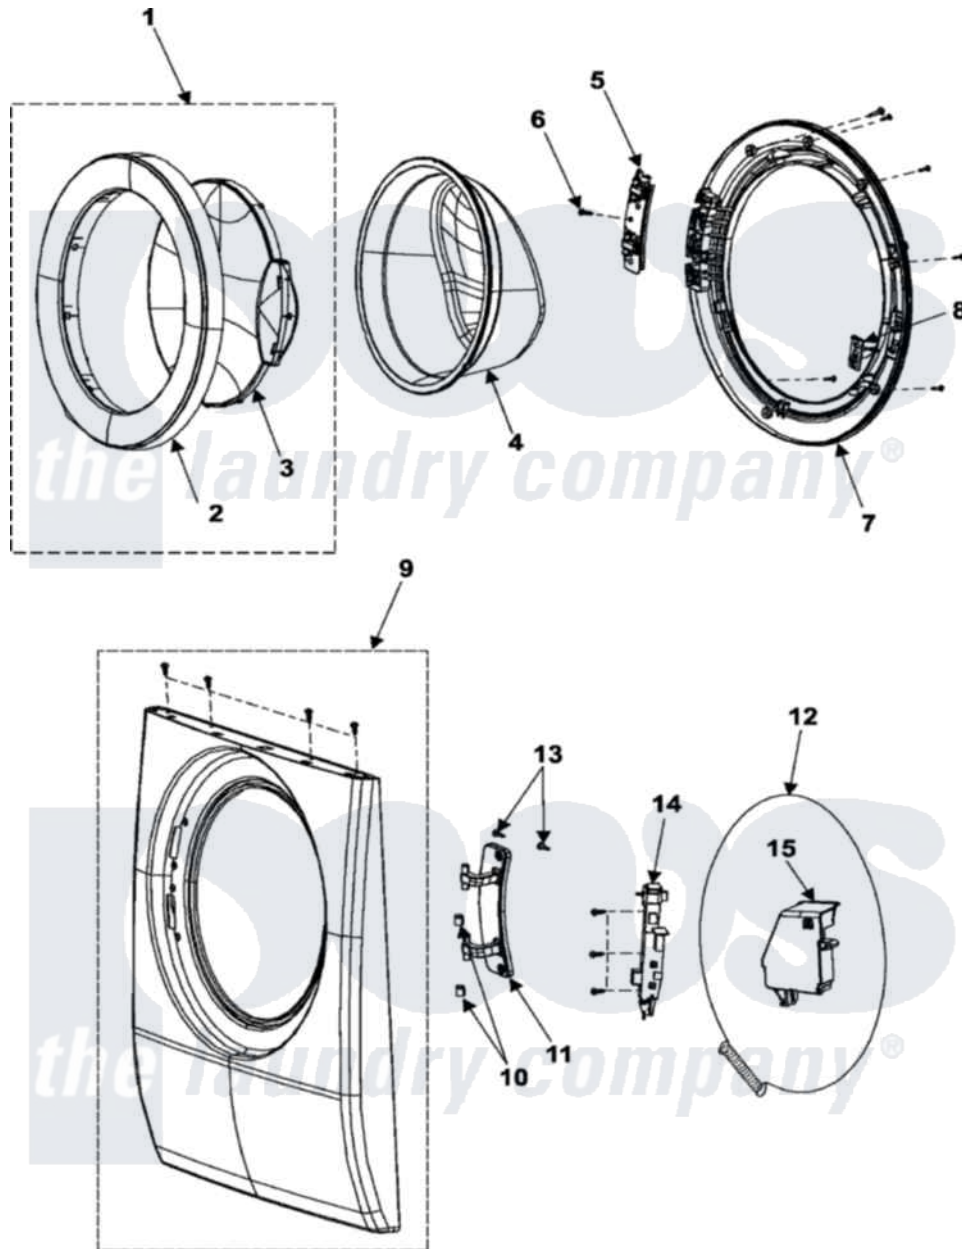

Samsung [Residential Samsung WF316BAC/XAA Washer Parts](#) Parts Diagram 03 - DOOR  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC97-10342B		Not Available	ASSY-COVER DOOR
2	DC63-00674B		Not Available	COVER-DOOR
3	DC64-01120A	<a href="#">35001271</a>		Door Safet
4	DC64-00504A	<a href="#">34001254</a>		Glass, Door
5	DC61-01222A	<a href="#">35001129</a>		Bracket-Hinge
6	6001-001668		Not Available	SCREW-MACHINE; TH, +, M5, L16, PASS
7	DC61-01520A		Not Available	HOLDER-GLASS
8	DC66-00326A	<a href="#">34001260</a>		Hook, Door
9	DC97-10340C		Not Available	ASSY-FRAME FRONT
10	DC61-00891A	<a href="#">34001192</a>		Bushing, Hinge Guide
11	DC61-01532A		Not Available	HINGE-DOOR
12	DC97-04973A	<a href="#">34001266</a>		Clamp, Bellow To Front Panel
13	6001-001773	<a href="#">35001126</a>		Screw-Machine
14	DC64-00519B	<a href="#">8182634</a>		Lock, Door
15	DC63-00693A		Not Available	COVER-DOOR SWITCH;FRONTIER