


Samsung WF316LAS 06 - TUB FRONT

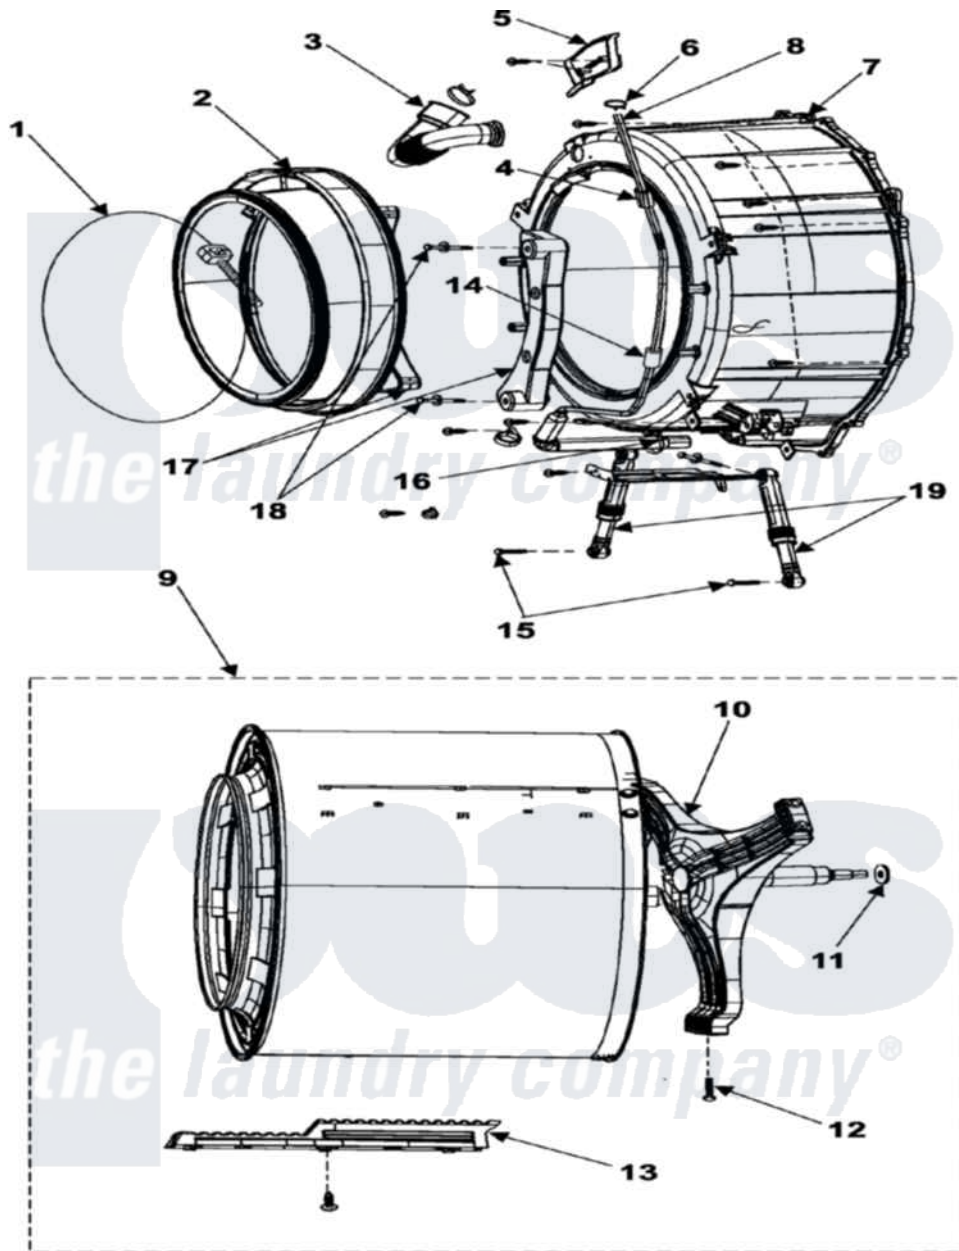

Samsung Residential Samsung WF316LAS Washer Parts Parts Diagram 06 - TUB FRONT
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC97-04981D	34001306		Clamp, Bellow To Tub
2	DC64-00802A	34001302		Door-Diaphragm
3	DC67-00122A	34001304		Hose-Drawer Tub
4	DC63-10003E	34001301		Sleeve, Pressure Switch Hose
5	DC61-01172A	34001300		Guide, Water
6	DC61-70029C	34001169		Clamp, Hose
7	DC97-08650A	34001309		Assembly-Semi Tub Front
8	DC67-00124A	34001308		Hose-Ressure
9	DC97-10337A		Not Available	ASSY-DRUM
10	DC97-06986A	34001288		Asst-Flange Shaft
11	6031-001523		Not Available	WASHER-WAVE;SK5,- ,ID35,OD45,
12	6011-001491	34001277		Screw
13	DC66-00434A		Not Available	DRUM-LIFTER
14	DC63-10002D		Not Available	SPONGE-HARNES
15	Y00000000		Not Available	SEE NOTE BOLT-HEX CURRENTLY UNAVAILABLE

16	DC65-00009A	285655	Clamp, Hose
17	DC67-00139A	34001276	Counterweight, Front
18	DC97-02412F	34001158	Bolt Assembly
19	DC66-00343C	34001303	Shock Absorber
NI	DC47-00006G	12002809	Heater Kit

