


Samsung WF316LAS/XAA 03 - DOOR

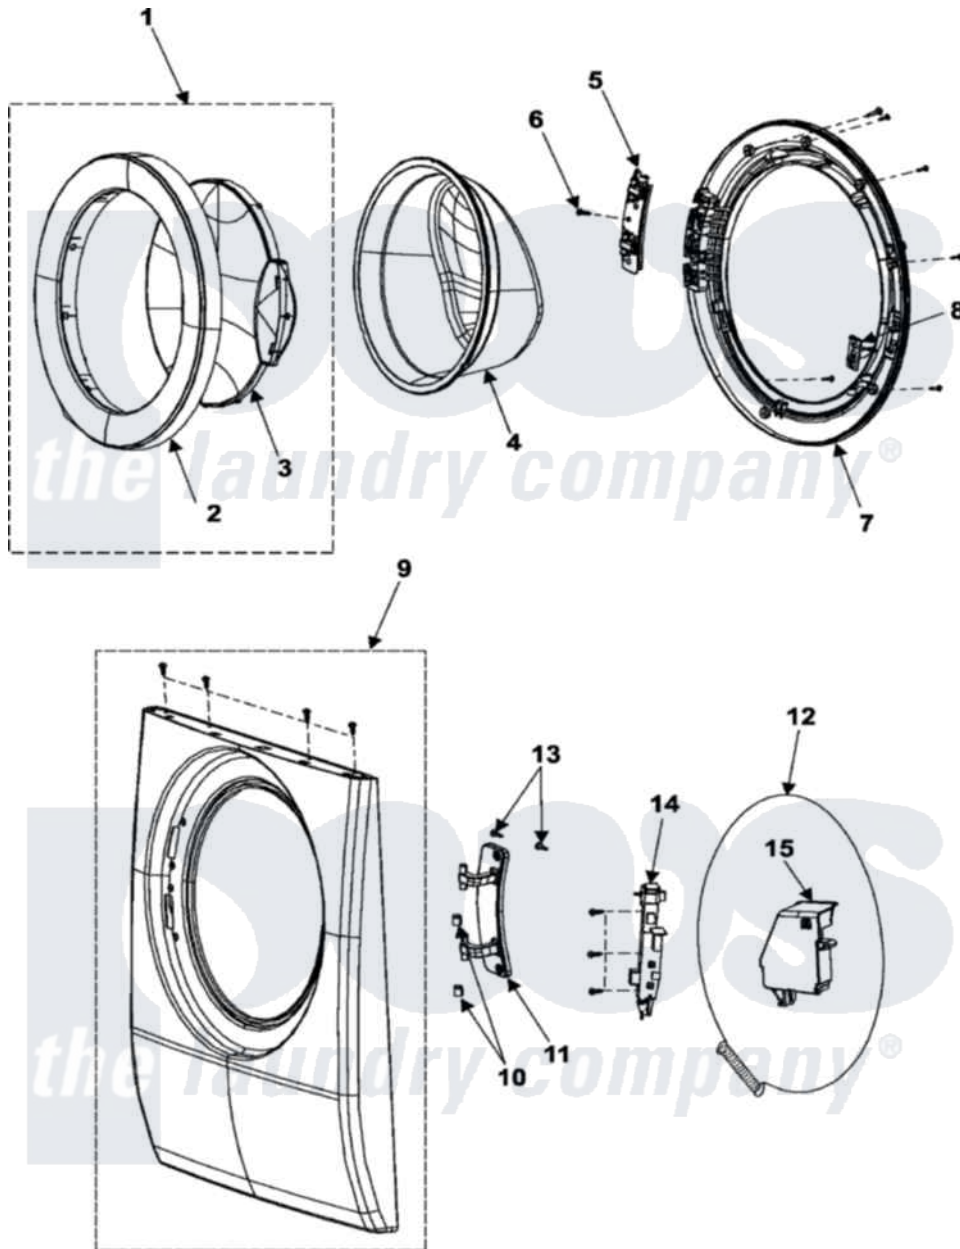

Samsung Residential Samsung WF316LAS/XAA Washer Parts Parts Diagram 03 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	DC97-10338A		Not Available	ASSY-COVER DOOR
2	Y00000000		Not Available	SEE NOTE COVER-DOOR CURRENTLY AVAILABLE
3	DC64-01120A	35001271		Door Safet
4	DC64-00504A	34001254		Glass, Door
5	DC61-01222A	35001129		Bracket-Hinge
6	6001-001668		Not Available	SCREW-MACHINE;TH,+,M5,L16,PASS
7	DC61-01520A		Not Available	HOLDER-GLASS
8	DC66-00326A	34001260		Hook, Door
9	DC97-10340B		Not Available	ASSY-FRAME FRONT
10	DC61-00891A	34001192		Bushing, Hinge Guide
11	DC61-01532A		Not Available	HINGE-DOOR
12	DC97-04973A	34001266		Clamp, Bellow To Front Panel
13	6001-001773	35001126		Screw-Machine
14	DC64-00519B	8182634		Lock, Door
15	DC63-00893A		Not Available	COVER-DOOR

