


Whirlpool 1CWGD5300SQ 02 - CABINET PARTS

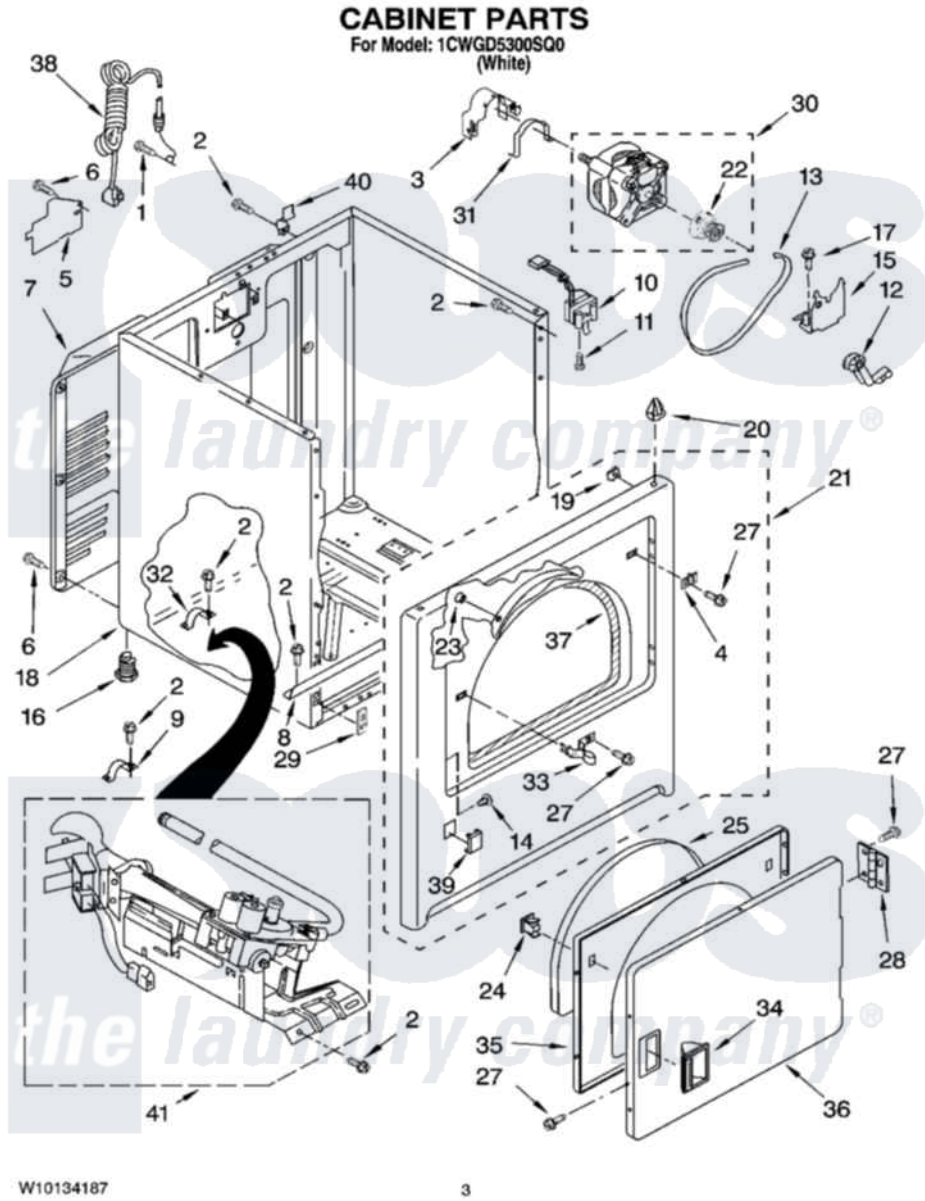

Whirlpool [Residential Whirlpool 1CWGD5300SQ Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	3404162			Clamp, Motor
4	3403630			Plug, Strike Hole
5	3396795			Cover, Terminal Block
6	693995			Screw, Hex Head
7	3396805	280043		Panel-Rear
8	8541400			Bracket, Cabinet
9	3980175			Clamp, Elbow
10	3406109	3406107		Door Switch Assembly
11	697773	3395530		Screw
12	691366			Idler And Pulley Assembly
13	W10131364	341241		Belt
14	3404413			Plug, Hinge Hole
15	348780			Base, Motor
16	3392100	49621		Feet-Leveling

"	279810		Foot-Optional
17	3400500		Bolt, 3405245 5/16-18 X 3/4
18	8530603	8533643	Cabinet
19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	3403447	279854	Panel
22	8066184		Pulley, Motor
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	3405246		Seal, Door Push-To-Start
27	342055	488627	Screw
28	3405514	W10362431	Hinge And Pin Assembly
29	3394083		Clip, Front Panel
30	8066206	279827	Motor-Drive
31	660658		Clamp, Motor Mounting 343481 685441
32	341029		Clamp, Pipe Door Spring
33	3403431		Strike, Panel
34	8566059		Handle, Door
35	3402341		Door, Inner
36	3402335		Door, Front
37	3406129		Seal And Bearing Assembly
38	344020	3401402	Cord, Power
39	3394975		Plug, Front Panel
40	8066217		Hinge, Top
41	8318272	W10465748	Burner-Gas

the laundry company[®]

the laundry company[®]