


Whirlpool 1CWGD5790VQ1 01 - TOP AND CONSOLE PARTS

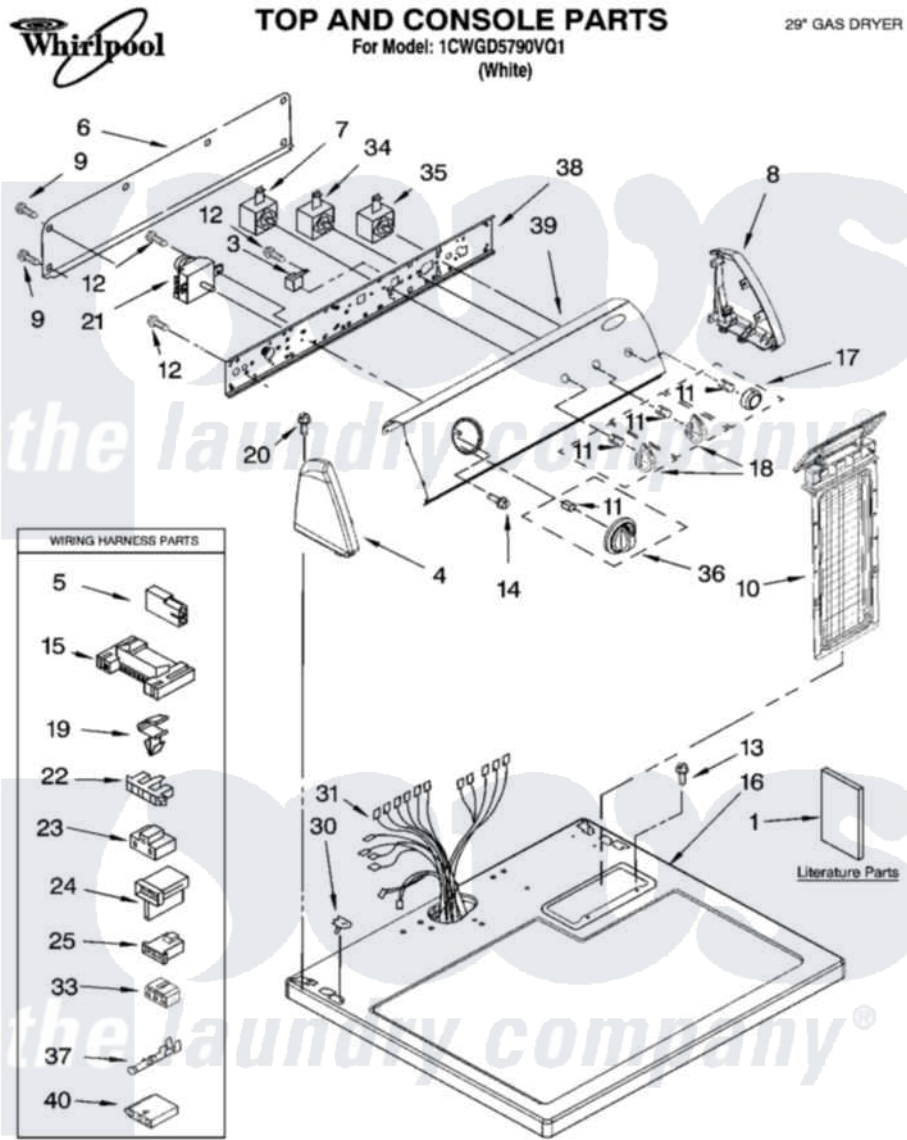

02-09 Litho in U.S.A.(MP) (eeb)

1

Part No. W10257089 Rev. A

Whirlpool [Residential Whirlpool 1CWGD5790VQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10131643		Not Available	INSTALLATION, INSTRUCTIONS
"	W10131642		Not Available	Use & Care Guide
"	W10185985		Not Available	Wiring Diagram
"	W10042960		Not Available	Sheet, Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3399639			Switch, Rotary Temperature
8	8271359	279962		Endcap
9	693995			Screw, Hex Head
10	8557857			Screen, Lint
11	8536939			Clip, Knob

12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
17	8566073		Knob, Push-To-Start
18	8565944		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	W10185981		Timer Assembly
22	3397269		Connector, Timer
23	3401144		Connector
24	3403499		Connector, 2-Position
25	3403498		Connector, 3-Position
30	357213		Nut, Push-In
31	W10186121		Harness, Wiring
33	3347243		Block, Disconnect
34	3405156		Switch, Rotary
35	3398095		Switch, Push-To-Start
36	8566061		Timer Knob Assembly
37	94614		Terminal
38	8544895		Bracket, Control
39	W10206007		Panel, Control
40	3936144		Do-It-Yourself Repair Manuals

the laundry company[®]

the laundry company[®]