


Whirlpool 1CWTW57ESVW1 03 - AGITATOR, BASKET AND TUB PARTS

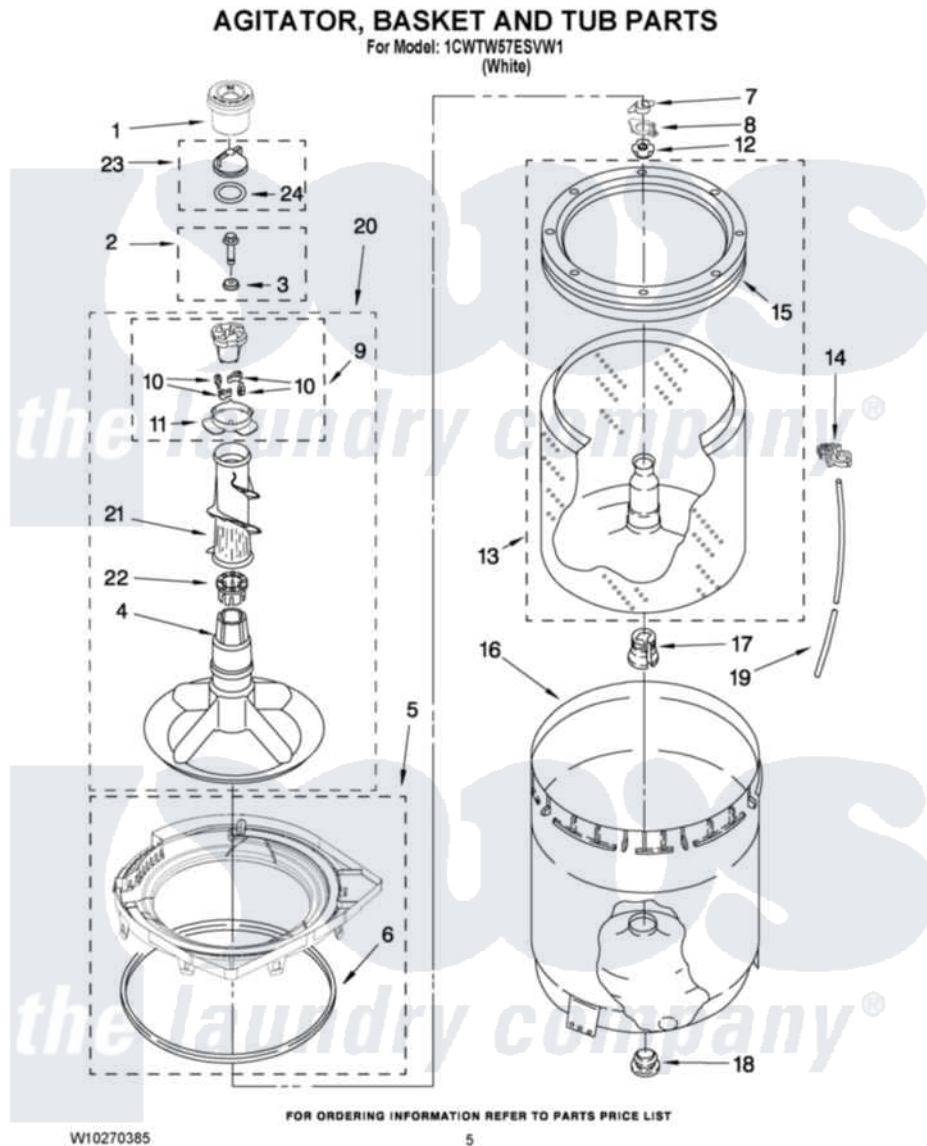

Whirlpool [Residential Whirlpool 1CWTW57ESVW1 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	358237			Screw And Washer
3	3949550			Washer
4	3951632			Agitator
5	W10167984			Tub Ring And Gasket
6	3359585	3976308		Gasket, Tub Ring
7	3354845			Clip, Agitator
8	8543666			Washer, Agitator
9	3951682	285809		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3952374			Bearing, Driven Cam
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
14	2219077			Clip, Pressure Switch Hose
15	387240			Ring, Balance
16	63849			Strain Relief, Power Cord

17	389140		Tub Block, Basket Drive
18	383727		Gasket, Centerpodt
19	W10240485	353244	Hose, Pressure Switch
20	3951744		Agitator Assembly
21	3363003		Mover, Clothes
22	3951608		Spacer, Thrust
23	3354733	W10074580	Cap, Barrier
24	W10072840		Fabric Softener

